 
 
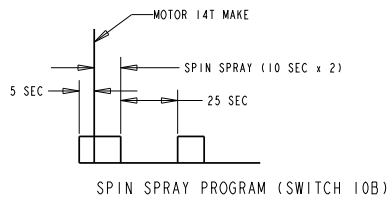 


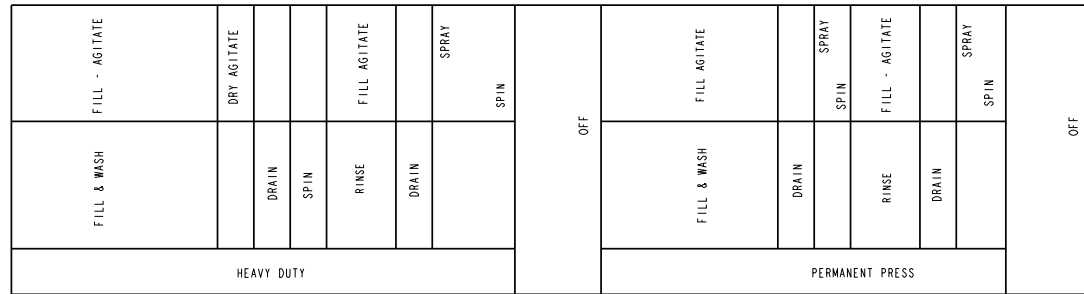


 
 

 
 
 

 
 
 


KEY
 CONTACT OPEN ON CHART
 CONTACT CLOSED ON CHART
 DIAL-IN LOCATION




LEGEND	LEGENDE	LEYENDA	LEGEND	LEGENDE	LEYENDA
1/2 TUB DRAIN	1/2 COVETTE VID	DREN DE LA TINA DEL 1/2	SWITCH FUNCTION	COMMUTEZ LA FONCTION	CAMBIE LA FUNCTION
SPRAY	GICLAGE	AEROSOL	CAM	CAME	LEVA
BYPASS	DERIVATION	PUENTE	OFF	ARRET	DE
FILL	REPLISSAGE	LLENAN	COOL DOWN	REFROIDISSEZ	REFRESQUESE ABAJO
AGITATE	AGITATION	AGITAR	SPIN LOW	ESSORAGE BASSE	EXPRIMIDO BAJA
SPIN	DEMARRAGE	INICIAR	RINSE LOW	RINCAGE BASSE	ACLARACION BAJA
HI MOTOR	HAUTE RAPIDE	ALTA MOTOR	WASH LOW	LAVAGE BASSE	LAVADO BAJA
LOW MOTOR	BASSE MOTEUR	ALTA MOTOR	WASH HI	LAVAGE HAUTE	COLADA ALTA
WARM/COLD	CHAUDE/FROIDE	CALIENTESE/DE AGUA FRIA	SPIN HI	ESSORAGE HAUTE	EXPRIMIDO ALTA
WASH	LAVAGE	LAVADO	CASUAL	OCCASIONEL	OCCASIONAL
RINSE	RINCAGE	ENJUAGUE	QUICK	VITE	APRISA
DRAIN	VIDENT	DRENAN	NORMAL	NORMALE	NORMAL
DRY/AGITATE	SECHER/AGITATION	SECO/AGITAR	TERMINAL IDENTIFIER	MARQUE TERMINALE	IDENTIFICADOR TERMINAL
PRE WASH	PRE LAVADO	PRE LAVADO	STEP	ETAPE	PASO
SOAK	TREMPAGE	REMOJJO	SECONDS	SECONDES	SEGUNDOS
DELICATE	DELICAT	DELICADO	MACHINE FUNCTION	FUNTION DE MACHINE	FUNCION DE LA MAQUINA
PERMANENT PRESS	SYNTHETIQUES	PERMANENTE PRENSA	EXTRA RINSE	RINCAGE SUPPLEMENTAIRE	ENJUAGUE ADICIONAL
REGULAR	REGULIER	REGULAR			
HEAVY	ROBUSTE	INTENSO			

LEGEND / LEGENDE / LEYENDA

-  TIMER SWITCH
INT. DU PROGRAMMATEUR
INTERRUPTOR DEL TEMPORIZADOR
-  INT. COMP CONNECTION
CONNEXION INTERNE DE COMPOSANT
CONEXION INTERNO DEL COMPONENTE
-  HARNESS WIRING
FAISCEAU DE FILS
CABLEADO DEL HARNESS
-  HARNESS CONNECTION
CONNEXION DE FILS
CONEXION DEL HARNESS
-  TERMINAL CONNECTION
CONEXION DE LA BORNE
TERMINAL CONEXION
- WASH RINSE / RINCAGE DE LAVAGE
/ ACLARACION DE LA COLADA
- DRIVE MOTOR / MOTEUR / IMPULSOR MOTOR
-  L LOW / LENT / BAJO
M MEDIUM / SUPPORT / MEDIA
H HIGH / HAUT / ALTO
S START / DEMARRENT / EMPIEZAN
-  HOT VALVE
SQUAPE D'EAU CHAUDE
CALIENTE VALVULA
-  COLD VALVE
SQUAPE D'EAU FROIDE
FRIA VALVULA
-  WATER LEVEL SWITCH
INTERRUPTEUR NIVEAU D'EAU
INTERRUPTOR DEL NIVEL DEL AGUA
-  FULL / PLEIN / POR COMPLETO
-  EMPTY / VIDE / VACIO
-  LID SWITCH
INTERRUPTEUR DU COUVERCLE
INTERRUPTOR DE LA TAPA
-  TIMER MOTOR
MOTEUR DE LA MINUTERIE
MOTOR DEL TEMPORIZADOR
-  CENTRIFUGAL SWITCH
CONTACTEUR CENTRIFUGE
CENTRIFUGO INTERRUPTOR
-  CABINET GROUND
TERRE DU CHASSI
CABIN MOLIDA
-  CAPACITOR / CONDENSATEUR /
CONDENSADOR
- TSC** TEMPERATURE SWITCH CHART
DIAGRAMME DE COMMUTEUR
DE LA TEMPERATURE
CARTA DE INTERRUPTOR
DE LA TEMPERATURA

TIMER KNOB PUSH OFF
ALL TIMER SWITCHES OPEN
TIRE POUR MARCHE POUSSE POUR ARRETE
BOUTON-FOUSOIR DU PROGRAMMATEUR
LOS INTERRUPTORES SE ABREN
CUANDO LA PERILLA EMPUJO DE

PART NO. NUMERO DE PIECE NUMERO DE PIEZA	REV REVISION REVISION
W10362944	A

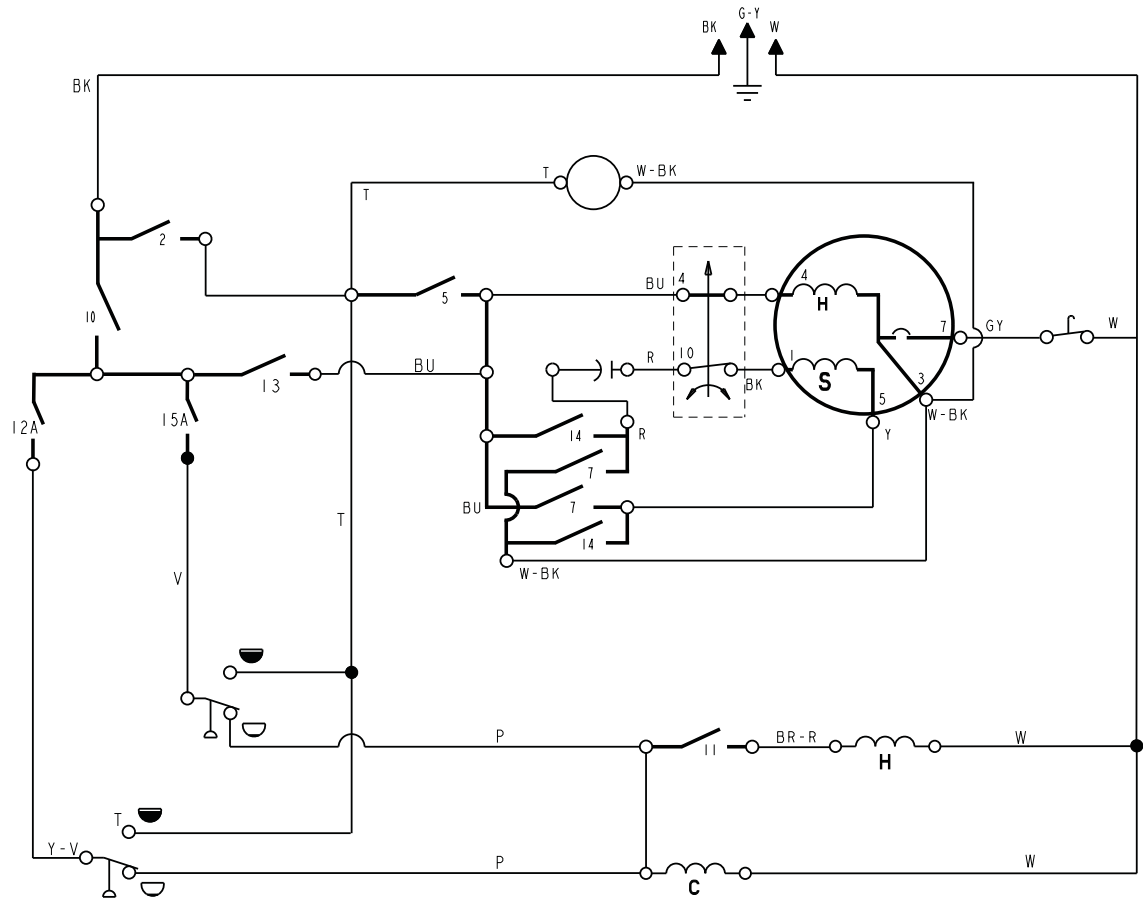 

WARNING - DISCONNECT FROM ELECTRICAL SUPPLY BEFORE SERVICING UNIT.