


## Dexter DCTD30 Door Switch Group

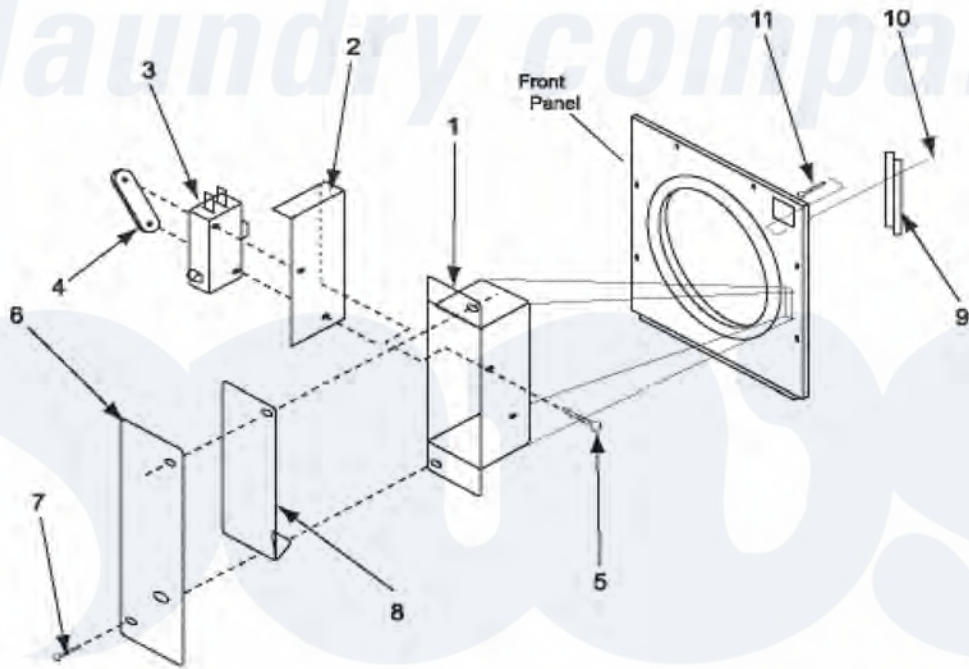

Dexter Commercial Dexter DCTD30 Dryer Parts Parts Diagram Door Switch Group  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">9041-076-001</a>			Box, Door Switch (Lower)
2	<a href="#">9550-159-001</a>			Shield, Door Switch
3	<a href="#">9539-461-001</a>			Switch, Door
4	<a href="#">8640-401-001</a>			Nut, Special Twin
5	<a href="#">9545-020-001</a>			Screw, Switch Mtg
6	<a href="#">9074-255-001</a>			Cover, Switch Box
7	<a href="#">9545-008-020</a>			Screw
8	<a href="#">9008-004-001</a>			Actuator, Switch- Lower
9	<a href="#">6068-041-001</a>			Conduit, Lower Panel
10	<a href="#">9545-012-003</a>			Screw
*	<a href="#">8641-436-000</a>			Washer, Fiber

11 [8640-413-004](#)

Nut, Elastic Stop

\* 8220-127-001

Not Available

Wire Assembly, Black 48"

" 8220-127-002

Not Available

Wire Assembly, Blue 65"

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>