


## Dexter DL2X30 Burner Housing Group

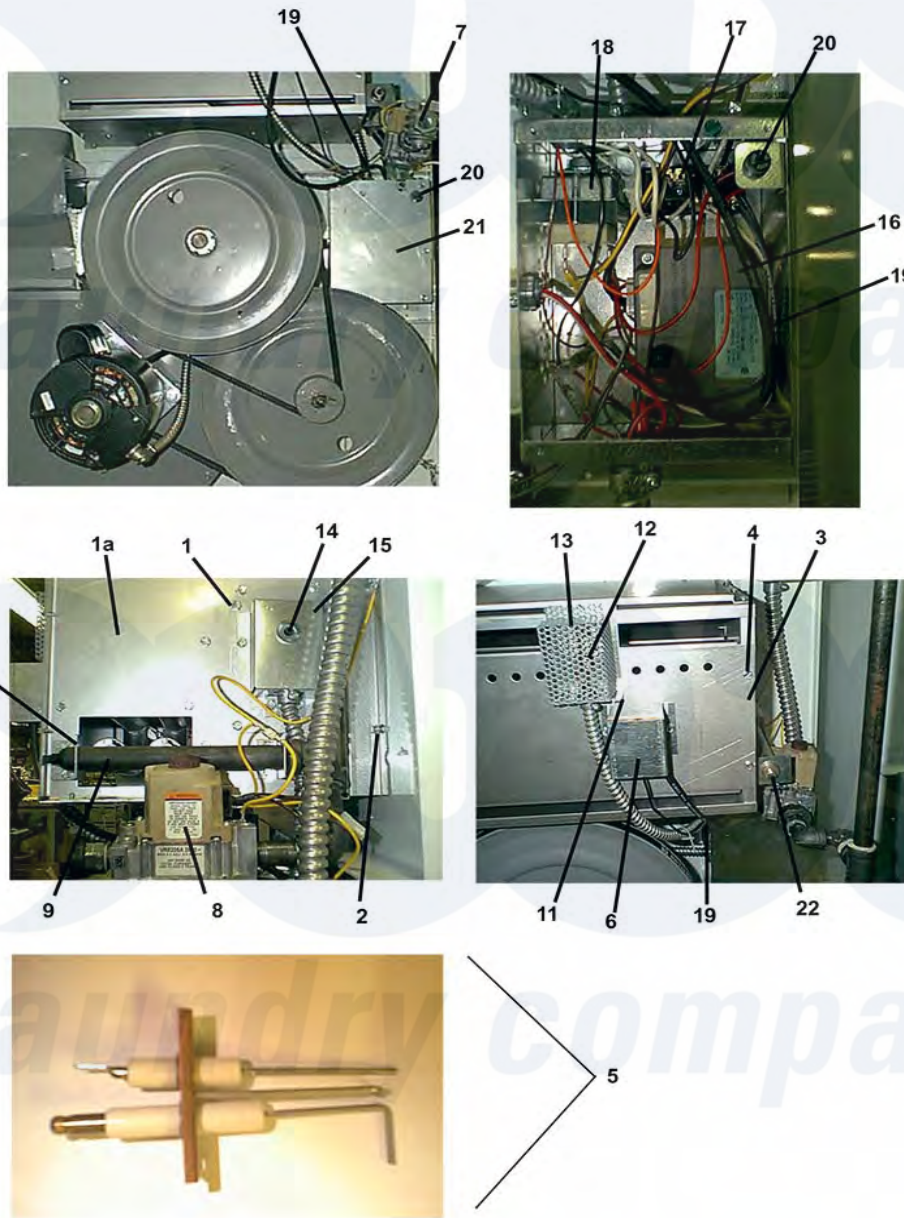

39

[Dexter Commercial Dexter DL2X30 Dryer Parts](#) Parts Diagram Burner Housing Group  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
*	9803-185-001	<a href="#">9803-185-001P</a>		Housing Assy.
1a	<a href="#">9454-641-001</a>			Left Buner Plate ( burner side ) with cleanout
"	9452-696-001		Not Available	Service Cover Plate for overtemp reset
*	<a href="#">9545-008-006</a>			Screws
2	<a href="#">9545-008-001</a>			Screw 10-32 x 1/4
*	<a href="#">9003-220-001</a>			Angle, Burner Support
"	<a href="#">9545-008-006</a>			Screws
"	<a href="#">9048-020-001</a>			Burner, Main
"	<a href="#">9545-008-006</a>			Screws
3	<a href="#">9454-645-001</a>			Panel, Back Burner Housing

4	<a href="#">9545-008-001</a>		Screw 10-32 x 1/4
5	<a href="#">9875-002-002</a>	<a href="#">9875-002-003</a>	Electrode Assy, Ignition
*	<a href="#">9545-045-001</a>		Screw, Electrode Mtg
6	<a href="#">9550-172-001</a>		Shield, Ignitor Terminals (Cover)
7	<a href="#">9379-186-001</a>		Valve, Gas Shut Off
8	<a href="#">9857-134-001</a>		Control Assy, Gas
9	<a href="#">9381-009-001</a>		Manifold, Assy
*	<a href="#">9425-069-009</a>		Orifice, Burner-Natural #32
"	<a href="#">9425-069-008</a>		Orifice, Burner-LP #50
10	<a href="#">9029-047-001</a>		Bracket, Manifold
*	<a href="#">9039-915-001</a>		Bracket
22	<a href="#">8615-104-038</a>		Pipe Plug in end of Burner Manifold
11	<a href="#">9452-615-001</a>		Plate, High-Limit
*	<a href="#">9545-008-006</a>		Screws
12	<a href="#">9576-203-002</a>		Thermostat, Hi-Limit
*	<a href="#">9538-142-001</a>		Spacer, Hi-Limit
"	<a href="#">9545-045-007</a>	<a href="#">9545-010-001</a>	Screw, Cross Recessed
13	<a href="#">9074-234-001</a>		Cover, Hi-Limit Stat
*	<a href="#">9545-008-006</a>		Screws
14	<a href="#">9576-207-008</a>		Thermostat, Safety Shutoff
*	<a href="#">9545-008-006</a>		Screws
15	<a href="#">9825-057-002</a>		Cover, Safety Stat
*	<a href="#">9545-008-006</a>		Screws
16	<a href="#">9857-116-002</a>	Not Available	Control, Ignition
*	<a href="#">9545-031-006</a>		Screw
17	<a href="#">9897-026-001</a>		Terminal Block
*	<a href="#">9545-031-004</a>		Screw
18	<a href="#">8711-002-001</a>		Transformer, Ignition Control
*	<a href="#">8640-397-002</a>		Nut, Conduit
"	<a href="#">9039-915-001</a>		Bracket
"	<a href="#">9545-008-006</a>		Screws
19	<a href="#">9631-403-002</a>		Wire, Hi Voltage
*	<a href="#">9627-678-001</a>		Harness, Low Voltage Ignition
20	<a href="#">9200-001-002</a>		Fuseholder
"	<a href="#">8636-018-001</a>		Fuse - 1.5 A.
21	<a href="#">9074-263-001</a>		Cover, Ignition Cntrl Box
*	<a href="#">9545-008-006</a>		Screws
"	<a href="#">9550-173-001</a>		Shield, Burner Inlet
"	<a href="#">9732-102-002</a>		Kit, LP Conversion