


## Dexter DL2X30 Door Switch Group

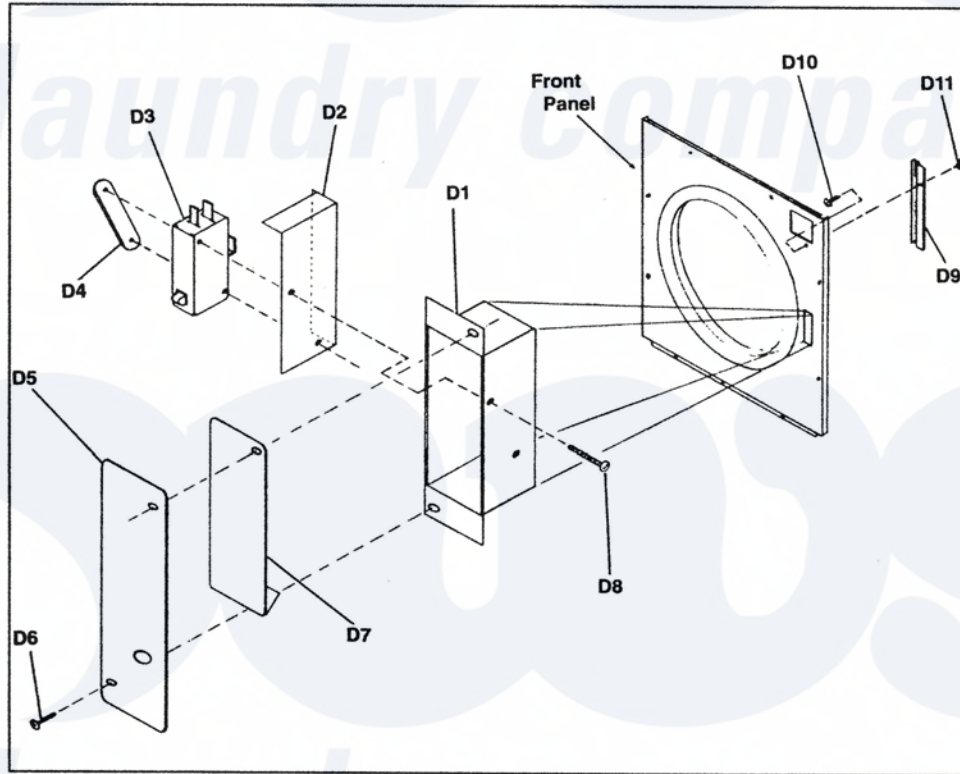

[Dexter Commercial Dexter DL2X30 Dryer Parts](#) Parts Diagram Door Switch Group  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
D1	<a href="#">9041-076-001</a>			Box, Door Switch (Lower)
"	<a href="#">9041-076-002</a>			Box, Door Switch (Upper)
D2	<a href="#">9550-159-001</a>			Shield, Door Switch
D3	<a href="#">9539-461-001</a>			Switch, Door
D4	<a href="#">8640-401-001</a>			Nut, Special Twin
D5	<a href="#">9074-255-001</a>			Cover, Switch Box
D6	<a href="#">9545-008-020</a>			Screw
D7	<a href="#">9008-004-001</a>			Actuator, Switch- Lower
"	<a href="#">9008-004-002</a>			Actuator, Switch- Upper
D8	<a href="#">9545-020-001</a>			Screw, Switch Mtg
D9	<a href="#">6068-041-001</a>			Conduit, Lower Panel

"	<a href="#">6068-043-001</a>	Conduit, Upper Panel
D10	<a href="#">9545-012-003</a>	Screw
D11	<a href="#">8640-413-004</a>	Nut, Elastic Stop

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>