


Dexter DTCK80 Door Switch Group

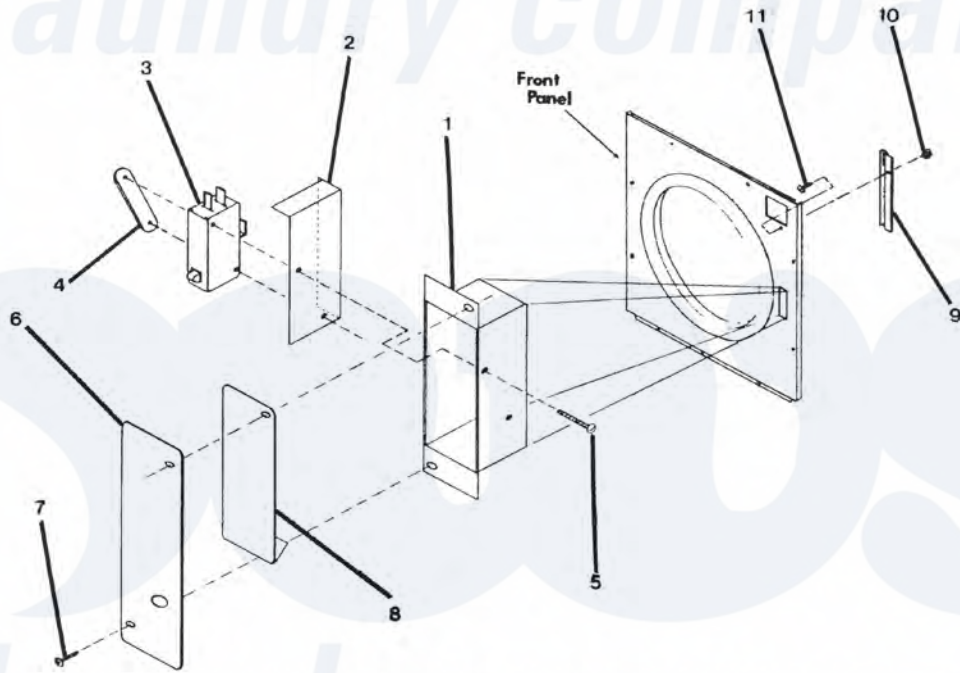

Dexter [Commercial Dexter DTCK80 Dryer Parts](#) Parts Diagram Door Switch Group
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	9041-076-001			Box, Door Switch (Lower)
2	9550-159-001			Shield, Door Switch
3	9539-461-001			Switch, Door
4	8640-401-001			Nut, Special Twin
5	9545-020-001			Screw, Switch Mtg
6	9074-255-001			Cover, Switch Box
7	9545-008-020			Screw
8	9008-004-001			Actuator, Switch- Lower
9	6068-041-002			Conduit
10	9545-012-003			Screw
*	8641-436-000			Washer, Fiber

11 [8640-413-004](#)

Nut, Elastic Stop

* [8220-001-221](#)

Wire Assy, Door Switch - Black

" [8220-001-222](#)

Wire Assy, Door Switch - Blue

the laundry company[®]

the laundry company[®]

the laundry company[®]