


Dexter SWD Door Switch Group

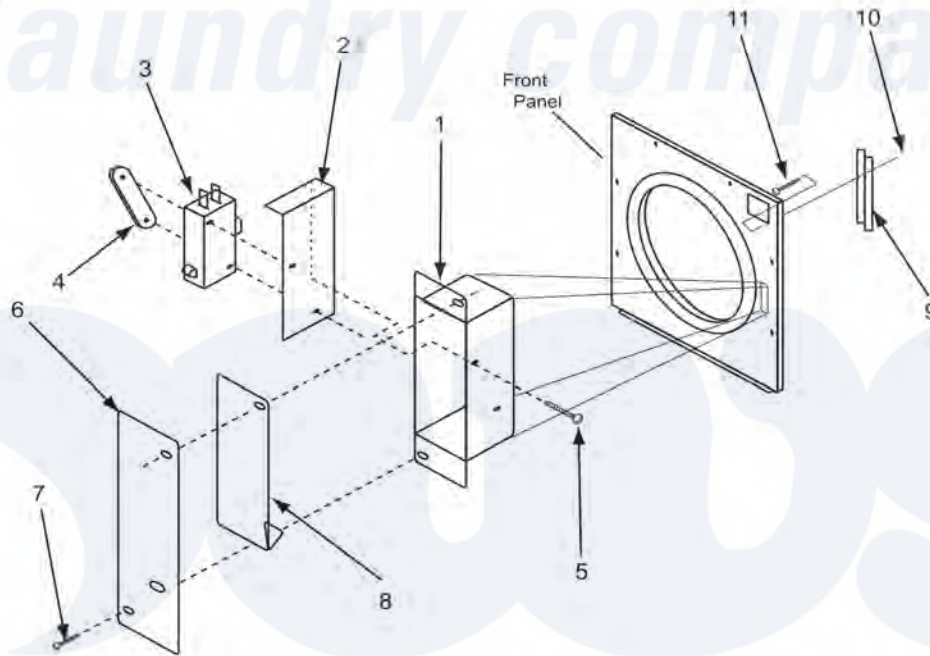

Dexter [Commercial Dexter SWD Stacked Washer and Dryer Parts](#) Parts Diagram Door Switch Group
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	9041-076-002			Box, Door Switch (Upper)
2	9550-159-001			Shield, Door Switch
3	9539-461-001			Switch, Door
4	8640-401-001			Nut, Special Twin
5	9545-020-001			Screw, Switch Mtg
6	9074-255-001			Cover, Switch Box
7	9545-008-020			Screw
8	9008-004-002			Actuator, Switch- Upper
9	6068-043-001			Conduit, Upper Panel
10	9545-012-003			Screw
11	8640-413-004			Nut, Elastic Stop

*	9029-037-001	Not Available	Gromet, 1/4
"	8220-001-221		Wire Assy, Door Switch - Black
"	8220-001-222		Wire Assy, Door Switch - Blue

the laundry company[®]

the laundry company[®]

the laundry company[®]