


## Dexter SWD Dryer Burner Housing Group

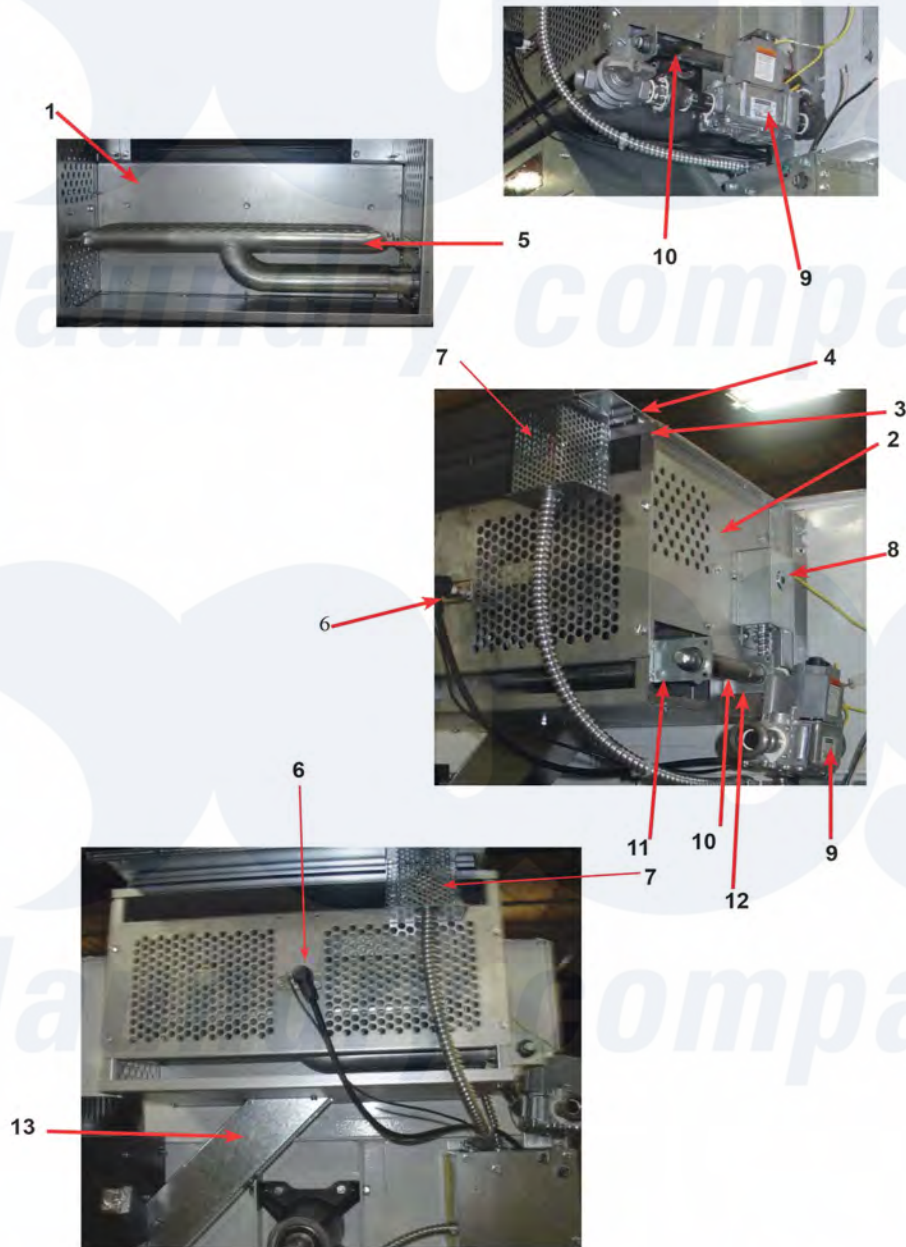

Dexter [Commercial Dexter SWD Stacked Washer and Dryer Parts](#) Parts Diagram Dryer Burner Housing Group  
 Click on the part number to view part

| Item | Original Part Number         | Replaced By | Status        | Part Description                   |
|------|------------------------------|-------------|---------------|------------------------------------|
| *    | 9803-199-001                 |             | Not Available | Housing Assembly, Burner           |
| 1    | 9454-831-001                 |             | Not Available | Panel-Burner Housing Front & Back  |
| *    | 9454-789-001                 |             | Not Available | Panel-Burner Housing, Side Left    |
| 2    | 9454-790-001                 |             | Not Available | Panel-Burner Housing, Side Right   |
| *    | <a href="#">9049-080-001</a> |             |               | Baffle-Burner Housing              |
| "    | 9828-015-001                 |             | Not Available | Connector Assembly- Burner         |
| 3    | 9454-791-001                 |             | Not Available | Panel-Burner Housing, Top          |
| 4    | 9074-307-001                 |             | Not Available | Cover Burner Housing, Top          |
| *    | <a href="#">9545-008-001</a> |             |               | Screw 10-32 x 1/4                  |
| "    | <a href="#">9545-008-006</a> |             |               | Screws                             |
| "    | 9454-790-001                 |             | Not Available | Service Plate baffle Recirculation |

|    |                              |                              |   |
|----|------------------------------|------------------------------|---|
|    | 9432-123-001                 | Not Available                | Chamber Clean Out                                       |
| "  | <a href="#">9545-008-001</a> |                              | Screw 10-32 x 1/4                                       |
| "  | <a href="#">9550-173-001</a> |                              | Shield, Burner Inlet                                    |
| "  | <a href="#">9545-008-024</a> |                              | Screw HX Head Tapping (Mounts bracket housing to dryer) |
| 5  | <a href="#">9048-020-001</a> |                              | Burner, Main  |
| *  | 9454-816-001                 | Not Available                | Panel- Burner Housing, Back                             |
| "  | <a href="#">9545-008-001</a> |                              | Screw 10-32 x 1/4                                       |
| 6  | <a href="#">9875-002-003</a> |                              | Electrode Assy, Ignition                                |
| *  | <a href="#">9545-045-001</a> |                              | Screw, Electrode Mtg                                    |
| 7  | <a href="#">9576-203-002</a> |                              | Thermostat, Hi-Limit                                    |
| *  | 9029-192-001                 | Not Available                | Bracket-Hi-Limit  |
| "  | <a href="#">9538-142-001</a> |                              | Spacer, Hi-Limit  |
| "  | 9545-045-007                 | <a href="#">9545-010-001</a> | Screw, Cross Recessed                                   |
| "  | <a href="#">8220-001-415</a> |                              | Wire Assy-BRN, 31Ó                                      |
| "  | <a href="#">8220-095-018</a> |                              | Wire Assy-ORG, 31Ó                                      |
| "  | <a href="#">9576-207-008</a> |                              | Thermostat, Safety Shutoff                              |
| "  | <a href="#">9545-008-006</a> |                              | Screws  |
| "  | <a href="#">2114-008-000</a> |                              | Bushing, Over Temp                                      |
| 8  | <a href="#">9825-057-002</a> |                              | Cover, Safety Stat                                      |
| *  | <a href="#">9545-008-006</a> |                              | Screws  |
| 9  | <a href="#">9857-134-001</a> |                              | Control Assy, Gas                                       |
| 10 | <a href="#">9381-009-001</a> |                              | Manifold, Assy  |
| *  | <a href="#">9425-069-009</a> |                              | Orifice, Burner-Natural #32                             |
| "  | <a href="#">9425-069-008</a> |                              | Orifice, Burner-LP #50                                  |
| 11 | <a href="#">9029-047-001</a> |                              | Bracket, Manifold                                       |
| 12 | <a href="#">9039-915-001</a> |                              | Bracket   |
| "  | <a href="#">9029-116-001</a> |                              | Bracket-Support, Gas Valve                              |
| *  | <a href="#">8615-104-037</a> |                              | Elbow- 1/2x90, Black Iron                               |
| "  | <a href="#">8655-073-040</a> |                              | Nipple 1/2Ó x 2 Black                                   |
| "  | <a href="#">8655-073-041</a> |                              | Nipple- 15xClose, Back Iron                             |
| "  | <a href="#">8615-104-035</a> |                              | Union- 1/2, Black Iron                                  |
| "  | <a href="#">9379-196-001</a> |                              | Valve-Gas Shutoff,                                      |
| 13 | 9973-033-001                 | Not Available                | Duct Assy, Recirculation                                |