


Dexter SWD Front Panel Control

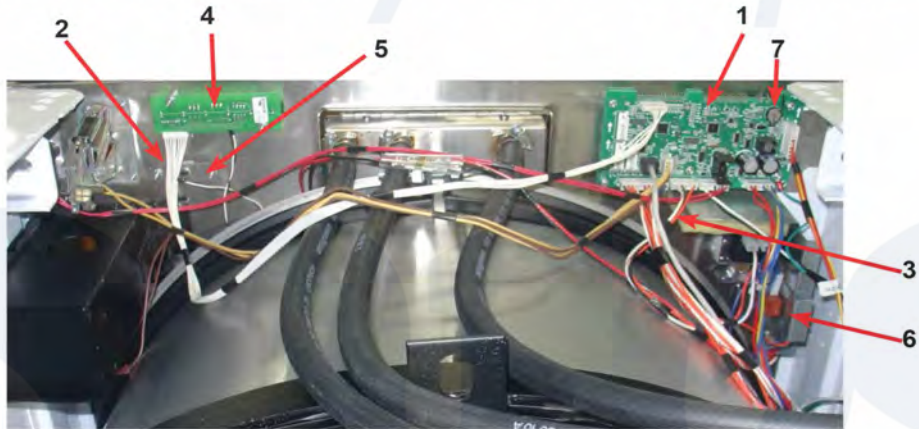

[Dexter Commercial Dexter SWD Stacked Washer and Dryer Parts](#) Parts Diagram Front Panel Control

[Click on the part number to view part](#)

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|------------------------------|------------------------------|--------|----------------------------------|
| * | 9412-143-001 | | | Nameplate Decal, Control Panel |
| 1 | 9473-009-002 | 9473-009-003 | | A series control |
| * | 9538-178-001 | | | Spacer Pushbutton (Micro) |
| " | 9486-150-001 | | | Retainer Pushbutton (Micro) |
| " | 8640-424-002 | | | Nut |
| " | 9035-060-003 | | | Pushbutton Control (coin) |
| " | 9538-157-018 | | | Spacer Plastic #6x9/16 |
| " | 8640-411-002 | | | NUT-ELASTICSTOP,#6-32 |
| " | 8640-411-003 | | | Nut, Switch Locking |
| 2 | 9627-821-001 | | | Wiring Harness LED PCB |
| 3 | 9627-816-002 | | | Wiring Harness, Door Lock P15/P4 |

| | | | |
|---|------------------------------|---------------|--|
| 4 | 9473-005-001 | | PCB assembly Mode lights |
| * | 9537-157-018 | Not Available | Spacer Plastic #6x9/16 |
| " | 8640-411-003 | | Nut, Switch Locking |
| 5 | 9794-001-001 | | Wiring Harness |
| * | 9538-157-018 | | Spacer Plastic #6x9/16 |
| " | 8640-411-003 | | Nut, Switch Locking |
| " | 9732-223-002 | | Switch Assembly, Stop Button Mounting Kit |
| " | 9538-157-020 | | Spacer Plastic #8x5/16 E-Stop |
| " | 8640-412-005 | | NUT-HEXKEPS,#8-32 |
| 6 | 9922-011-009 | | Solenoid Ass'y, Door Locking See Door Lock Group for Parts Breakdown) |
| * | 8640-412-005 | | NUT-HEXKEPS,#8-32 |
| 7 | 8612-001-001 | | Battery (used on Control PCB) |
| * | 9452-725-001 | | Stop Button Mounting Plate |

