

Dexter WCAD18KCS-12 (T-300) Cabinet And Front Panel Group



Dexter [Commercial Dexter WCAD18KCS-12 \(T-300\) Washer Parts](#) Parts Diagram Cabinet And Front Panel Group
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	9454-635-005	9454-825-001		Panel, Right Side-stainless
"	9454-635-006	9454-825-002		Panel, Left Side - stainless
2	9545-018-018			Screw, (Side Panel to Base)
"	8640-414-006			Nut, Hex 1/4-20 UNC
3	9029-066-001			Bracket, Side Panel under front panel
*	8640-413-002			Nut, Hinge to Door
"	9545-008-031			Screw
4	9454-781-001			Panel Assy, Front
*	9452-725-001			Stop Button Mounting Plate
5	9059-063-004	9059-063-004P		Edge protector 18
*	9545-008-031			Screw

"	8640-399-005		Nut, Spring- To Control Panel 10/32
6	9545-008-014		Screw, FLHDCR, 10B x 1
"	8641-585-001		Lockwasher
*	8640-399-008		Nut, Spring-To Front Panel
7	8502-723-001		Label, Door Opening
8	9989-501-001		Panel, Control (Mounts Nameplate)
*	9545-008-026		Screw, Vault Mtg
9	9412-135-001		Nameplate Decal, Control Panel
10	9989-498-001		Panel Top
11	8650-012-003		Lock and Key, Control
--	9086-017-001		Catch, Top Panel
"	9545-008-023		Screw, Guide
12	9108-096-001	9960-286-001	Door, Lower Service (includes handle & Rivits)
13	9244-081-001		Handle (bumper guard)
*	9545-045-010		Screw
14	9545-008-014		Screw, FLHDCR, 10B x 1
"	8641-585-001		Lockwasher
*	8640-399-008		Nut, Spring-To Front Panel
15	9108-095-005		Door, Dispenser
20	9451-191-001		Pin, Plain
21	9467-025-001		Post, Door Mounting
22	9545-045-002		Screw, Mtg (top)
23	9545-008-012		Screw, Disp. Mtg
16	9732-122-010	Not Available	SS Coin Box Assy, Coin
17	9021-001-010		Acceptor, Coin
18	9456-041-007		Plastic Plug 1 1/2" (inside cylinder)
19	6292-006-007		Key
"	9095-038-001		Cam, Lock-Top
--	8640-426-001		Nut, 9/32 - 28 Hex
"	8641-581-008		Washer, Spacer- Thick

the laundry company[®]