


Dexter WCAD18KCS-12 (T-300) Coin Acceptor Control Panel

Parts Data

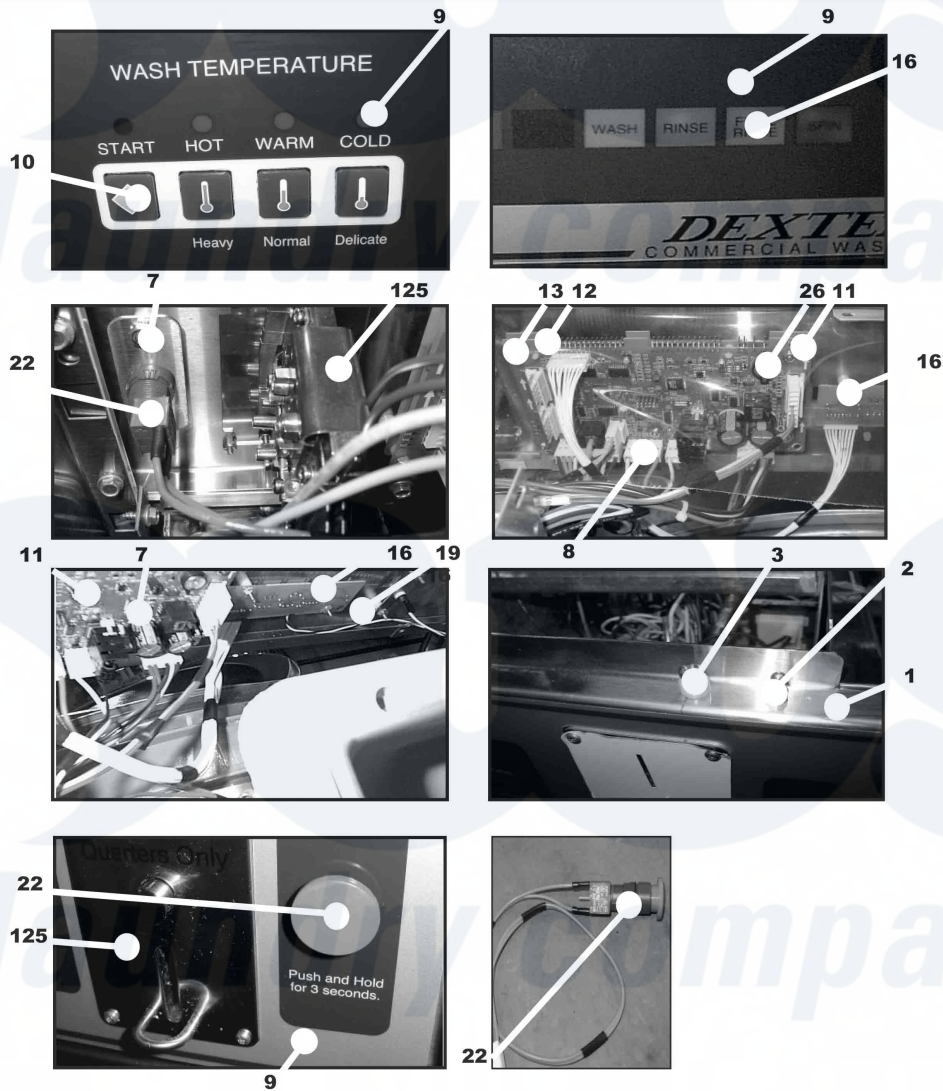

116

Dexter Commercial Dexter WCAD18KCS-12 (T-300) Washer Parts Parts Diagram Coin Acceptor Control Panel
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	9989-496-001			Panel Control Assembly(panel only)
--	9545-008-026			Screw, Vault Mtg
2	9467-024-001			Post Locator Top
--	8640-411-003			Nut, Switch Locking
3	9355-001-001			Locator Panel
--	9545-008-025	9545-008-023		Screw, Guide
"	9538-178-001			Spacer Pushbutton (Micro)
"	9486-150-001			Retainer Pushbutton (Micro)
"	8640-424-002			Nut
10	9035-060-003			Pushbutton Control (coin)
7	9473-009-001	9473-009-003		A series control

11	9538-157-018	Spacer Plastic #6x9/16
"	8640-411-002	NUT-ELASTICSTOP,#6-32
--	9627-797-001	Wiring Harness LED PCB
8	9627-791-003	Wiring Harness doorlock safety switch
16	9473-005-001	PCB assembly Mode lights
--	9538-157-018	Spacer Plastic #6x9/16
9	8640-411-003	Nut, Switch Locking
19	9794-001-001	Wiring Harness
--	9538-157-018	Spacer Plastic #6x9/16
"	8640-411-003	Nut, Switch Locking
"	9412-135-001	Nameplate Decal, Control Panel
22	9732-223-001	Switch Assembly Emergency Stop (includes wire harness)
--	9538-157-020	Spacer Plastic #8x5/16 E-Stop
"	8640-412-005	NUT-HEXKEPS,#8-32
"	9922-011-001 9922-011-001P	Solenoid Assy.
"	8640-412-005	NUT-HEXKEPS,#8-32
26	8612-001-001	Battery (used on Control PCB)
125	9021-001-010	Acceptor, Coin
--	9550-184-001	Plastic Shield over main PCB
27	9452-725-001	Stop Button Mounting Plate

the laundry company®

the laundry company®