


Dexter WCAD18KCS-12SZ (T-300) Integrated Easy Card Panel

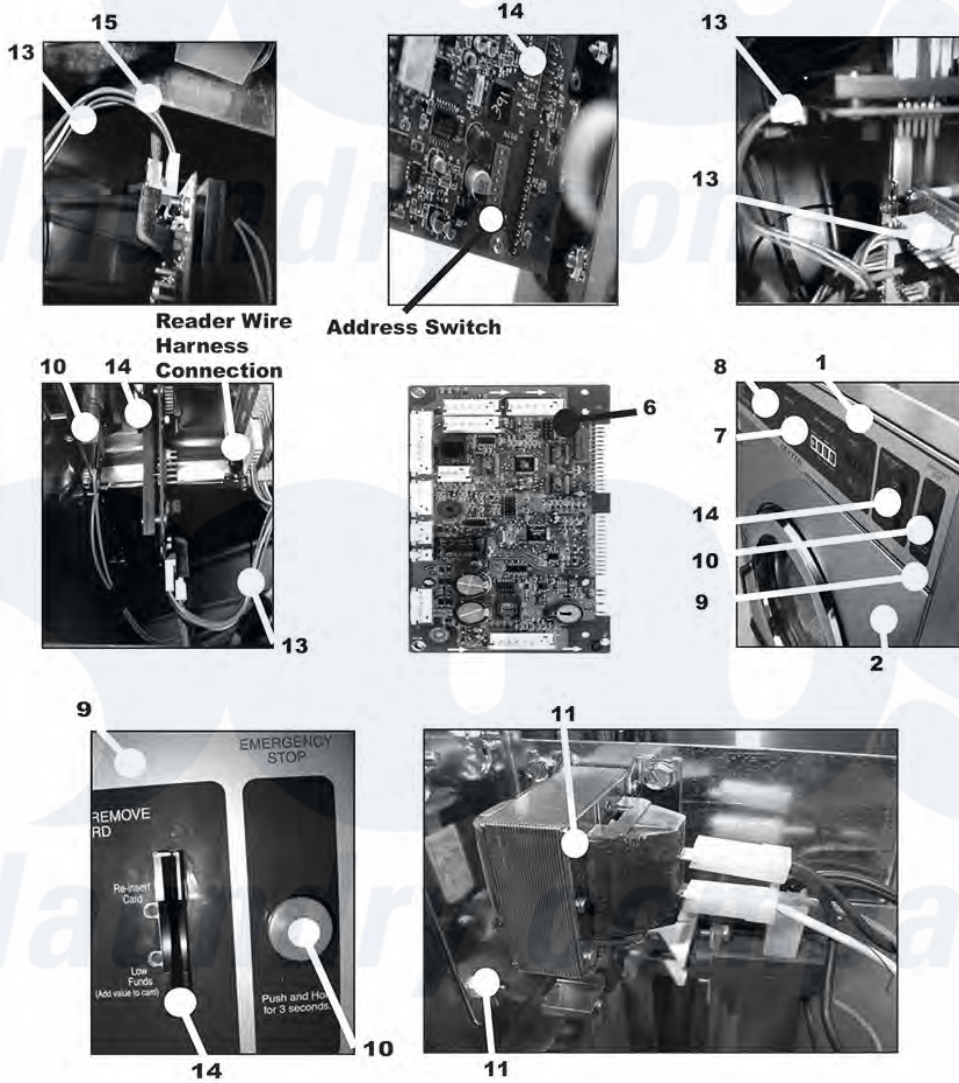

**Reader Wire
Harness
Connection**

Address Switch

Dexter [Commercial Dexter WCAD18KCS-12SZ \(T-300\) Washer Parts](#) Parts Diagram Integrated Easy Card Panel
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	9989-501-001			Panel, Control (Mounts Nameplate)
--	9545-008-026			Screw, Vault Mtg
2	9454-781-002		Not Available	Front Panel
--	9467-024-001			Post Locator Top
"	8640-411-003			Nut, Switch Locking
"	9355-001-001			Locator Panel
"	9545-008-023			Screw, Guide
"	9538-178-001			Spacer Pushbutton (Micro)
"	9486-150-001			Retainer Pushbutton (Micro)
"	8640-424-002			Nut
5	9035-060-003			Pushbutton Control (coin)

6	9473-009-001	9473-009-003	A series control
--	9538-157-017		Spacers, Circuit Board - #6 x 7/8
"	8640-411-003		Nut, Switch Locking
"	9627-797-001		Wiring Harness LED PCB
"	9627-791-003		Wiring Harness doorlock safety switch
7	9473-005-001		PCB assembly Mode lights
--	9538-157-018		Spacer Plastic #6x9/16
"	9194-001-001	Not Available	Nut Hexkeys #6-32
8	9794-001-001		Wiring Harness
--	9538-157-018		Spacer Plastic #6x9/16
"	9538-157-018		Spacer Plastic #6x9/16
9	9412-145-001	Not Available	Nameplate,Control Panel (one piece)
10	9801-092-001	Not Available	Switch Assembly Emergency Stop (includes wire harness)
11	9922-011-001	9922-011-001P	Solenoid Assy.
16	8612-001-001		Battery (used on Control PCB)
12	8612-001-001		Battery (used on Control PCB)
13	9627-827-001		Harness V-reader ALL MODELS
14	9797-008-001		Card Reader Assembly Complete
15	9806-013-002		Cable Assembly 4 twistair 12Œ shld/unshld reader to rear of machine
--	9506-104-001	Not Available	Wiring Schematic, Easy Card
"	9506-105-001	Not Available	Wiring Diagram (Easy Card)