


Dexter WCAD20KCS-12SZ (T350) Control Panel Parts

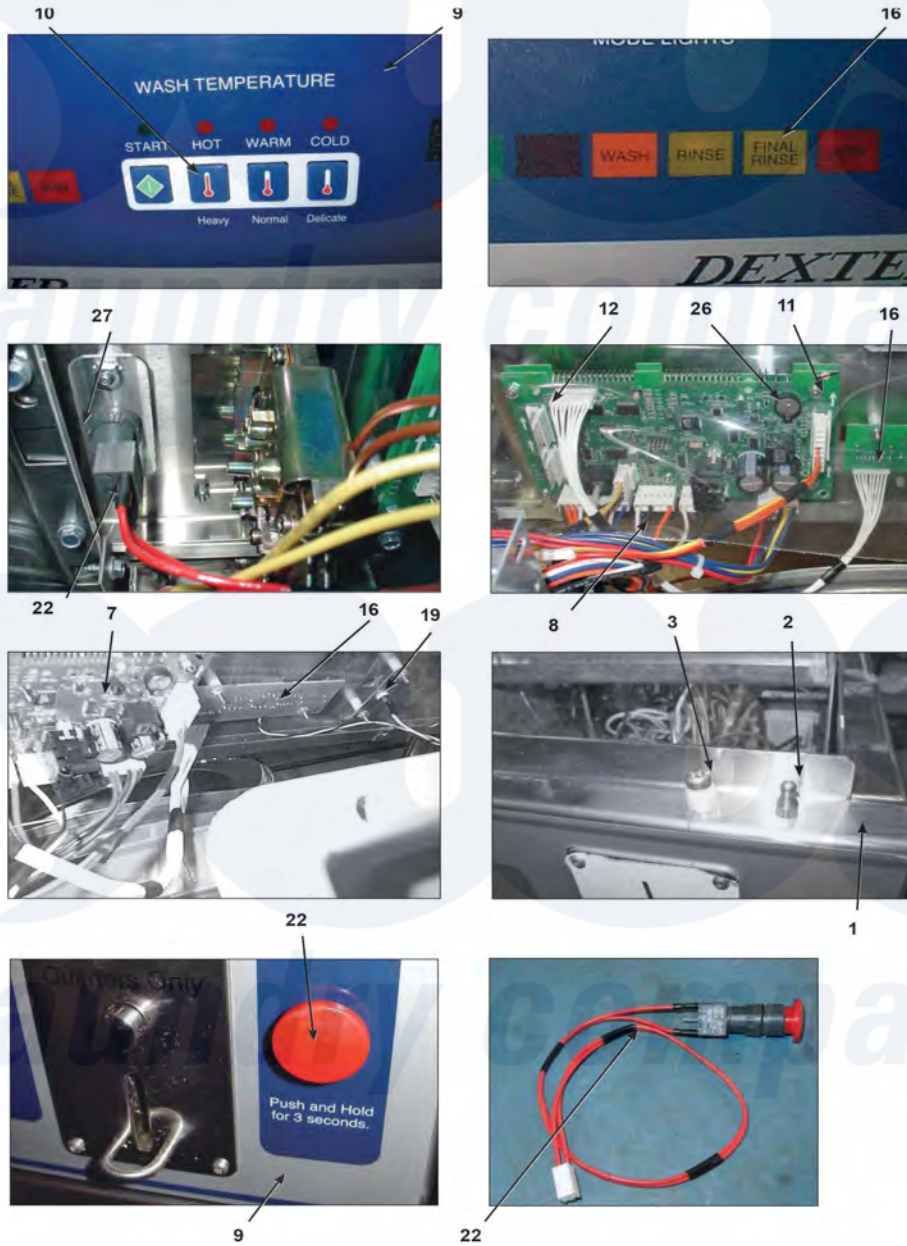

Dexter [Commercial Dexter WCAD20KCS-12SZ \(T350\) Washer Parts](#) Parts Diagram Control Panel Parts
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	9989-522-001			Panel, Control (Mounts Name-plate)
*	9545-008-026			Screw, Vault Mtg
2	9467-024-001			Post Locator Top
*	8640-411-003			Nut, Switch Locking
3	9355-001-001			Locator Panel
*	9545-008-023			Screw, Guide
"	9538-178-001			Spacer Pushbutton (Micro)
"	9486-150-001			Retainer Pushbutton (Micro)
"	8640-424-002			Nut
10	9035-060-003			Pushbutton Control (coin)
7	9473-009-002	9473-009-003		A series control

11	9538-157-018	Spacer Plastic #6x9/16
"	8640-411-002	NUT-ELASTICSTOP,#6-32
12	9627-797-001	Wiring Harness LED PCB
8	9627-791-003	Wiring Harness doorlock safety switch
16	9473-005-001	PCB assembly Mode lights
*	9538-157-018	Spacer Plastic #6x9/16
"	8640-411-003	Nut, Switch Locking
19	9794-001-001	Wiring Harness
*	9538-157-018	Spacer Plastic #6x9/16
"	8640-411-003	Nut, Switch Locking
9	9412-156-001	Nameplate Decal, Control Panel (Blue)
"	9412-169-001	Nameplate Decal, Control Panel (Black)
"	8502-726-001	Label Nameplate RH (STOP)
"	8502-744-001	Label-Nameplate, RH (Black)
22	9732-223-001	Switch Assembly Emergency Stop (includes wire harness)
*	9538-157-020	Spacer Plastic #8x5/16 E-Stop
"	8640-412-005	NUT-HEXKEPS,#8-32
"	9922-011-001	9922-011-001P Solenoid Assy.
"	8640-412-005	NUT-HEXKEPS,#8-32

the laundry company®

the laundry company®