


Dexter WCAD30KCS-12SZ (T-450) Integrated Easy Card Control Panel

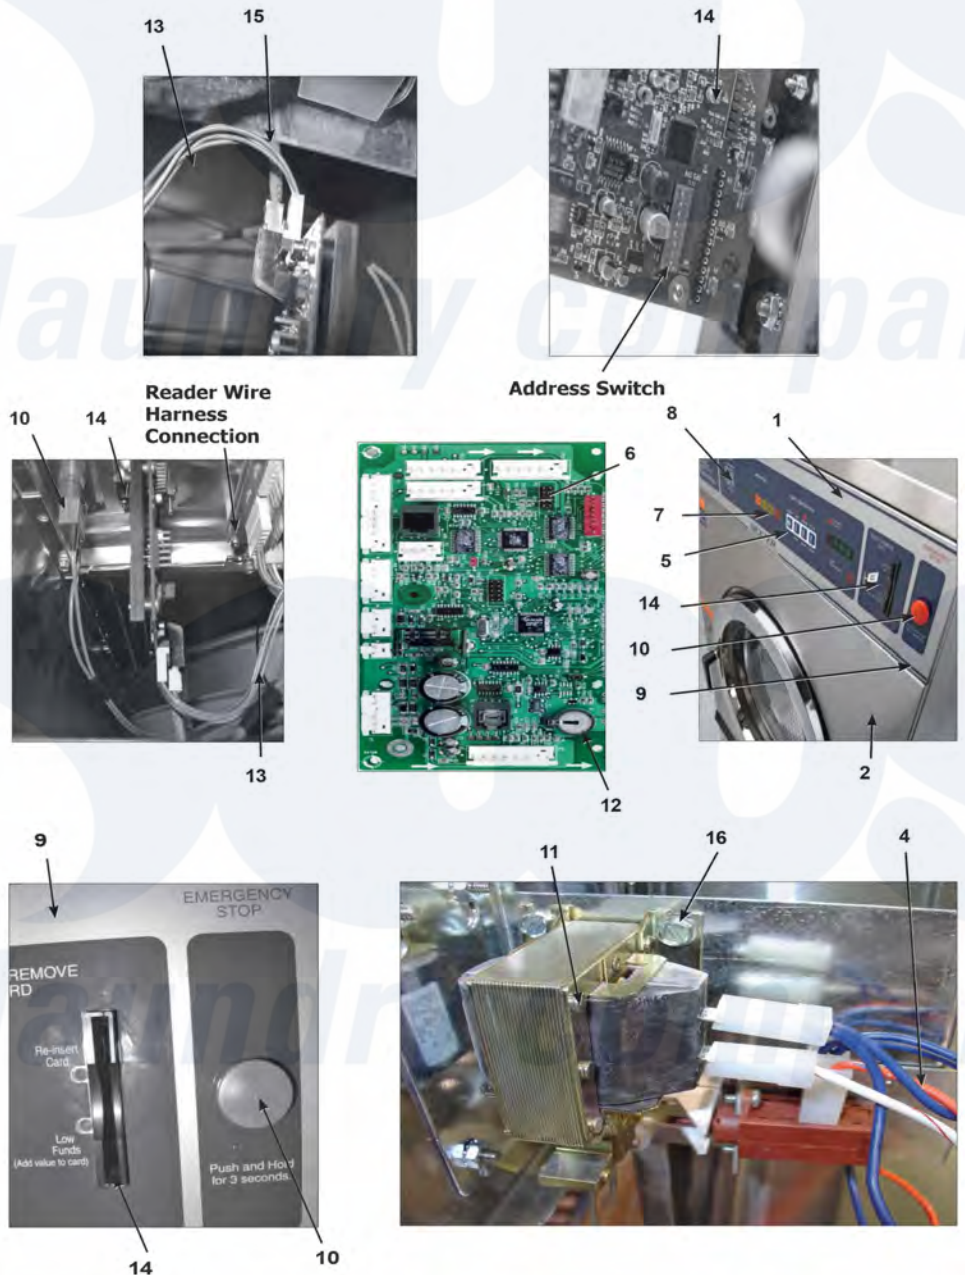

Dexter [Commercial Dexter WCAD30KCS-12SZ \(T-450\) Washer Parts](#) Parts Diagram Integrated Easy Card Control Panel
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	9989-502-001		Not Available	Panel Assembly (panel only)
*	9545-008-026			Screw, Vault Mtg
2	9454-659-002			Front Panel
*	9467-024-001			Post Locator Top
"	8640-411-003			Nut, Switch Locking
"	9355-001-001			Locator Panel
"	9545-008-023			Screw, Guide
"	9538-178-001			Spacer Pushbutton (Micro)
"	9486-150-001			Retainer Pushbutton (Micro)
"	8640-411-003			Nut, Switch Locking
5	9035-060-003			Pushbutton Control (coin)

6	9473-009-002	9473-009-003	A series control
*	9538-157-018		Spacer Plastic #6x9/16
"	8640-411-002		NUT-ELASTICSTOP,#6-32
"	9627-797-001		Wiring Harness LED PCB
4	9627-791-003		Wiring Harness doorlock safety switch
7	9473-005-001		PCB assembly Mode lights
*	9538-157-018		Spacer Plastic #6x9/16
"	8640-411-003		Nut, Switch Locking
8	9794-001-001		Wiring Harness
*	9538-157-018		Spacer Plastic #6x9/16
"	8640-411-003		Nut, Switch Locking
9	9412-146-001	Not Available	Nameplate,Control Panel (one piece)
10	9732-223-001		Switch Assembly Emergency Stop (includes wire harness)
11	9922-011-001	9922-011-001P	Solenoid Assy.
16	8640-412-005		NUT-HEXKEPS,#8-32
12	8612-001-001		Battery (used on Control PCB)
13	9627-827-001		Harness V-reader ALL MODELS
14	9797-007-003		Card Reader (IC reader only)
15	9806-013-002		Cable Assembly 4 twistair 12Ø shld/unshld reader to rear of machine
*	9982-337-001		PLATE-READERMOUNTING(ECREADY)