

## Dexter WCN18AA Control Panel Group



55

[Dexter Commercial Dexter WCN18AA Washer Parts](#) Parts Diagram Control Panel Group  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">3310-042-001</a>			Light, Bleach
2	<a href="#">3310-041-001</a>			Light, Cycle Control
*	<a href="#">9206-100-001</a>			Gasket, Light
3	<a href="#">9539-479-009</a>			Switch, Push button (cycle selector)
*	<a href="#">9412-074-003</a>			Nameplate, Control Panel T 300
"	<a href="#">8640-412-005</a>			NUT-HEXKEPS,#8-32
"	<a href="#">9545-031-011</a>			Screw #6 x 5/16Ø
4	<a href="#">9021-001-010</a>			Acceptor, Coin
*	<a href="#">9545-020-004</a>			Screw, Acceptor Mtg
"	<a href="#">8640-424-002</a>			Nut
"	<a href="#">0732-126-001</a>			Switch ( for coin acceptor with

[9732-120-001](#)

extra actuator )

5 [9029-073-001](#)

Bracket, (Door Locking Solenoid)

6 9020-005-001

[9732-258-001](#)

Coin Accum. Kit

7 [9538-157-003](#)

Spacers, Circuit Board

8 [8640-412-005](#)

NUT-HEXKEPS,#8-32

9 [9550-174-001](#)

Shield, Circuit Board

10 [9242-450-002](#)

Hose, Dispenser to Tub

\* [8654-117-008](#)

Clamp, Hose Vent

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>