

Dexter WCN18AB Control Panel Group



55

Dexter Commercial Dexter WCN18AB Washer Parts Parts Diagram Control Panel Group

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	3310-042-001			Light, Bleach
2	3310-041-001			Light, Cycle Control
*	9206-100-001			Gasket, Light
3	9539-479-009			Switch, Push button (cycle selector)
*	9412-074-003			Nameplate, Control Panel T 300
"	8640-412-005			NUT-HEXKEPS,#8-32
"	9545-031-011			Screw #6 x 5/16Ø
4	9021-001-010			Acceptor, Coin
*	9545-020-004			Screw, Acceptor Mtg
"	8640-424-002			Nut
"	0732-126-001			Switch (for coin acceptor with

[9732-120-001](#)

extra actuator)

5 [9029-073-001](#)

Bracket, (Door Locking Solenoid)

6 9020-005-001

[9732-258-001](#)

Coin Accum. Kit

7 [9538-157-003](#)

Spacers, Circuit Board

8 [8640-412-005](#)

NUT-HEXKEPS,#8-32

9 [9550-174-001](#)

Shield, Circuit Board

10 [9242-450-002](#)

Hose, Dispenser to Tub

* [8654-117-008](#)

Clamp, Hose Vent

the laundry company[®]

the laundry company[®]

the laundry company[®]