

Dexter WCN18AB OPL Manual Parts List



11

2



INSTRUCTIONS

- 1 Load clothes and close door securely.
- 2 Select CYCLE-with rotary switch.
- 3 Select WASH TEMP with pushbutton.
- 4 Add detergent and softener.
- 5 Press START button.
- 6 Add bleach when green light is lit.



9

10

8 & 3

7

83

[Dexter Commercial Dexter WCN18AB Washer Parts](#) Parts Diagram OPL Manual Parts List
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
2	9532-140-010			Primary Seal Vringa (opl epdm)
3	9539-471-001			Rotary Switch
4	9539-474-001			Rocker Switch Red
5	9539-474-002			Rocker Switch Wht.
6	9452-595-001			Switch Mounting Plate
7	9545-045-001			Screw, Electrode Mtg
*	8640-412-005			NUT-HEXKEPS,#8-32
"	9627-674-001			Wiring Harness OPL manual
"	8220-001-235			Wire Assembly - Orange/White
"	8220-001-377			Wire Wht./Gm
8	9307-176-001			Knob, Timer

9	8502-651-001		Label Nameplate OPL
10	8502-615-002		Label Switch Mounting Plate
11	9454-668-002		Front Panel w/out coin box
*	9345-814-002	Not Available	Wiring Schematic Single Phase
"	9345-815-002	Not Available	Wiring Diagram Single Phase
"	9345-816-001	Not Available	Schematic Three Phase
"	9345-817-002	Not Available	Diagram Three Phase

the laundry company[®]

the laundry company[®]

the laundry company[®]