


Maytag A18CM 01 - FRONT VIEW

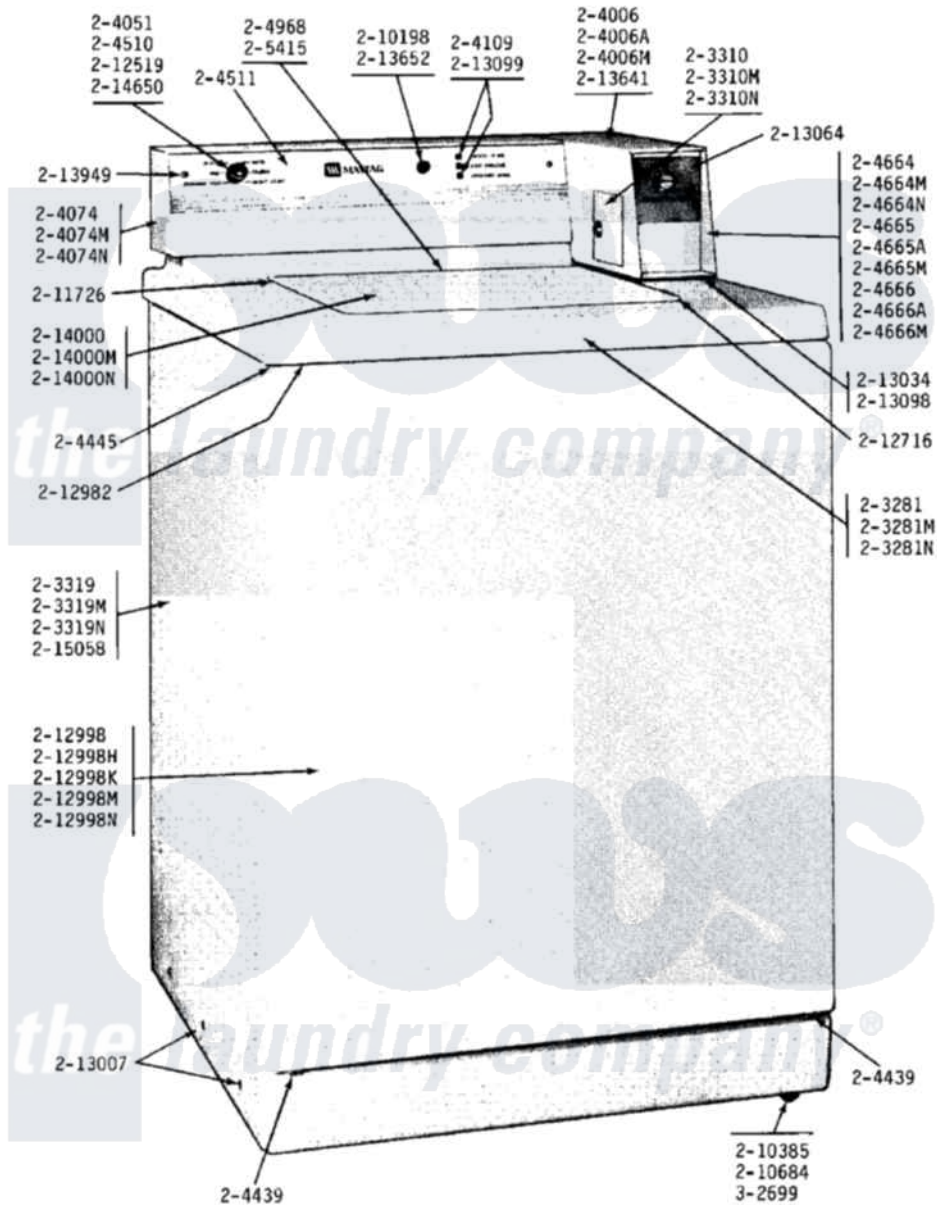

Maytag [Commercial Maytag A18CM Washer Parts](#) Parts Diagram 01 - FRONT VIEW
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	NLA		Not Available	TOP COVER-WHITE
002	NLA		Not Available	ACCESS DOOR (WHITE)
003	NLA		Not Available	CABINET-WHITE
004	NLA		Not Available	ACCESS DOOR (WHITE)
005	204051	22204051		Knob
006	NLA		Not Available	CONTROL COVER-WHITE
007	204109			Light, Signal
008	204439			Screw And Fstner Assembly
009	204445			Screw And Fastener Assembly
010	204510			Fabric Control Switch
011	NLA		Not Available	CONTROL PANEL WITH LENS
012	NLA		Not Available	CONTROL CENTER-WHITE
013	NLA		Not Available	CONTROL CENTER-WHITE
014	NLA		Not Available	CONTROL CENTER-WHITE
015	204968			Plunger And Bracket Assembly--W

016	205415	279347		Switch-Lid
017	210198			Fastener
018	210385			Lock Nut For Adjustable Leg
019	210684			Foot, Adjustable Leg
020	211726			Hinge, Ball Lid
021	212519	488234		Screw 8-32 X 1/4
022	212716			Bumper, Lid
023	212982	22001650		Fastener, Spring
024	212998		Not Available	PANEL, FRONT (WHT)
025	213007			Xfor Cabinet See Cabinet, Back
026	NLA		Not Available	GASKET UNDER CONTROL CENTER
027	NLA		Not Available	FRONT PLATE F/TICKET CONTRO
028	NLA		Not Available	GASKET UNDER CONTROL CENTER
029	213099			Lens For Control Panel
030	NLA		Not Available	LATCH FOR ACCESS DOOR
031	NLA		Not Available	LID BUMPER
032	213949			Screw, No.8-18 X 5/16 Inch
033	214000		Not Available	LID-WHITE
034	214650			Screw For 2-4051 Knob
035	215058			Pad, Cabinet Bumper
036	Y302699	22003428		Leg, Adjustable

the laundry company[®]

the laundry company[®]