


# Maytag A21CA 01 - FRONT VIEW

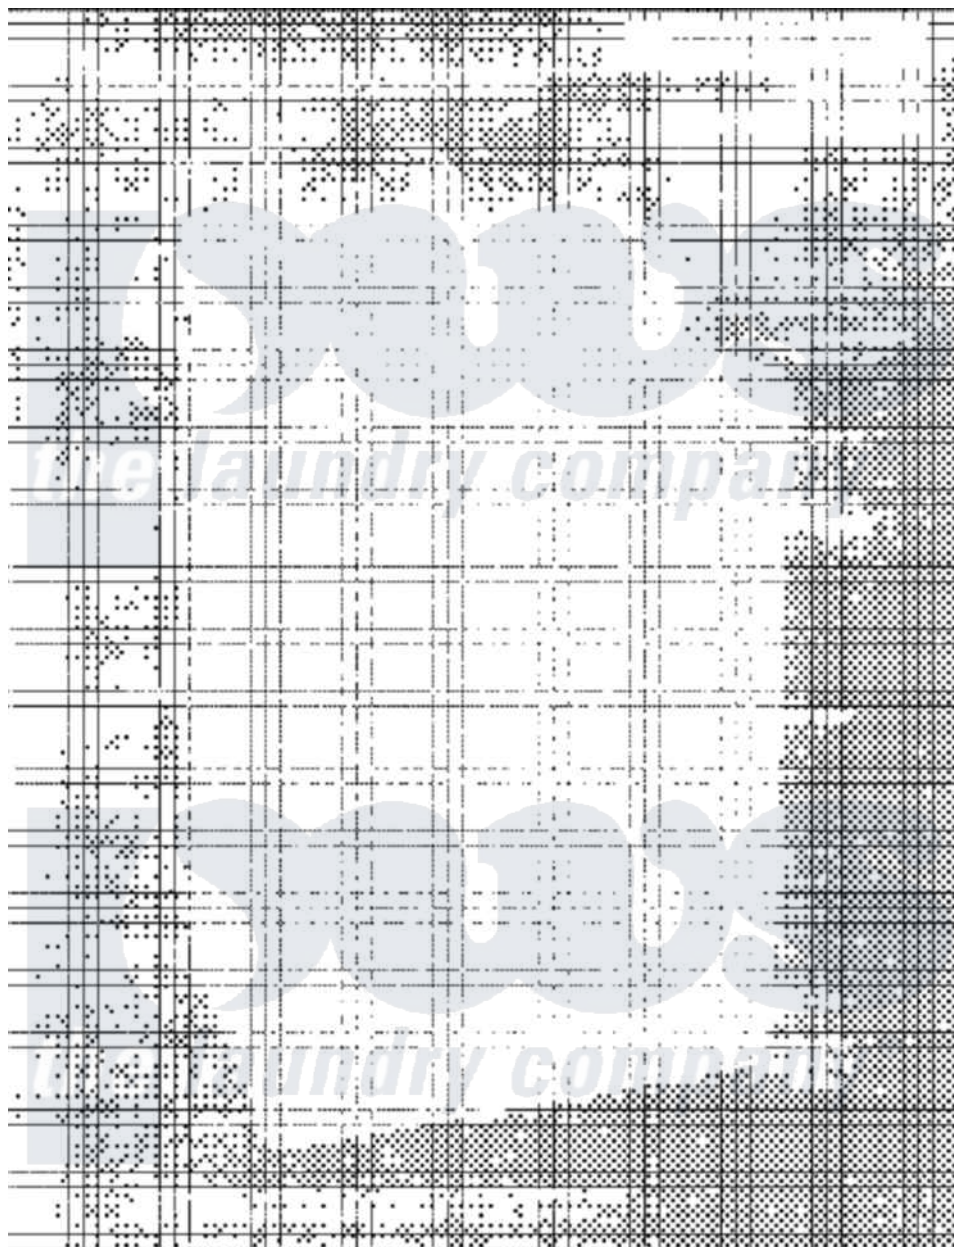

Maytag [Commercial Maytag A21CA Washer Parts](#) Parts Diagram 01 - FRONT VIEW

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
001	205415	<a href="#">279347</a>		Switch-Lid
002	203188		Not Available	TIMER ACCESS DOOR (WHT)
003	NLA		Not Available	TOP COVER (WHT)
004	NLA		Not Available	MAYTAG COIN SLIDE
005	NLA		Not Available	CABINET (WHT)
006	204051	<a href="#">22204051</a>		Knob
007	<a href="#">204109</a>			Light, Signal
008	<a href="#">204439</a>			Screw And Fstner Assembly
009	<a href="#">204445</a>			Screw And Fastener Assembly
010	NLA		Not Available	CONTROL CENTER (WHT)
011	NLA		Not Available	CONTROL CENTER (WHT)
012	NLA		Not Available	CONTROL CENTER (WHT)
013	<a href="#">204968</a>			Plunger And Bracket Assembly--W
014	NLA		Not Available	COIN SLIDE
015	NLA		Not Available	COIN SLIDE

016	<a href="#">205353</a>		Switch, DiAI-A-Fabric
017	NLA	Not Available	TOP COVER (WHT)
018	NLA	Not Available	CONTROL COVER (WHT)
019	NLA	Not Available	CONTROL PANEL W/LENS
020	<a href="#">210385</a>		Lock Nut For Adjustable Leg
021	<a href="#">210684</a>		Foot, Adjustable Leg
022	<a href="#">211726</a>		Hinge, Ball Lid
023	<a href="#">212519</a>	<a href="#">488234</a>	Screw 8-32 X 1/4
024	<a href="#">212716</a>		Bumper, Lid
025	212998	Not Available	PANEL, FRONT (WHT)
026	<a href="#">213007</a>		Xfor Cabinet See Cabinet, Back
027	NLA	Not Available	GASKET, CONTROL CENTER
028	NLA	Not Available	GASKET, CONTROL CENTER
029	<a href="#">213099</a>		Lens For Control Panel
030	<a href="#">213949</a>		Screw, No.8-18 X 5/16 Inch
031	<a href="#">214610</a>		Bumper, Lid
032	NLA	Not Available	LID (WHT)
033	Y302699	<a href="#">22003428</a>	Leg, Adjustable
034	<a href="#">214650</a>		Screw For 2-4051 Knob
035	214901	Not Available	LID-WHITE
036	212982	<a href="#">22001650</a>	Fastener, Spring

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>