


Maytag AT18MC1 04 - CONTROL MODULE

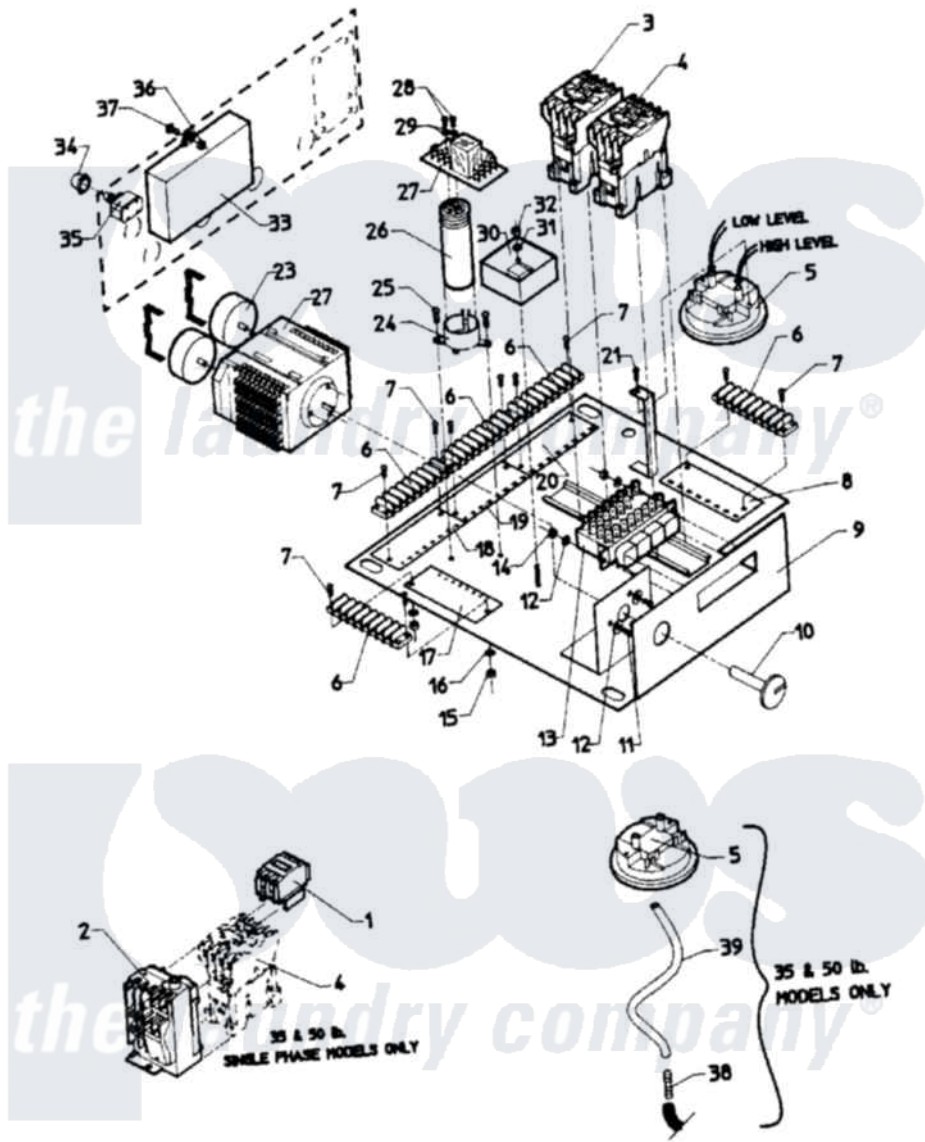

Maytag [Commercial Maytag AT18MC1 Washer Parts](#) Parts Diagram 04 - CONTROL MODULE
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	24001104		Not Available	CONTACTOR, AUX. ADDER
002	24001233			Protector, Overload
003	24001105	24002051		Contacto-
004	24001105	24002051		Contacto-
"	24001737			Relay
"	24001738			Relay
005	24001223		Not Available	SWITCH, DUAL LEVEL
"	NLA		Not Available	SWITCH, TRI LEVEL---N
006	24001412		Not Available	STRIP, TERMINAL
007	24001414	4450038		Screw
008	24001030		Not Available	DECAL,INSUL.TERM STIRP (33-40)
009	W10124350		Not Available	PART NUMBER NOT AVAILABLE
010	W10124350		Not Available	PART NUMBER NOT AVAILABLE
011	24001357			Screw, Stainless Steel

012	24001358		Washer, Flat
013	NLA	Not Available	SWITCH, CYCLE SELECTOR
014	NLA	Not Available	NUT, FIBERLOCK
015	24001417	7103P070-60	Nut, Top Pilot
016	24001415		Washer, S.s.
017	NLA	Not Available	DECAL,INSUL. TERM STRIP (1-8)
018	NLA	Not Available	DECAL,INSUL. TERM STRIP (9-16)
019	NLA	Not Available	DECAL,INSUL. TERM STRIP (17-24)
020	NLA	Not Available	DECAL,INSUL. TERM STRIP (25-32)
021	24001411	313806	Screw
NI	24001178		Kit, Timer Cycle
023	24001577		Motor, Timer
024	W10124350	Not Available	PART NUMBER NOT AVAILABLE
025	24001578	3196170	Screw
026	24001247		Capacitor, Door Lock
027	24001248	Not Available	PC BOARD, DOOR UNLOCK (110V)
"	24001742		Board, P.C.
028	24001580		Screw, S.s.
029	24001579		Washer, S.s.
030	24001176		Kit, Timer Delay
031	24001295		Lockwasher, S.s.
032	24001419	W10139757	Nut
033	24001743		Switch, Motor
034	24001744	Not Available	BOOT, PUSH BUTTON
035	24001254		Switch, Momentary
036	24001425		Nut, Fiberlock, Pltd
037	24001745		Screw, Stainless Steel
038	24001746	Not Available	COUPLER, HOSE (PRESS. SWTCH)
039	24001747	Not Available	EXTENSION, AIR LINE

