


Maytag DE18CM 05 - CONTROL PANEL (SERIES 03)

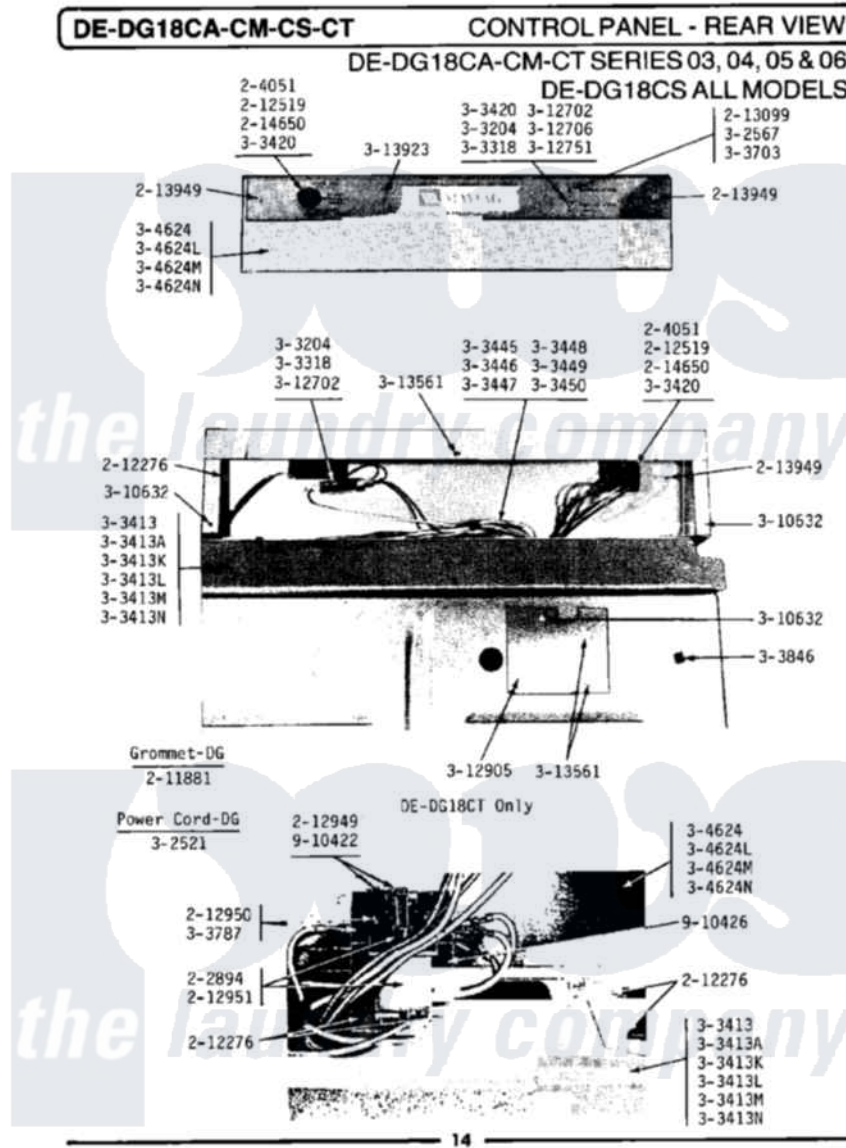

Maytag [Commercial Maytag DE18CM Dryer Parts](#) Parts Diagram 05 - CONTROL PANEL (SERIES 03)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	204051	22204051		Knob
002	212276	W10116760		Screw
003	212519	488234		Screw 8-32 X 1/4
004	212949	22001866		Screw, Relay
005	212950	M0227520		Screw-Tc No.6-32 X 13/16", Preform SwiTch
006	212951			Screw, No.6-32 X 1/4 Inch
007	213099			Lens For Control Panel
008	213949			Screw, No.8-18 X 5/16 Inch
009	214650			Screw For 2-4051 Knob
010	Y303204			Start Switch With Nuts
011	NLA		Not Available	TOP COVER-WHITE
012	NLA		Not Available	TOP COVER-ALMOND
013	NLA		Not Available	TOP COVER-HARVEST WHEAT
014	Y303420		Not Available	SELECTOR SWITCH
015	NLA		Not Available	MAIN WIRE HARNESS

016	Y303703		Pilot Light
017	NLA	Not Available	SCREW & WASHER ASSY.
018	NLA	Not Available	CONTROL COVER-WHITE
019	NLA	Not Available	CONTROL COVER-ALMOND
020	NLA	Not Available	CONTROL COVER-HARVEST WHEAT
021	Y310632	1163839	Screw
022	Y311423	489483	Screw 10-32 X 1/2
023	NLA	Not Available	BACK FOR CONTROL PANEL
024	Y312702		Knurled Nut, Start Switch
025	Y312706	422617	Nut
026	312751		Lockwasher, Start Switch
027	Y312905	Not Available	COVER, TERMINAL
028	Y313561		Screw---NA
029	NLA	Not Available	CONTROL PANEL

