



[Maytag Commercial Maytag DE18CS Dryer Parts Parts Diagram 02 - REAR VIEW](#)  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	<a href="#">Y052740</a>	<a href="#">62739</a>		Nut, Lock
002	201385		Not Available	ELEM BK 1200
003	<a href="#">210684</a>			Foot, Adjustable Leg
004	<a href="#">211294</a>	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
005	Y302699	<a href="#">22003428</a>		Leg, Adjustable
006	NLA		Not Available	CABINET-WHITE
007	NLA		Not Available	CABINET-ALMOND
008	NLA		Not Available	CABINET-HARVEST WHEAT
009	Y303361		Not Available	BASE ASSY. (UPPER & LOWER)
010	NLA		Not Available	TOP COVER-WHITE
011	NLA		Not Available	TOP COVER-ALMOND
012	NLA		Not Available	TOP COVER-HARVEST WHEAT
013	<a href="#">Y303442</a>			EXHAUST DUCT ASSEMBLY
014	NLA		Not Available	SCREW & WASHER ASSY.

015	NLA	Not Available	CONTROL COVER-WHITE
016	NLA	Not Available	CONTROL COVER-ALMOND
017	NLA	Not Available	CONTROL COVER-HARVEST WHEAT
018	NLA	Not Available	OUTER CASE-WHITE
019	NLA	Not Available	OUTER CASE-ALMOND
020	NLA	Not Available	OUTER CASE-HARVEST WHEAT---NA
021	<a href="#">Y305086</a>		Adjustable Leg And Nut
022	Y310632	<a href="#">1163839</a>	Screw

