


Maytag DE24CS 01 - CS CONTROL PANEL

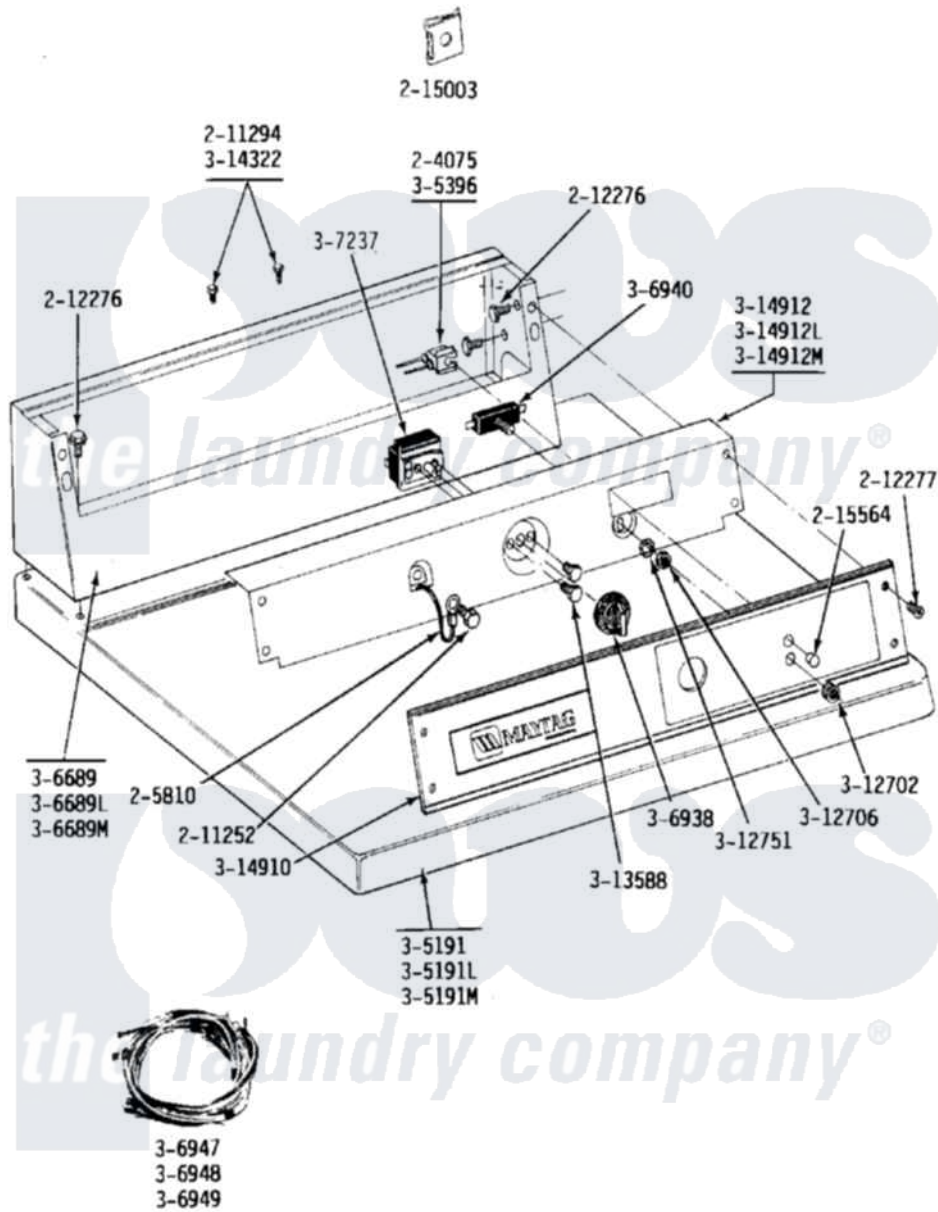

Maytag [Commercial Maytag DE24CS Dryer Parts](#) Parts Diagram 01 - CS CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	204075		Not Available	PILOT LAMP (DG MODELS ONLY)
002	205810			Wire, Ground
003	211252			Screw, Ground Wire
004	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
005	212276	W10116760		Screw
006	212277			Screw, No.8 X 1/2 Inch
007	215003			Fastener, Panel And Bracket
008	215564			Lens, Indicator Light
009	Y305191		Not Available	TOP COVER-WHITE
010	NLA		Not Available	TOP COVER-ALMOND
011	NLA		Not Available	TOP COVER-HARVEST WHEAT
012	Y305396		Not Available	LAMP, INDICATOR
013	NLA		Not Available	CONTROL COVER (WHT)
014	NLA		Not Available	CONTROL COVER ASSY----NA

015	NLA		Not Available	CONTROL COVER ASSY
016	306938			Knob, Selector Switch
017	307237	W10327105		Switch, Cycle Selection
018	306940	W10149462		Switch, Push-To-Start
020	NLA		Not Available	MAIN WIRE HARNESS - DE
021	NLA		Not Available	MAIN WIRE HARNESS - DE
022	Y312702			Knurled Nut, Start Switch
023	Y312706	422617		Nut
024	312751			Lockwasher, Start Switch
025	Y313588	488234		Screw 8-32 X 1/4
026	Y314322	211251		Screw, Transformer
027	NLA		Not Available	CONTROL PANEL COMMERCIAL DRYER
028	314912		Not Available	BRACKET, CONTROL PANEL (WHT)
029	NLA		Not Available	BACK UP PLATE-ALMOND
030	NLA		Not Available	BACK UP PLATE-HARVEST WHEAT

