


Maytag DE26CD 03 - CONTROL PANEL-CD MODELS

SECTION: CD CONTROL PANEL
 MODEL: DE-D626CD

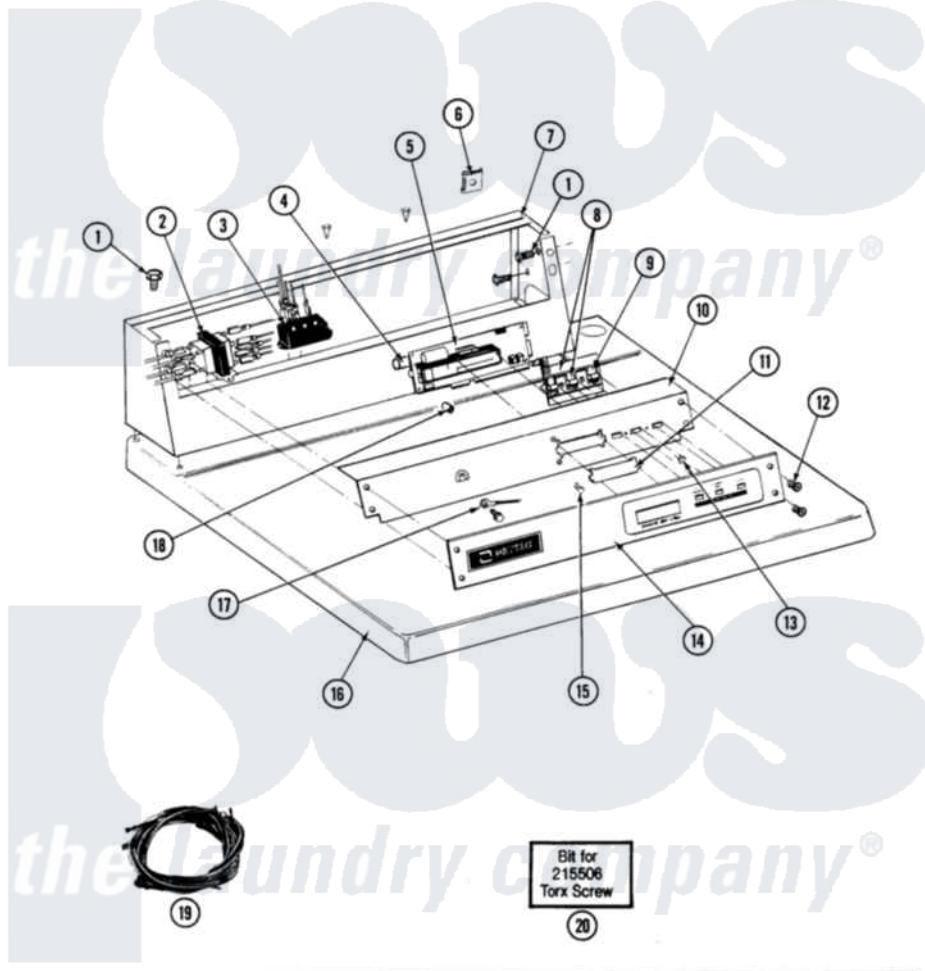

Issue Date: 11/90

12

Maytag [Commercial Maytag DE26CD Dryer Parts](#) Parts Diagram 03 - CONTROL PANEL-CD MODELS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	212276	W10116760		Screw
002	207766			Transformer
"	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
003	206824	W10133335		Relay, Motor
"	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
004	206828			Battery
005	215510		Not Available	SUPPORT, PC BOARD
"	NLA		Not Available	CIRCUIT BOARD ASSY
006	215003			Fastener, Panel And Bracket
007	212276	W10116760		Screw
"	NLA		Not Available	CONTROL COVER (WHT)
008	306694			Backup Plate With Switch
009	215517	W10131113		Push Button
010	NLA		Not Available	BACK BRACKET, CNTRL PNL (WHT)

011	215515	Not Available	COVER, DISPLAY
012	215506		Screw, Control Panel Overlay
013	215527	W10140652	Screw, 6-20 X 1/2
014	NLA	Not Available	CONTROL PANEL
015	215526		Screw, Circuit Board
016	307105	Not Available	COVER, TOP ASSY. (WHT)
"	NLA	Not Available	(ALM)
017	205810		Wire, Ground
"	211252		Screw, Ground Wire
018	Y215513		Standoff, Circuit Board
019	NLA	Not Available	WIRE HARNESS
"	Y307455		Wire Harness
020	Y038227	Not Available	TORX BIT (215506 SCREW)

the laundry company[®]

the laundry company[®]

the laundry company[®]