


Maytag DE26CS 04 - FRONT VIEW

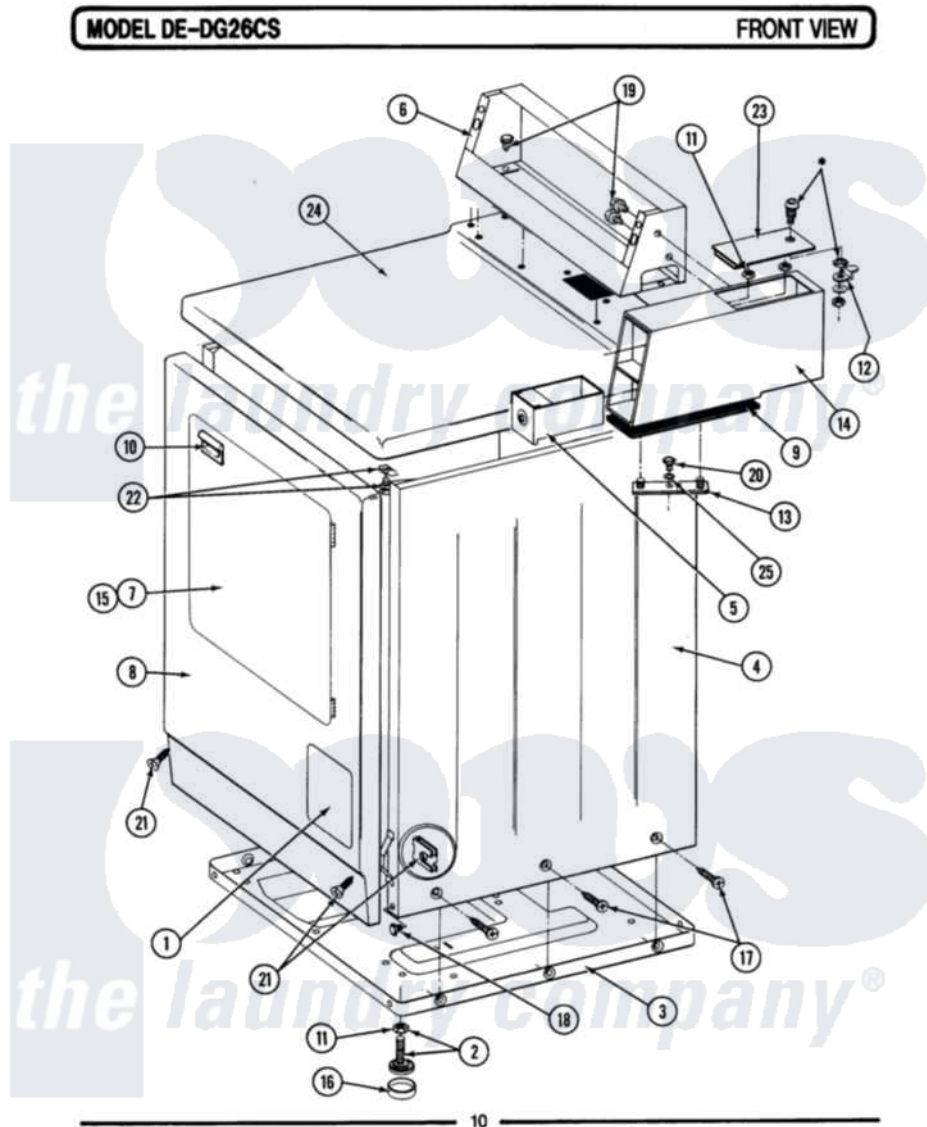

Maytag [Commercial Maytag DE26CS Dryer Parts](#) Parts Diagram 04 - FRONT VIEW
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	NLA		Not Available	PART NOT USED
002	Y305086			Adjustable Leg And Nut
003	Y303361		Not Available	BASE ASSY. (UPPER & LOWER)
004	NLA		Not Available	CABINET (WHT)
005	205423	208883		Coin Box K
"	205423L	208883		Coin Box K
"	205423M	208883		Coin Box K
006	NLA		Not Available	CONTROL COVER (WHT)
007	NLA		Not Available	(ALM)
"	Y307111		Not Available	DOOR ASSY. COMPLETE (WHT)
008	NLA		Not Available	PANEL, FRONT (WHT)
009	214660			Gasket, Control Center
010	314946			Handle White
"	314972			Handle Door ALM
"	NLA		Not Available	(H. WHEAT)

011	Y052740	62739		Nut, Lock
012	213750	W10133266		Cam-Lock
013	NLA		Not Available	MTG. STRAP---NA
014	206956	22001405		Case, Coin Slide
"	206956L	22001405		Case, Coin Slide
"	206956M	22001405		Case, Coin Slide
015	314966			Panel, Outer
"	NLA		Not Available	(ALM)
016	Y314137			Foot, Rubber
017	213007			Xfor Cabinet See Cabinet, Back
018	Y310632	1163839		Screw
019	212276	W10116760		Screw
020	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
021	204439			Screw And Fstner Assembly
022	204445			Screw And Fastener Assembly
023	203188		Not Available	TIMER ACCESS DOOR (WHT)
"	203188L		Not Available	ACCESS DOOR-ALMOND
"	203188M		Not Available	ACCESS DOOR-HARVEST WHEAT
024	307105		Not Available	COVER, TOP ASSY. (WHT)
"	NLA		Not Available	(ALM)
025	910309			Washer, Mounting Strap

