


Maytag DG16CA 01 - FRONT VIEW

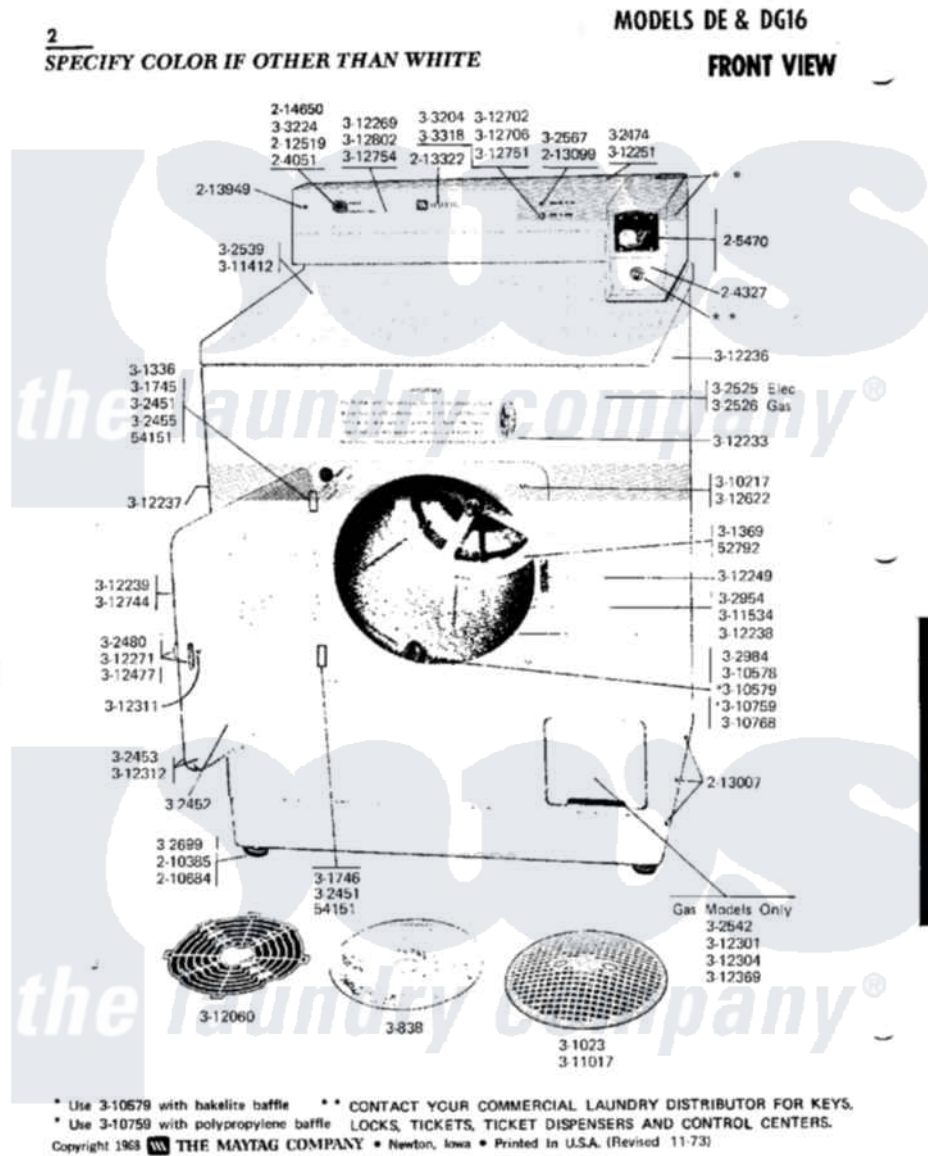

Maytag Commercial Maytag DG16CA Dryer Parts Parts Diagram 01 - FRONT VIEW

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	NLA		Not Available	MAYTAG COIN SLIDE
002	300838			Lint Screen
003	301023			Lint Screen Retainer
004	NLA		Not Available	SHAFT WITH SPIDER
005	NLA		Not Available	DOOR HINGE ON CABINET
006	301746	Y304298		Hinge - Lower
007	NLA		Not Available	HINGE ASSEMBLY---N
008	NLA		Not Available	DOOR LINER
009	NLA		Not Available	DOOR-WHITE
010	NLA		Not Available	CONTROL COVER-WHITE
011	NLA		Not Available	LATCH
012	NLA		Not Available	FRONT PANEL-WHITE
013	NLA		Not Available	TOP COVER-WHITE
014	NLA		Not Available	ACCESS DOOR (WHITE)
015	NLA		Not Available	PILOT LIGHT
016	Y302699	22003428		Leg, Adjustable

017	NLA		Not Available	DRUM W/FELT - PORCELAIN
018	NLA		Not Available	BAFFLE ASSEMBLY - POLY
019	Y303224			Selector Switch
020	NLA		Not Available	NO LONGER AVAILABLE
021	NLA		Not Available	WASHER
022	NLA		Not Available	SCREW, No.10-24 X 11/16 INCH
023	Y310759			Screw, Tumbler Baffles
024	NLA		Not Available	WASHER
025	Y311017			Retainer Spring
026	NLA		Not Available	SCREW
027	311534			Felt Seal
028	NLA		Not Available	CLIP FOR DOOR HARNESS
029	Y312060		Not Available	SHIELD FOR SPIDER---C
030	NLA		Not Available	DRYING INSTRUCTION OVERLAY
031	NLA		Not Available	PANEL-WHITE
032	NLA		Not Available	PANEL-WHITE
033	312238			Door Seal
034	NLA		Not Available	DOOR PANEL-WHITE
035	NLA		Not Available	STRIKE PLATE
036	NLA		Not Available	BACK FOR CONTROL PANEL
037	NLA		Not Available	ANGLE FOR CABINET - DRYER
038	NLA		Not Available	CONTROL PANEL
039	NLA		Not Available	HANDLE
040	NLA		Not Available	BUSHING FOR ACCESS STUD
041	Y312304	22001866		Screw, Relay
042	NLA		Not Available	SCREW---NA
043	NLA		Not Available	INSULATION - DOOR
044	312369			Sleeve, Access Panel Stud Part Not Used
045	NLA		Not Available	MAGNETIC LATCH RETAINER
046	312622	22001496		Front Panel Fastener And Screw
047	Y312702			Knurled Nut, Start Switch
048	Y312706	422617		Nut
049	Y312744			Door Panel-White
050	312751			Lockwasher, Start Switch
051	NLA		Not Available	CONTROL PANEL
052	NLA		Not Available	CONTROL PANEL
053	204051	22204051		Knob
054	NLA		Not Available	COIN BOX-WHITE---NA
055	210385			Lock Nut For Adjustable Leg
056	210684			Foot, Adjustable Leg
057	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
058	212276	W10116760		Screw
059	212519	488234		Screw 8-32 X 1/4
060	213007			Xfor Cabinet See Cabinet, Back
061	213099			Lens For Control Panel
062	213322		Not Available	MAYTAG DECAL
063	213949			Screw, No.8-18 X 5/16 Inch

064	NLA	Not Available	SCREW, 1 1/4-20 X 5/16
065	NLA	Not Available	SCREW, No.4-40 X 1/4
066	214650		Screw For 2-4051 Knob
067	Y301336		Door Switch
068	Y302455		Switch
069	Y303204		Start Switch With Nuts
070	Y303318		Switch Assembly With Hex Nu

