


Maytag DG18CS 03 - CONTROL PANEL-REAR VIEW

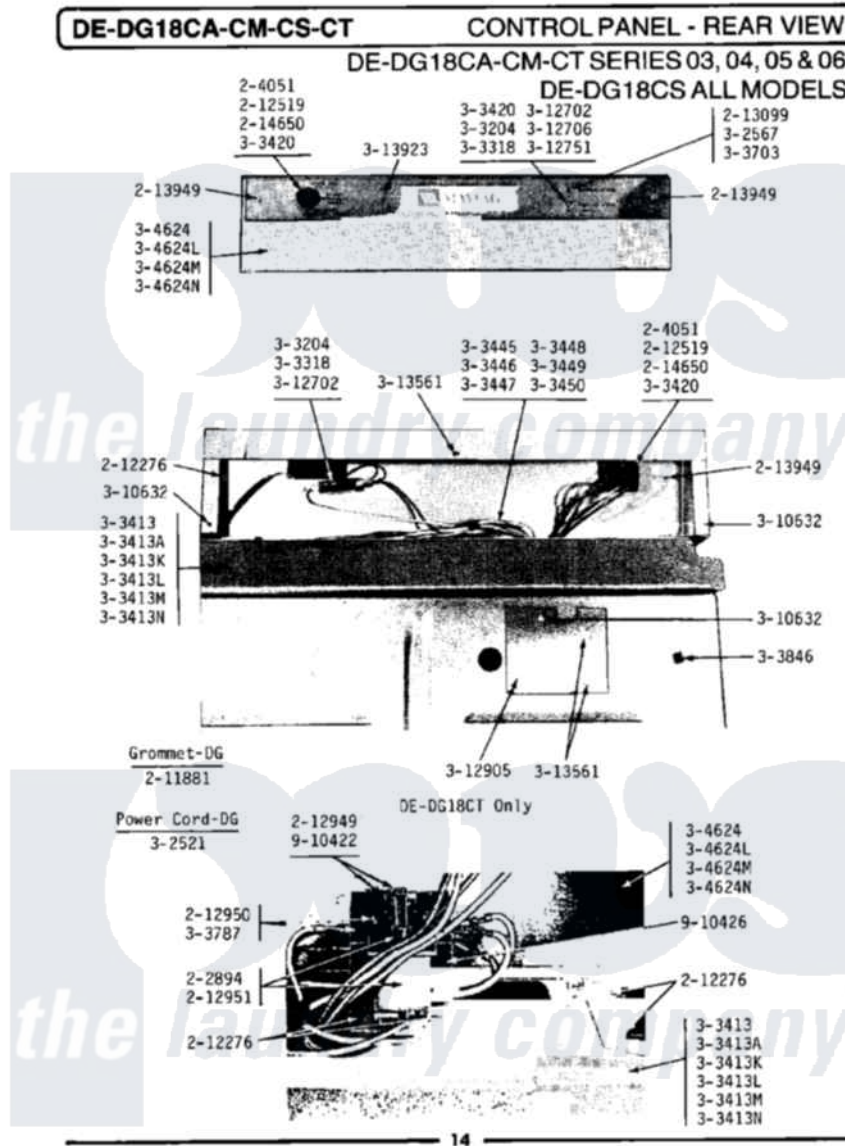

Maytag Commercial Maytag DG18CS Dryer Parts Parts Diagram 03 - CONTROL PANEL-REAR VIEW
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	204051	22204051		Knob
002	211881			Grommet, Cord Part Not Used-Gas Models Only
003	212276	W10116760		Screw
004	212519	488234		Screw 8-32 X 1/4
005	212949	22001866		Screw, Relay
006	212950	M0227520		Screw-Tc No.6-32 X 13/16", Preform SwiTch
007	212951			Screw, No.6-32 X 1/4 Inch
008	213099			Lens For Control Panel
009	213949			Screw, No.8-18 X 5/16 Inch
010	214650			Screw For 2-4051 Knob
011	302521		Not Available	CORD, POWER PART NOT USED-GAS MODELS ONLY
012	Y303204			Start Switch With Nuts
013	NLA		Not Available	TOP COVER-WHITE
014	NLA		Not Available	TOP COVER-ALMOND

015	NLA		Not Available	TOP COVER-HARVEST WHEAT
016	Y303420		Not Available	SELECTOR SWITCH
017	Y303445		Not Available	MAIN WIRE HARNESS
018	Y303703			Pilot Light
019	NLA		Not Available	SCREW & WASHER ASSY.
020	NLA		Not Available	CONTROL COVER-WHITE
021	NLA		Not Available	CONTROL COVER-ALMOND
022	NLA		Not Available	CONTROL COVER-HARVEST WHEAT
023	Y310632	1163839		Screw
024	Y311423	489483		Screw 10-32 X 1/2
025	NLA		Not Available	BACK FOR CONTROL PANEL
026	Y312702			Knurled Nut, Start Switch
027	Y312706	422617		Nut
028	312751			Lockwasher, Start Switch
029	Y312905		Not Available	COVER, TERMINAL
030	Y313561			Screw---NA
031	NLA		Not Available	CONTROL PANEL

