


# Maytag DG18CS 04 - CS CONTROL CENTER

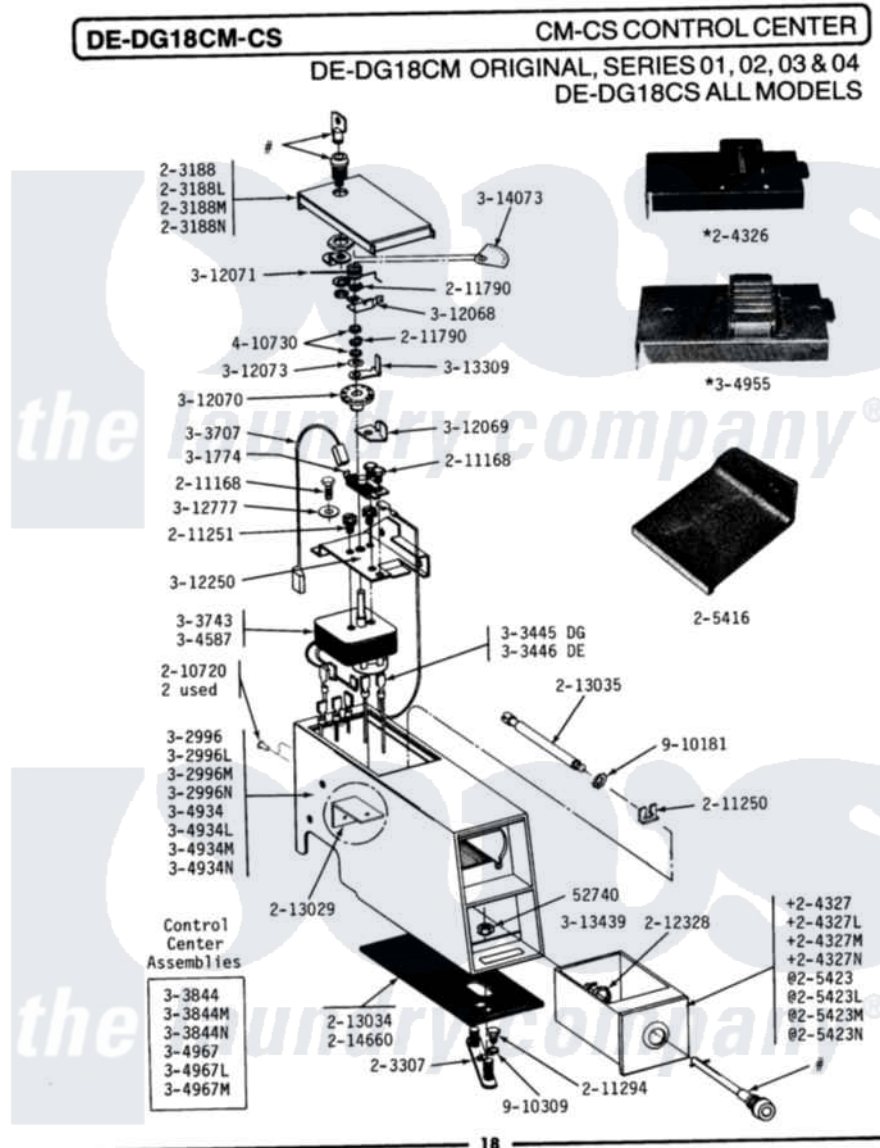

Maytag [Commercial Maytag DG18CS Dryer Parts](#) Parts Diagram 04 - CS CONTROL CENTER  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	<a href="#">Y052740</a>	<a href="#">62739</a>		Nut, Lock
002	203188		Not Available	TIMER ACCESS DOOR (WHT)
003	203188L		Not Available	ACCESS DOOR-ALMOND
004	203188M		Not Available	ACCESS DOOR-HARVEST WHEAT
005	NLA		Not Available	MTG. STRAP---NA
006	NLA		Not Available	COIN DROP ASSEMBLY
007	NLA		Not Available	COIN BOX-WHITE---NA
008	NLA		Not Available	COIN BOX-ALMOND
009	NLA		Not Available	COIN BOX - HARVEST WHEAT
010	<a href="#">205416</a>			Guard For Coin Box
011	205423	<a href="#">208883</a>		Coin Box K
012	205423L	<a href="#">208883</a>		Coin Box K
013	205423M	<a href="#">208883</a>		Coin Box K
014	<a href="#">210720</a>			Rivet, Bearing To Tumbler Frnt

015	211168	<a href="#">W10139210</a>		Screw, 8-18 X 5/16
016	NLA		Not Available	FASTENER
017	<a href="#">211251</a>			Screw, Transformer
018	<a href="#">211294</a>	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
019	<a href="#">211790</a>			Lock Ring For Timer Shaft
020	212328	<a href="#">W10139762</a>		Hex Nut, 3/4-27
021	<a href="#">213029</a>			Timer Support Bracket
022	<a href="#">213035</a>			Bolt, Locking
023	<a href="#">214660</a>			Gasket, Control Center
024	<a href="#">Y301774</a>			Switch For Coin Slide
025	<a href="#">Y303707</a>			Wire Assembly
026	<a href="#">Y303743</a>			Timer
027	Y303445		Not Available	MAIN WIRE HARNESS
028	NLA		Not Available	MAIN WIRE HARNESS
029	NLA		Not Available	TIMER MOTOR
030	NLA		Not Available	OUTER CASE-WHITE
031	NLA		Not Available	OUTER CASE-ALMOND
032	NLA		Not Available	OUTER CASE-HARVEST WHEAT---NA
033	NLA		Not Available	COIN BOX COVER
034	NLA		Not Available	CONTROL CENTER-WHITE
035	NLA		Not Available	CONTROL CENTER-ALMOND
036	NLA		Not Available	CONTROL CENTER-HARVEST WHEA
037	<a href="#">Y312068</a>			Return Lever
038	<a href="#">Y312069</a>			Stop For Actuator
039	NLA		Not Available	RATCHET FOR TIMER
040	<a href="#">Y312071</a>			Return Spring For Actuator
041	<a href="#">312073</a>			Spring Washer
042	<a href="#">312250</a>			Timer Support Bracket
043	NLA		Not Available	WASHER
044	<a href="#">Y313309</a>			Timer Actuator Lever
045	Y313439		Not Available	INSTRUCTION LABEL
046	<a href="#">314073</a>			Time Indicator Gage
047	<a href="#">410730</a>			Washer
048	<a href="#">910181</a>			Lockwasher, Terminal Block
049	<a href="#">910309</a>			Washer, Mounting Strap

