



[Maytag Commercial Maytag DG18CT Dryer Parts Parts Diagram 03 - REAR VIEW](#)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	Y052740	62739		Nut, Lock
002	210385			Lock Nut For Adjustable Leg
003	210684			Foot, Adjustable Leg
004	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
005	211881			Grommet, Cord Part Not Used-Gas Models Only
006	302521		Not Available	CORD, POWER PART NOT USED-GAS MODELS ONLY
007	Y302699	22003428		Leg, Adjustable
008	NLA		Not Available	CABINET-WHITE
009	NLA		Not Available	CABINET-ALMOND
010	NLA		Not Available	CABINET-HARVEST WHEAT
011	Y303361		Not Available	BASE ASSY. (UPPER & LOWER)
012	Y303383	33001735		Pipe And Bracket Assembly Series 18 Not Needed Use Vavle
013	NLA		Not Available	TOP COVER-WHITE

014	NLA	Not Available	TOP COVER-ALMOND
015	NLA	Not Available	TOP COVER-HARVEST WHEAT
016	Y303442		EXHAUST DUCT ASSEMBLY
017	NLA	Not Available	SCREW & WASHER ASSY.
018	NLA	Not Available	CONTROL COVER-WHITE
019	NLA	Not Available	CONTROL COVER-ALMOND
020	NLA	Not Available	CONTROL COVER-HARVEST WHEAT
021	NLA	Not Available	OUTER CASE-WHITE
022	NLA	Not Available	OUTER CASE-ALMOND
023	NLA	Not Available	OUTER CASE-HARVEST WHEAT----NA
024	Y305086		Adjustable Leg And Nut
025	Y310632	1163839	Screw
026	Y312905	Not Available	COVER, TERMINAL
027	Y312951	Not Available	ACCESS COVER, BACK
028	Y313559		Screw
029	Y313561		Screw----NA
030	Y314137		Foot, Rubber

