


Maytag DG19CT 03 - DOOR

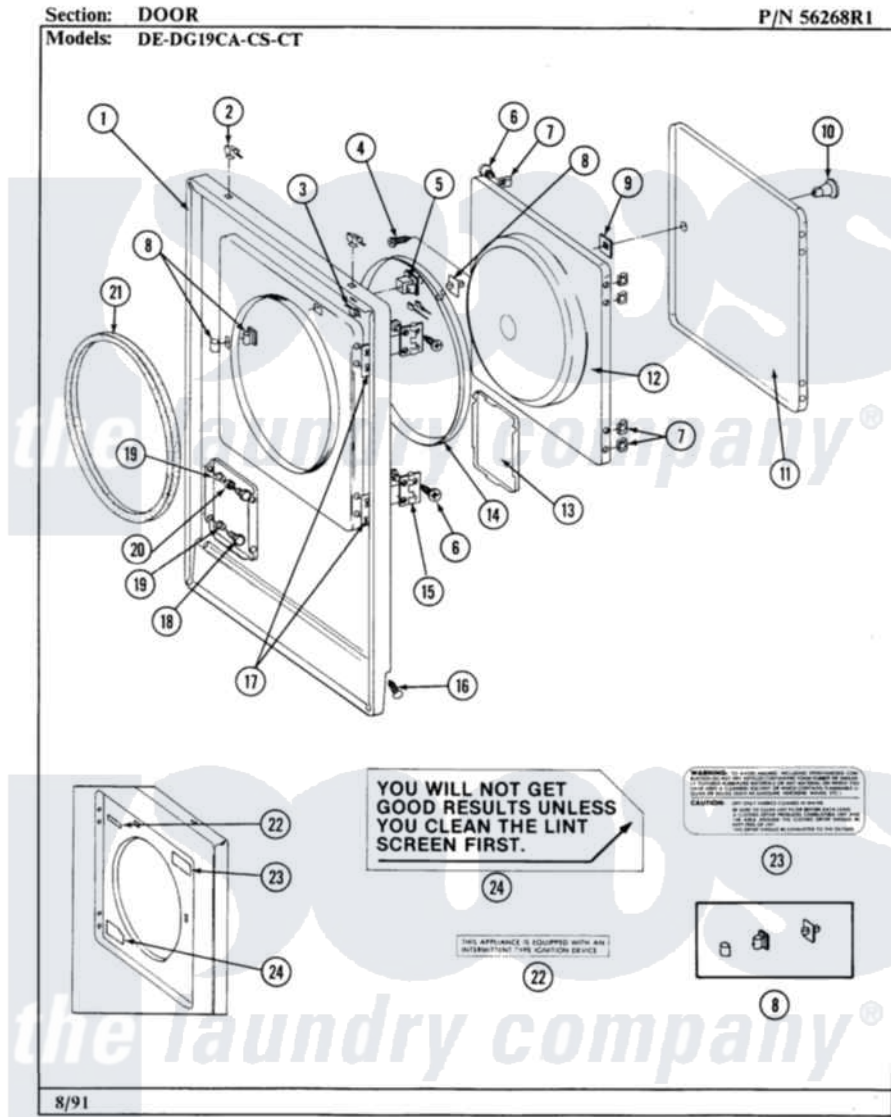

24

Maytag [Commercial Maytag DG19CT Dryer Parts](#) Parts Diagram 03 - DOOR

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
001	NLA		Not Available	FRONT PANEL (WHT)
002	212982	22001650		Fastener, Spring
003	Y310376			Clip, Door Switch Harness
004	NLA		Not Available	SCREW, DOOR KNOB
005	Y304576	W10169313		Switch-Dor
"	Y305754	W10169313		Switch-Dor
006	Y314062			Screw, Door Hinge And Panel
007	Y313910			Clip, Door Liner To Outer Panel
008	306436			Door Latch Kit--W
009	Y313911			Door Strike Retainer
010	NLA		Not Available	KNOB & SCREW
011	NLA		Not Available	(ALM)
"	Y306668			DOOR (WHT)
012	NLA		Not Available	INNER DOOR W/KNOB
013	NLA		Not Available	ACCESS DOOR (WHT)
014	314077			Door Seal

015	Y304577	33001230	Hinge, Door
016	204439		Screw And Fstner Assembly
017	Y313907		Fastener, Twin
018	212949	22001866	Screw, Relay
019	NLA	Not Available	BUSHING, ACCESS STUD
020	312369		Sleeve, Access Panel Stud Part Not Used
021	314286		Seal For Front Panel
022	NLA	Not Available	GAS IGNITION LABEL
023	Y313927		INSTRUCTION LABEL
024	Y313340		LABEL, LINT SCREEN INSTRUCTION

Howes
the laundry company[®]

Howes
the laundry company[®]

Howes
the laundry company[®]