


Maytag DG19CT 07 - CONTROL PANEL

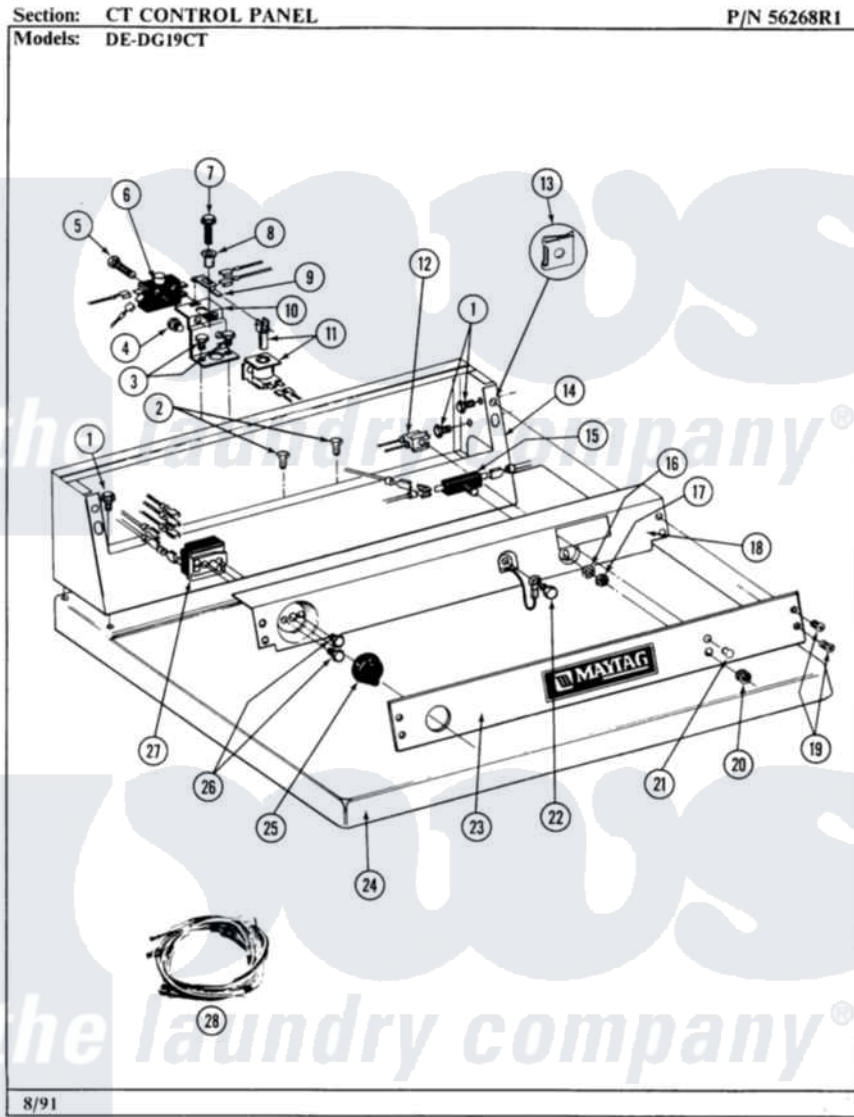

10

Maytag [Commercial Maytag DG19CT Dryer Parts](#) Parts Diagram 07 - CONTROL PANEL
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	212276	W10116760		Screw
002	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	Y314322	211251		Screw, Transformer
003	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
004	212951			Screw, No.6-32 X 1/4 Inch
005	212950	M0227520		Screw-Tc No.6-32 X 13/16", Preform SwiTch
006	Y303787		Not Available	SWITCH FOR RELAY
007	212949	22001866		Screw, Relay
008	NLA		Not Available	SPACER, ADVANCE RELAY
009	NLA		Not Available	SPRING LEVER, RELAY
010	NLA		Not Available	RELAY BRACKET
011	305393			Solenoid For Relay Assembly
012	NLA		Not Available	PILOT LIGHT
013	215003			Fastener, Panel And Bracket

014	305213		Console-White
"	NLA	Not Available	(ALM)
015	Y303318		Switch Assembly With Hex Nu
016	312751		Lockwasher, Start Switch
017	Y312706	422617	Nut
018	NLA	Not Available	BACK UP PLATE (WHT)
019	212277		Screw, No.8 X 1/2 Inch
020	Y312702		Knurled Nut, Start Switch
021	213099		Lens For Control Panel
022	211252		Screw, Ground Wire
023	NLA	Not Available	CONTROL PANEL
024	NLA	Not Available	(ALM)
"	Y305191	Not Available	TOP COVER-WHITE
025	205663		Knob For Selector Switch
026	Y313588	488234	Screw 8-32 X 1/4
027	Y303420	Not Available	SELECTOR SWITCH
028	NLA	Not Available	MAIN WIRE HARNESS

