


# Maytag DG21CA 01 - FRONT VIEW

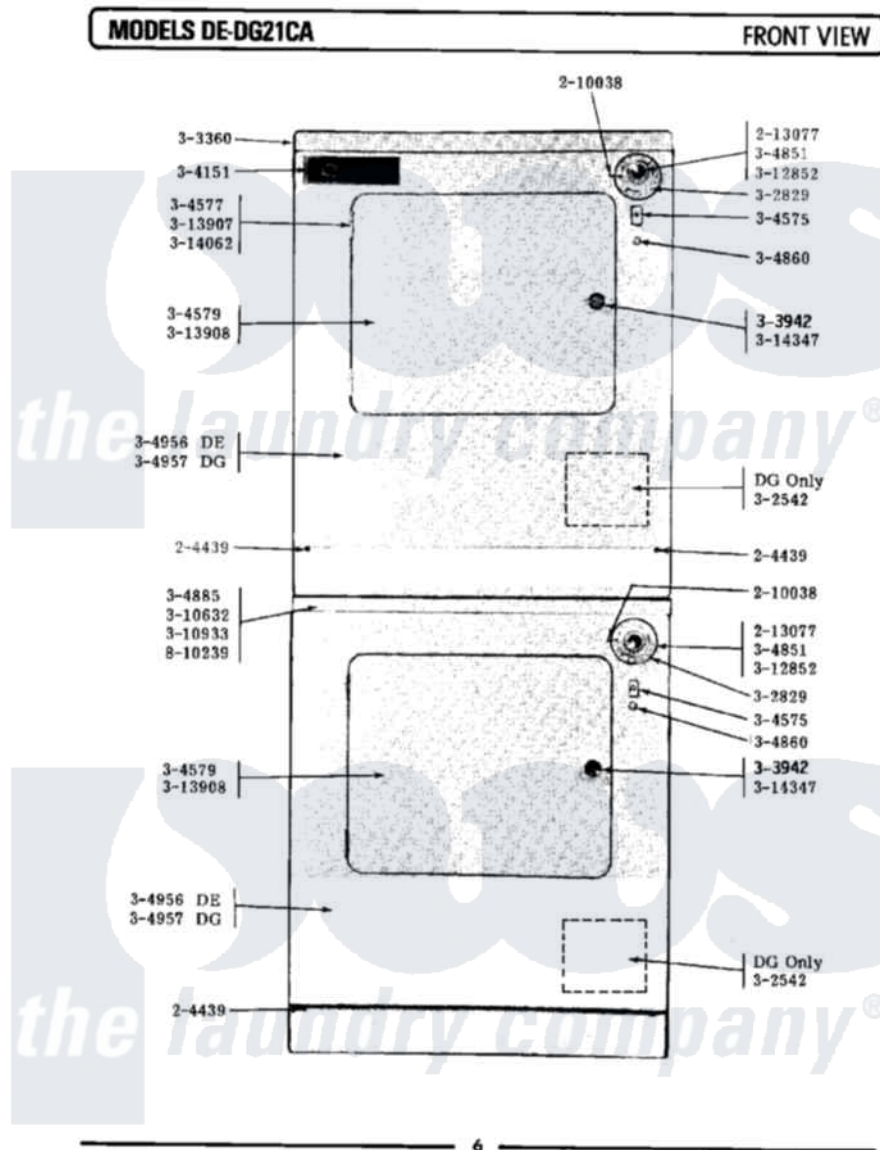

Maytag Commercial Maytag DG21CA Dryer Parts Parts Diagram 01 - FRONT VIEW  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	<a href="#">204439</a>			Screw And Fstner Assembly
002	NLA		Not Available	BUTTON MARKER
003	213077		Not Available	CAP FOR TIMER KNOB
004	NLA		Not Available	ACCESS DOOR (WHITE)
005	<a href="#">Y302829</a>			Timer Dial And Knob
006	NLA		Not Available	TOP COVER-WHITE
007	NLA		Not Available	NAME PLATE ON CONTROL PANEL
008	<a href="#">Y304575</a>	<a href="#">W10169313</a>		Switch-Dor
009	Y304577	<a href="#">33001230</a>		Hinge, Door
010	Y304579	<a href="#">Y306668</a>		DOOR (WHT)
011	NLA		Not Available	TIMER---NA
012	304860		Not Available	INDICATOR LIGHT
013	NLA		Not Available	SPACER ASSEMBLY
014	NLA		Not Available	FRONT PANEL - DG MODELS
015	NLA		Not Available	KNOB AND SCREW

016	Y310632	<a href="#">1163839</a>	Screw
017	310933	<a href="#">33002194</a>	Nut, Speed
018	<a href="#">312852</a>		Selector Knob-Clear Acrylic
019	<a href="#">Y313907</a>		Fastener, Twin
020	<a href="#">Y313908</a>		DOOR PANEL-WHITE
021	<a href="#">Y314062</a>		Screw, Door Hinge And Panel
022	NLA	Not Available	SCREW FOR DOOR KNOB----NA
023	NLA	Not Available	SCREW

