


MODELS DE-DG21CA

FRONT PANEL

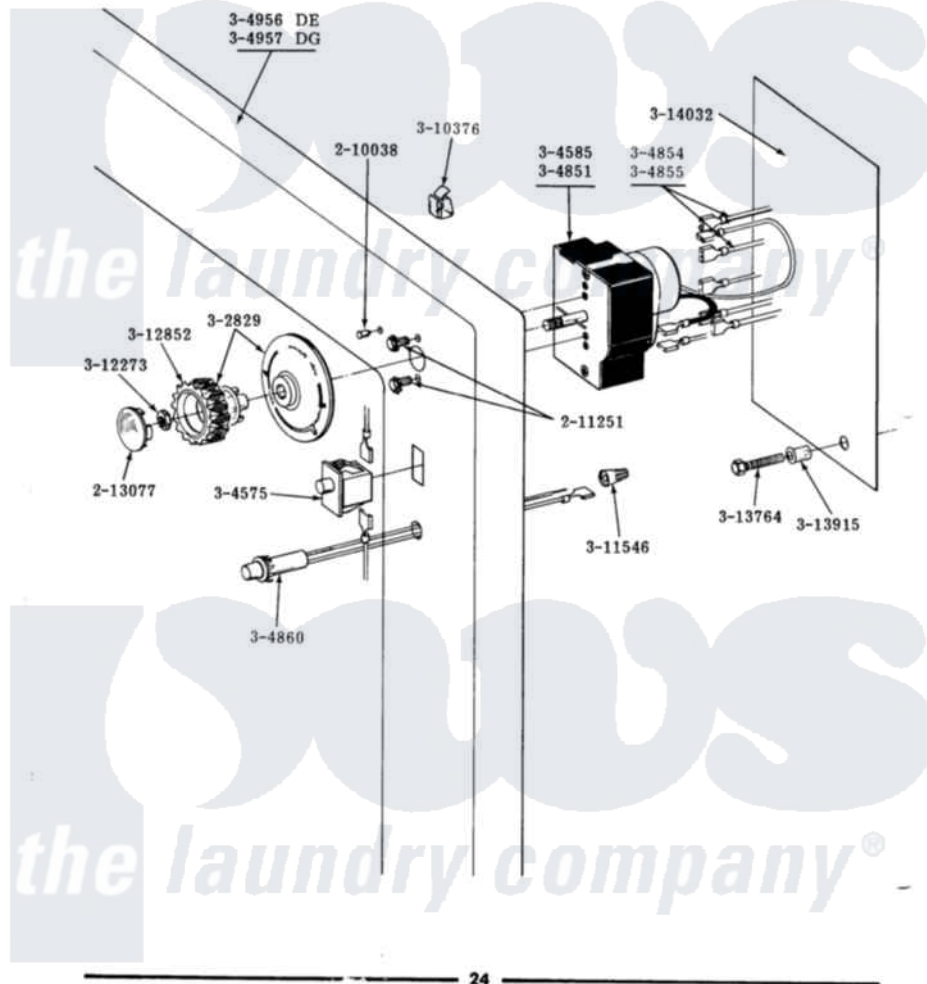

Maytag Commercial Maytag DG21CA Dryer Parts Parts Diagram 03 - FRONT PANEL

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	NLA		Not Available	BUTTON MARKER
002	<a href="#">211251</a>			Screw, Transformer
003	213077		Not Available	CAP FOR TIMER KNOB
004	<a href="#">Y302829</a>			Timer Dial And Knob
005	<a href="#">Y304575</a>	<a href="#">W10169313</a>		Switch-Dor
006	<a href="#">Y304585</a>			Timer Motor RPR For 305214 Timer Only
007	NLA		Not Available	TIMER---NA
008	NLA		Not Available	MAIN WIRE HARNESS
009	304860		Not Available	INDICATOR LIGHT
010	NLA		Not Available	FRONT PANEL - DG MODELS
011	<a href="#">Y310376</a>			Clip, Door Switch Harness
012	311546	<a href="#">911445</a>		Wire Connector
013	<a href="#">312273</a>			Nut, Control Knob
014	<a href="#">312852</a>			Selector Knob-Clear Acrylic
015	NLA		Not Available	SCREW

