


# Maytag DG21CS 04 - CONTROL CENTER

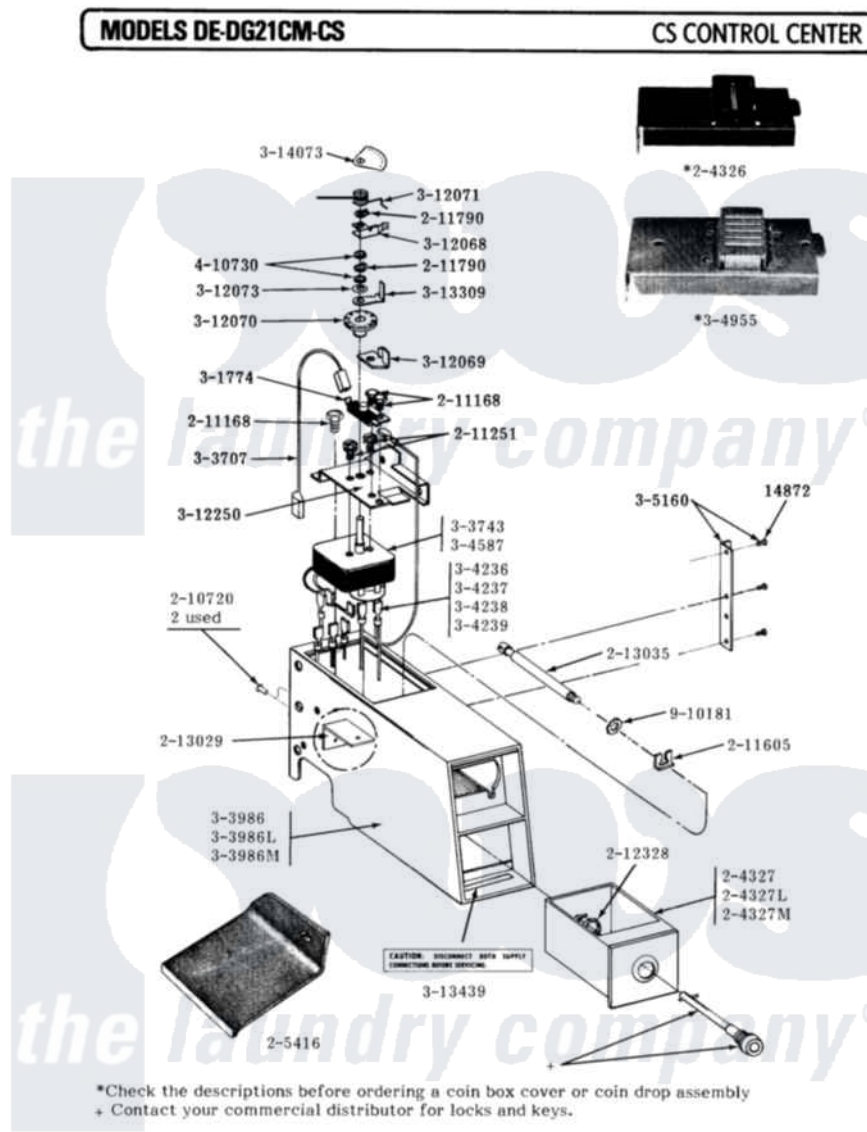

Maytag [Commercial Maytag DG21CS Dryer Parts](#) Parts Diagram 04 - CONTROL CENTER  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	<a href="#">Y014872</a>			Screw, Coin Meter Stop -
002	NLA		Not Available	COIN BOX-WHITE----NA
003	<a href="#">205416</a>			Guard For Coin Box
004	<a href="#">210720</a>			Rivet, Bearing To Tumbler Frnt
005	211168	<a href="#">W10139210</a>		Screw, 8-18 X 5/16
006	<a href="#">211251</a>			Screw, Transformer
007	<a href="#">211605</a>			Bezel, Timer Dial
008	<a href="#">211790</a>			Lock Ring For Timer Shaft
009	212328	<a href="#">W10139762</a>		Hex Nut, 3/4-27
010	<a href="#">213029</a>			Timer Support Bracket
011	<a href="#">213035</a>			Bolt, Locking
012	<a href="#">Y301774</a>			Switch For Coin Slide
013	<a href="#">Y303707</a>			Wire Assembly
014	<a href="#">Y303743</a>			Timer
015	NLA		Not Available	OUTER CASE-WHITE
016	NLA		Not Available	WIRE HARNESS-UPPER

017	NLA	Not Available	WIRE HARNESS-LOWER
018	NLA	Not Available	TIMER MOTOR
019	NLA	Not Available	COIN BOX COVER
020	NLA	Not Available	COIN METER STOP WITH SCREWS
021	<a href="#">Y312068</a>		Return Lever
022	<a href="#">Y312069</a>		Stop For Actuator
023	NLA	Not Available	RATCHET FOR TIMER
024	<a href="#">Y312071</a>		Return Spring For Actuator
025	<a href="#">312073</a>		Spring Washer
026	<a href="#">312250</a>		Timer Support Bracket
027	<a href="#">Y313309</a>		Timer Actuator Lever
028	Y313439	Not Available	INSTRUCTION LABEL
029	<a href="#">314073</a>		Time Indicator Gage
030	<a href="#">410730</a>		Washer
031	<a href="#">910181</a>		Lockwasher, Terminal Block

