


Maytag DG21CS 06 - FRONT PANEL & DOOR ASSEMBLY

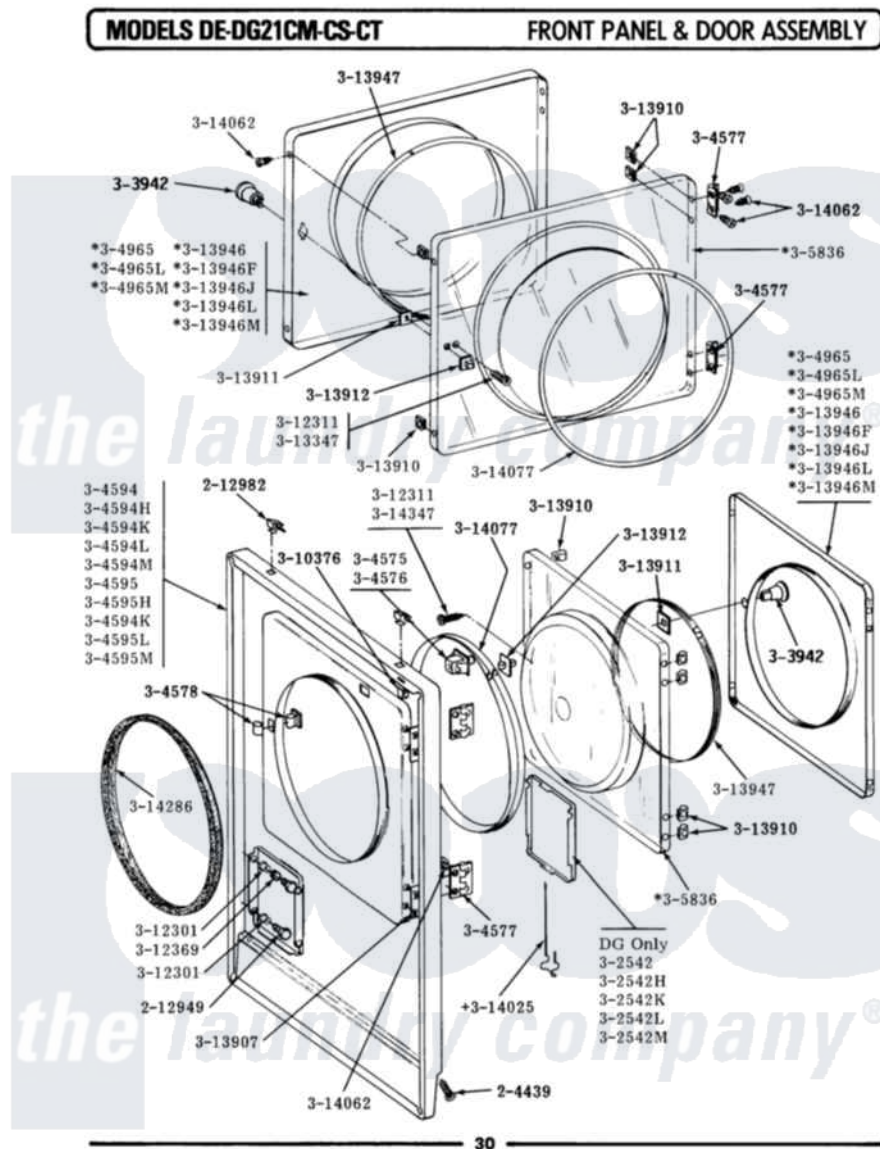

Maytag [Commercial Maytag DG21CS Dryer Parts](#) Parts Diagram 06 - FRONT PANEL & DOOR ASSEMBLY
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	204439			Screw And Fstner Assembly
002	212949	22001866		Screw, Relay
003	212982	22001650		Fastener, Spring
004	NLA		Not Available	ACCESS DOOR (WHITE)
005	Y304575	W10169313		Switch-Dor
006	Y304577	33001230		Hinge, Door
007	Y304578	LA-1003		Door Catch Kit
008	NLA		Not Available	FRONT PANEL-WHITE
009	304965			Door Complete-White
"	NLA		Not Available	DOOR COMPLETE, ALMOND
010	NLA		Not Available	INNER DOOR WITH KNOB & SCRE
011	NLA		Not Available	KNOB AND SCREW
012	Y310376			Clip, Door Switch Harness
013	NLA		Not Available	BUSHING FOR ACCESS STUD
014	NLA		Not Available	SCREW---NA

015	312369		Sleeve, Access Panel Stud Part Not Used
016	Y313340		LABEL, LINT SCREEN INSTRUCTION
017	Y313907		Fastener, Twin
018	Y313910		Clip, Door Liner To Outer Panel
019	Y313911		Door Strike Retainer
020	Y313912	306436	Door Latch Kit--W
021	Y313927		INSTRUCTION LABEL
022	NLA	Not Available	DOOR PANEL-ALMOND
"	Y313946	Not Available	DOOR PANEL-WHITE
023	Y313947		Gasket For Window
024	Y314025		Latch For Access Door
025	Y314062		Screw, Door Hinge And Panel
026	314077		Door Seal
027	NLA	Not Available	GAS IGNITION LABEL
028	314286		Seal For Front Panel
029	NLA	Not Available	SCREW FOR DOOR KNOB--- NA