


# Maytag DG22CA 03 - FRONT PANEL, TIMER, TIMER DIAL & KNOB

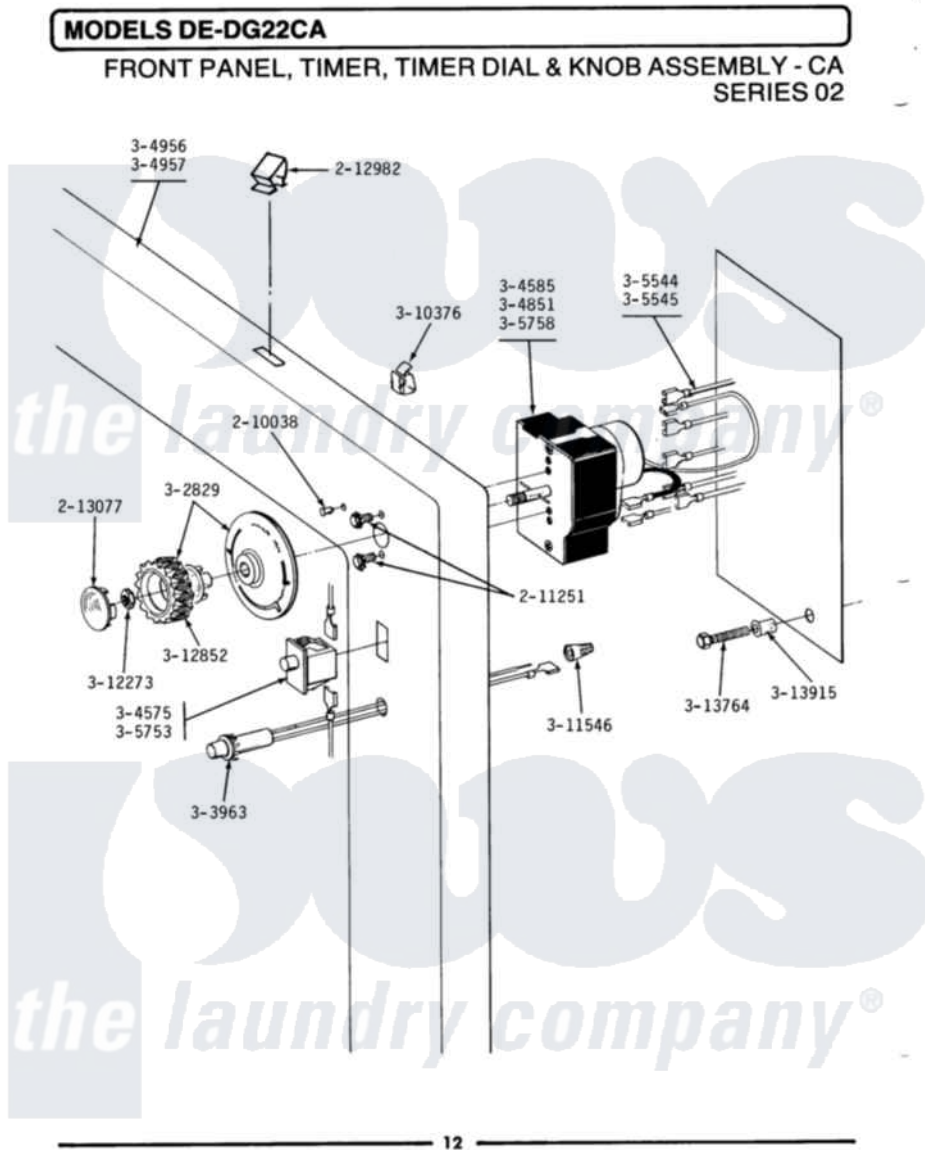

Maytag [Commercial Maytag DG22CA Dryer Parts](#) Parts Diagram 03 - FRONT PANEL, TIMER, TIMER DIAL & KNOB  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	NLA		Not Available	BUTTON MARKER
002	<a href="#">211251</a>			Screw, Transformer
003	212982	<a href="#">22001650</a>		Fastener, Spring
004	213077		Not Available	CAP FOR TIMER KNOB
005	<a href="#">Y302829</a>			Timer Dial And Knob
006	303963		Not Available	LIGHT, INDICATOR
007	<a href="#">Y304575</a>	<a href="#">W10169313</a>		Switch-Dor
008	<a href="#">Y304585</a>			Timer Motor RPR For 305214 Timer Only
009	NLA		Not Available	TIMER---NA
010	NLA		Not Available	FRONT PANEL - DG MODELS
011	NLA		Not Available	MAIN WIRE HARNESS
012	<a href="#">Y305753</a>	<a href="#">W10169313</a>		Switch-Dor
013	<a href="#">Y305758</a>			Timer 240-50
014	<a href="#">Y306194</a>			Main Wire Harness
015	<a href="#">Y310376</a>			Clip, Door Switch Harness

016	311546	<a href="#">911445</a>	Wire Connector	
017	<a href="#">312273</a>		Nut, Control Knob	
018	<a href="#">312852</a>		Selector Knob-Clear Acrylic	
019	NLA		Not Available	SCREW
020	NLA		Not Available	COVER, THREAD

