


Maytag DG24CS 01 - CS CONTROL PANEL

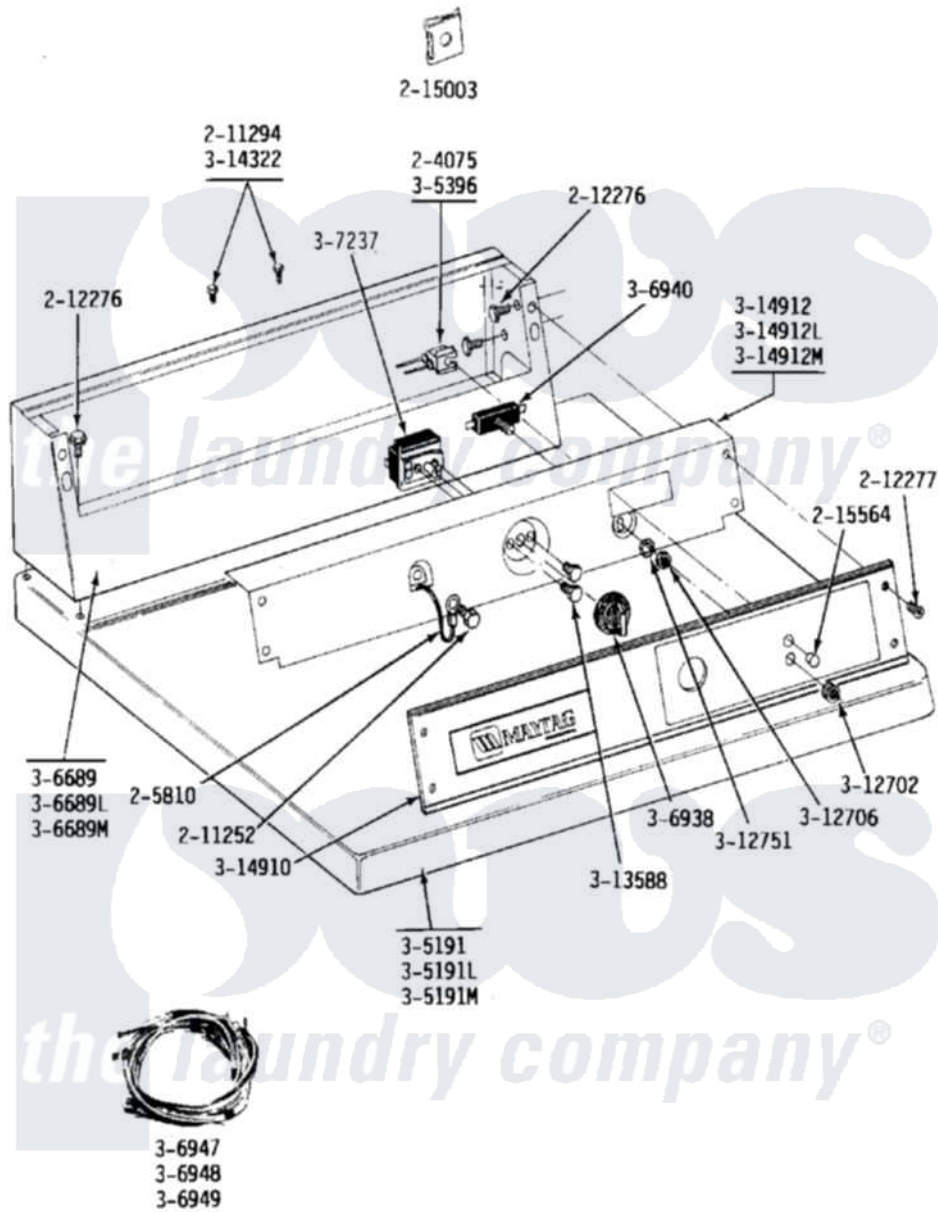

Maytag [Commercial Maytag DG24CS Dryer Parts](#) Parts Diagram 01 - CS CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	204075		Not Available	PILOT LAMP (DG MODELS ONLY)
002	205810			Wire, Ground
003	211252			Screw, Ground Wire
004	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
005	212276	W10116760		Screw
006	212277			Screw, No.8 X 1/2 Inch
007	215003			Fastener, Panel And Bracket
008	215564			Lens, Indicator Light
009	Y305191		Not Available	TOP COVER-WHITE
010	NLA		Not Available	TOP COVER-ALMOND
011	NLA		Not Available	TOP COVER-HARVEST WHEAT
013	NLA		Not Available	CONTROL COVER (WHT)
014	NLA		Not Available	CONTROL COVER ASSY---NA
015	NLA		Not Available	CONTROL COVER ASSY

016	306938		Knob, Selector Switch
017	307237	W10327105	Switch, Cycle Selection
018	306940	W10149462	Switch, Push-To-Start
019	NLA	Not Available	MAIN WIRE HARNESS - DG
022	Y312702		Knurled Nut, Start Switch
023	Y312706	422617	Nut
024	312751		Lockwasher, Start Switch
025	Y313588	488234	Screw 8-32 X 1/4
026	Y314322	211251	Screw, Transformer
027	NLA	Not Available	CONTROL PANEL COMMERCIAL DRYER
028	314912	Not Available	BRACKET, CONTROL PANEL (WHT)
029	NLA	Not Available	BACK UP PLATE-ALMOND
030	NLA	Not Available	BACK UP PLATE-HARVEST WHEAT

