


Maytag DG24CS 04 - REAR VIEW

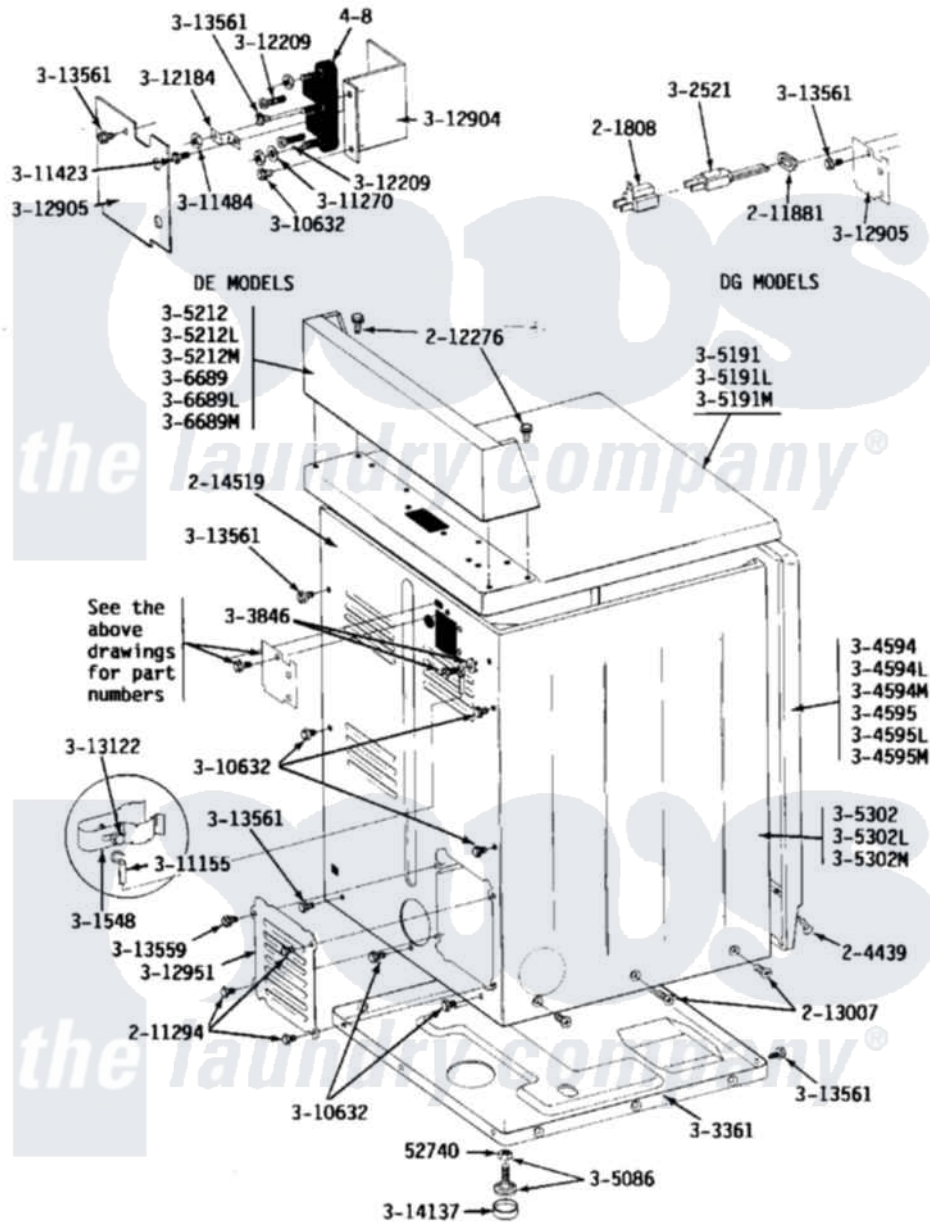

Maytag Commercial Maytag DG24CS Dryer Parts Parts Diagram 04 - REAR VIEW
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	Y052740	62739		Nut, Lock
002	Y201808			Converter
003	204439			Screw And Fstner Assembly
004	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
005	211881			Grommet, Cord Part Not Used-Gas Models Only
006	212276	W10116760		Screw
007	213007			Xfor Cabinet See Cabinet, Back
008	214519			LABEL, ELECTRICAL INSTR. PART NOT USED-GAS MODELS ONLY
009	301548			Clamp, Ground Wire
010	302521		Not Available	CORD, POWER PART NOT USED-GAS MODELS ONLY
011	Y303361		Not Available	BASE ASSY. (UPPER & LOWER)
012	NLA		Not Available	SCREW & WASHER ASSY.

013	NLA	Not Available	FRONT PANEL-WHITE
014	NLA	Not Available	FRONT PANEL-ALMOND
015	NLA	Not Available	FRONT PANEL-HARVEST WHEAT
016	Y305086		Adjustable Leg And Nut
018	Y305191	Not Available	TOP COVER-WHITE
019	NLA	Not Available	TOP COVER-ALMOND
020	NLA	Not Available	TOP COVER-HARVEST WHEAT
024	NLA	Not Available	CABINET-WHITE
025	NLA	Not Available	CABINET-ALMOND
026	NLA	Not Available	CABINET-HARVEST WHEAT
027	NLA	Not Available	CONTROL COVER (WHT)
028	NLA	Not Available	CONTROL COVER ASSY---NA
029	NLA	Not Available	CONTROL COVER ASSY
031	311155		Ground Wire And Clamp
038	Y312905	Not Available	COVER, TERMINAL
039	Y312951	Not Available	ACCESS COVER, BACK
040	313122		Screw - Baffle To Tumbler
041	Y313559		Screw
043	Y314137		Foot, Rubber

