


Maytag DG26CD 04 - CONTROL CENTER - CD MODELS

SECTION: CD CONTROL CENTER
 MODEL: DE26CD DG26CD SERIES 01

P/N 16000129R4

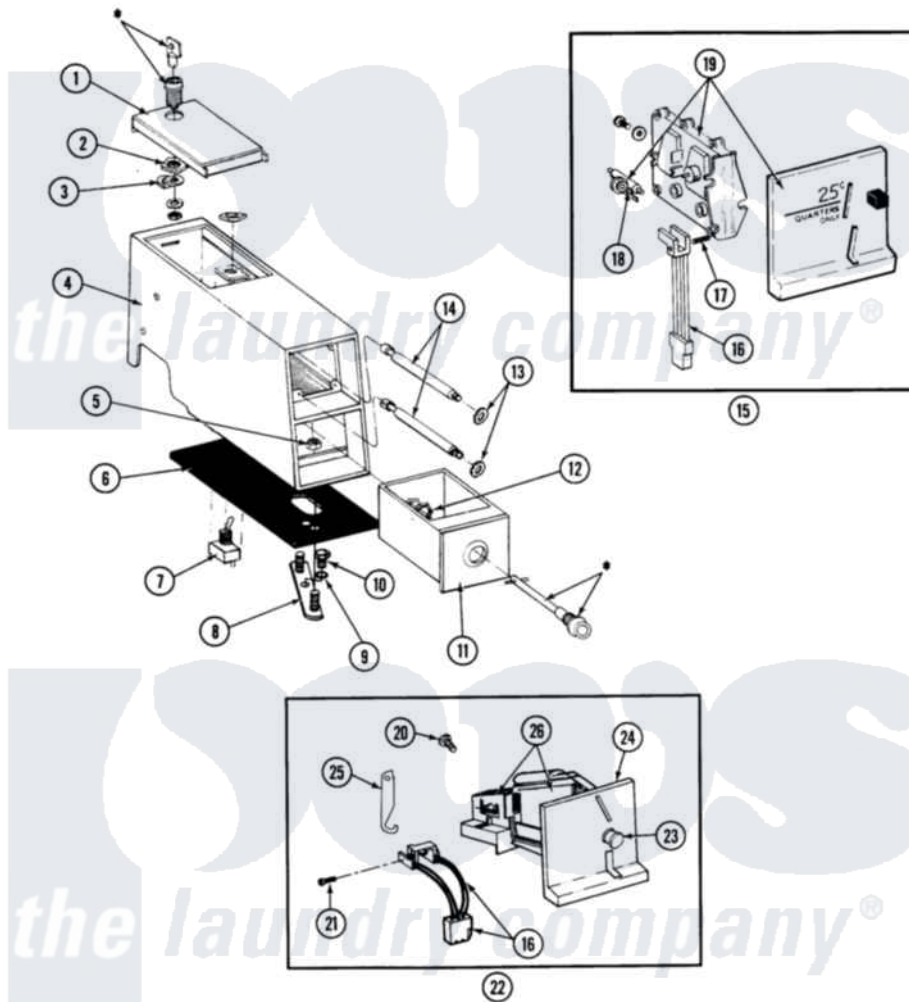

* Contact your Commercial Distributor for lock, keys & accessories

Issue Date: 11/91

Maytag [Commercial Maytag DG26CD Dryer Parts](#) Parts Diagram 04 - CONTROL CENTER - CD MODELS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	203188		Not Available	TIMER ACCESS DOOR (WHT)
"	203188L		Not Available	ACCESS DOOR-ALMOND
"	203188M		Not Available	ACCESS DOOR-HARVEST WHEAT
002	212328	W10139762		Hex Nut, 3/4-27
003	213750	W10133266		Cam-Lock
004	207673	22001407		Case, Coin Slide
"	207673L	22001408		(ALM)
"	207940	22001407		Case, Coin Slide
"	207940L	22001408		(ALM)
"	NLA		Not Available	(H. WHEAT)
005	Y052740	62739		Nut, Lock
006	214660			Gasket, Control Center
007	206794		Not Available	SWITCH (W/NUT)
008	NLA		Not Available	MTG. STRAP----NA
009	910309			Washer, Mounting Strap

010	211294	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
011	207672	208884	Coin Box K
"	207672L	208884	Coin Box K
"	207912	208884	Coin Box K
"	207912L	208884	Coin Box K
"	NLA	Not Available	(H. WHEAT)
012	212328	W10139762	Hex Nut, 3/4-27
013	910181		Lockwasher, Terminal Block
014	213035		Bolt, Locking
015	NLA	Not Available	COIN DROP ASSY.
016	206799		Optic Switch Assembly
017	314665		Screw, Switch Assembly
018	NLA	Not Available	BALANCE ARM W/WEIGHT (\$25)
019	NLA	Not Available	COIN REJECTOR
020	NLA	Not Available	SCREW
021	314665		Screw, Switch Assembly
022	207948		Coin Drop Assembly
"	NLA	Not Available	COIN DROP ASSY 25 CENTS
023	216009		BUTTON, RETURN
024	216010	Y208306	Kit- Mtg C
025	216011		Spring, Return Button
026	207947		Rejector, Coin
"	207949		Rejector, Coin

the laundry company[®]

the laundry company[®]