


Maytag DG26CD 05 - FRONT PANEL & DOOR ASSEMBLY

SECTION: FRONT PANEL & DOOR ASSEMBLY
 MODEL: DE-DG26CA-CD-CT

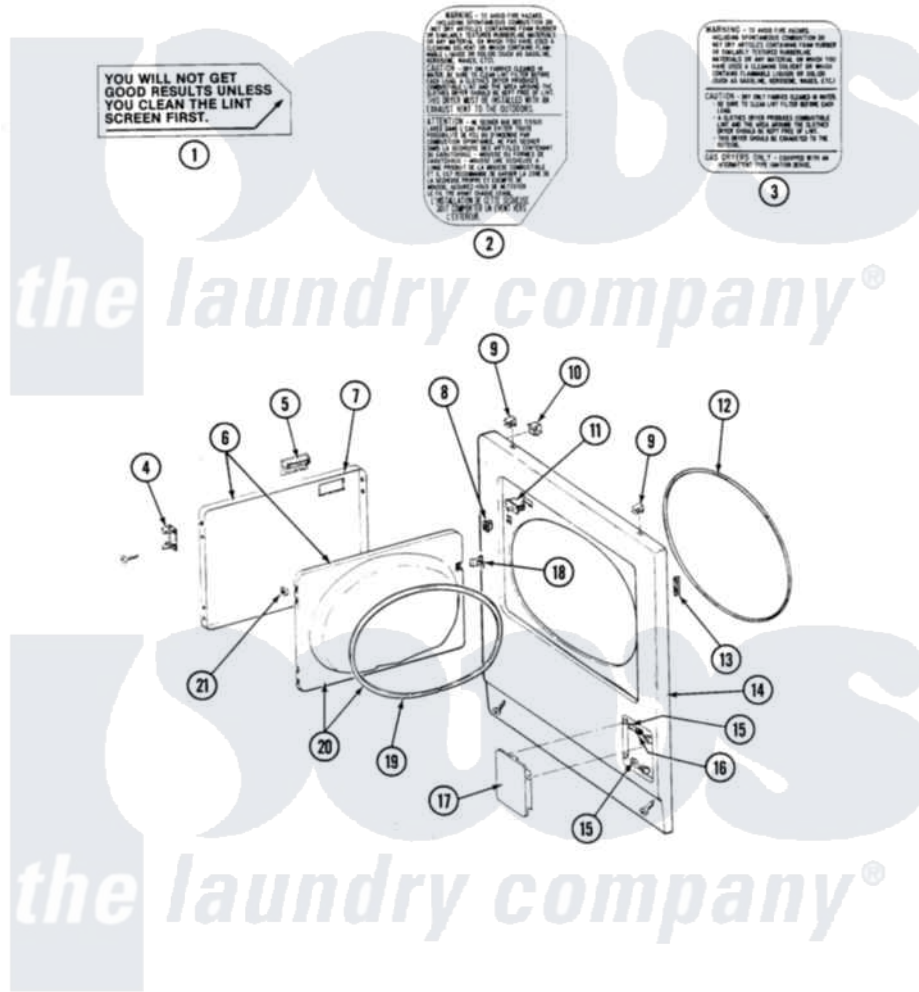

Issue Date: 11/90

24

Maytag [Commercial Maytag DG26CD Dryer Parts](#) Parts Diagram 05 - FRONT PANEL & DOOR ASSEMBLY
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	Y313340			LABEL, LINT SCREEN INSTRUCTION
002	314941		Not Available	LABEL, INSTRUCTION
003	NLA		Not Available	INSTRUCTION LABEL
004	307099	33001230		Hinge, Door
"	Y314062			Screw, Door Hinge And Panel
005	312960	489355		Screw, 8 X 1/2
"	314946			Handle White
"	314972			Handle Door ALM
"	NLA		Not Available	(H. WHEAT)
006	NLA		Not Available	(ALM)
"	Y307111		Not Available	DOOR ASSY. COMPLETE (WHT)
007	314966			Panel, Outer
"	NLA		Not Available	(ALM)
008	306436			Door Latch Kit--W
009	212982	22001650		Fastener, Spring

010	Y310376			Clip, Door Switch Harness
011	Y305753	W10169313		Switch-Dor
012	314937			Seal, Front Panel
013	Y313907			Fastener, Twin
014	204439			Screw And Fstner Assembly
"	307998L			Front Panel---NA
"	NLA		Not Available	FRONT PANEL (WHT)
015	212949	22001866		Screw, Relay
"	NLA		Not Available	BUSHING, ACCESS DOOR
016	312369			Sleeve, Access Panel Stud Part Not Used
017	NLA		Not Available	ACCESS DOOR (WHITE)
018	314936	33001305		Strike, Door
"	314944	33001305		Strike, Door
019	314935	33001192		Seal, Door
020	307098		Not Available	DOOR, INNER (W/SEAL)
021	Y313910			Clip, Door Liner To Outer Panel

