
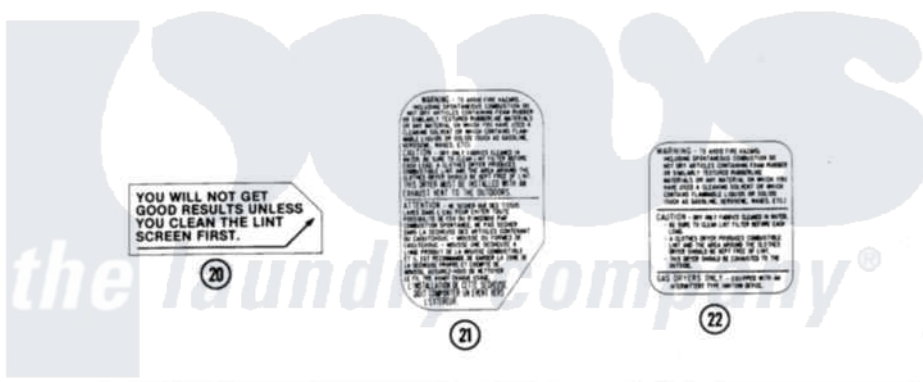


# Maytag DG27CT 07 - FRONT PANEL & DOOR ASSEMBLY

SECTION: FRONT PANEL & DOOR ASSEMBLY

MODEL: DE-DG27CS-CT

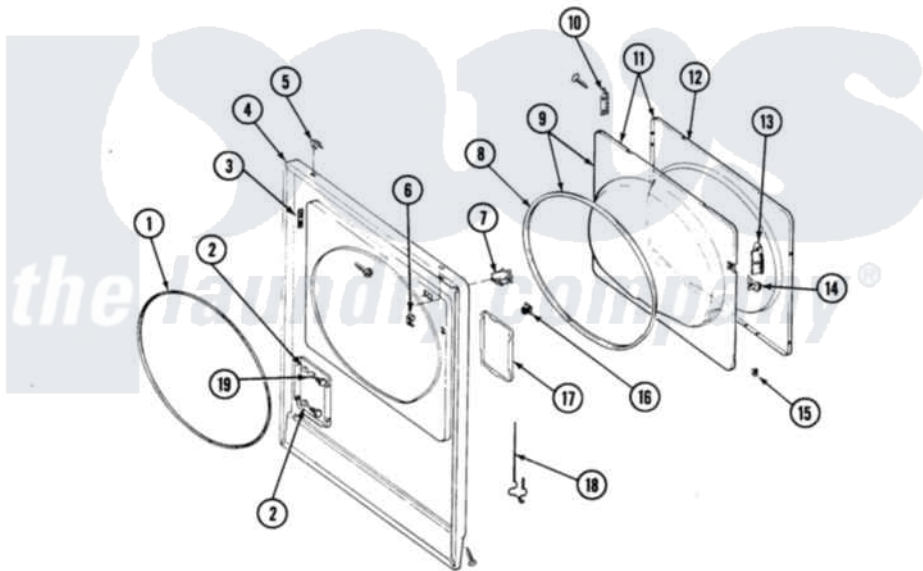

Issue Date: 10/90

Maytag [Commercial Maytag DG27CT Dryer Parts](#) Parts Diagram 07 - FRONT PANEL & DOOR ASSEMBLY

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
001	<a href="#">314937</a>			Seal, Front Panel
002	NLA		Not Available	BUSHING
003	<a href="#">Y313907</a>			Fastener, Twin
004	<a href="#">204439</a>			Screw And Fstner Assembly
"	212949	<a href="#">22001866</a>		Screw, Relay
"	<a href="#">307998L</a>			Front Panel----NA
"	NLA		Not Available	FRONT PANEL (WHT)
005	212982	<a href="#">22001650</a>		Fastener, Spring
006	<a href="#">Y310376</a>			Clip, Door Switch Harness
007	Y305754	<a href="#">W10169313</a>		Switch-Dor
008	314935	<a href="#">33001192</a>		Seal, Door
009	308069		Not Available	DOOR, INNER W/GASKET
010	307099	<a href="#">33001230</a>		Hinge, Door
"	<a href="#">Y314062</a>			Screw, Door Hinge And Panel
011	NLA		Not Available	DOOR, COMPLETE LESS HINGES (WH
				DOOR W/WINDOW OUTER

012	314967		Not Available	DOOR W/WINDOW OUTER HALF (WHT)
"	NLA		Not Available	DOOR W/WIN CUT OUT OUTER ALMNA
013	<a href="#">314939</a>			Handle, Door
"	<a href="#">314974</a>			Handle, Door
"	<a href="#">314975</a>			Handle, Door
014	314936	<a href="#">33001305</a>		Strike, Door
"	314944	<a href="#">33001305</a>		Strike, Door
015	<a href="#">Y313910</a>			Clip, Door Liner To Outer Panel
016	<a href="#">306436</a>			Door Latch Kit--W
017	NLA		Not Available	ACCESS DOOR (WHT)
018	<a href="#">Y314025</a>			Latch For Access Door
019	<a href="#">312369</a>			Sleeve, Access Panel Stud Part Not Used
020	<a href="#">Y313340</a>			LABEL, LINT SCREEN INSTRUCTION
021	314941		Not Available	LABEL, INSTRUCTION
022	NLA		Not Available	INSTRUCTION LABEL

