


Maytag DG30CA 03 - CA TIMER ACCUMULATOR

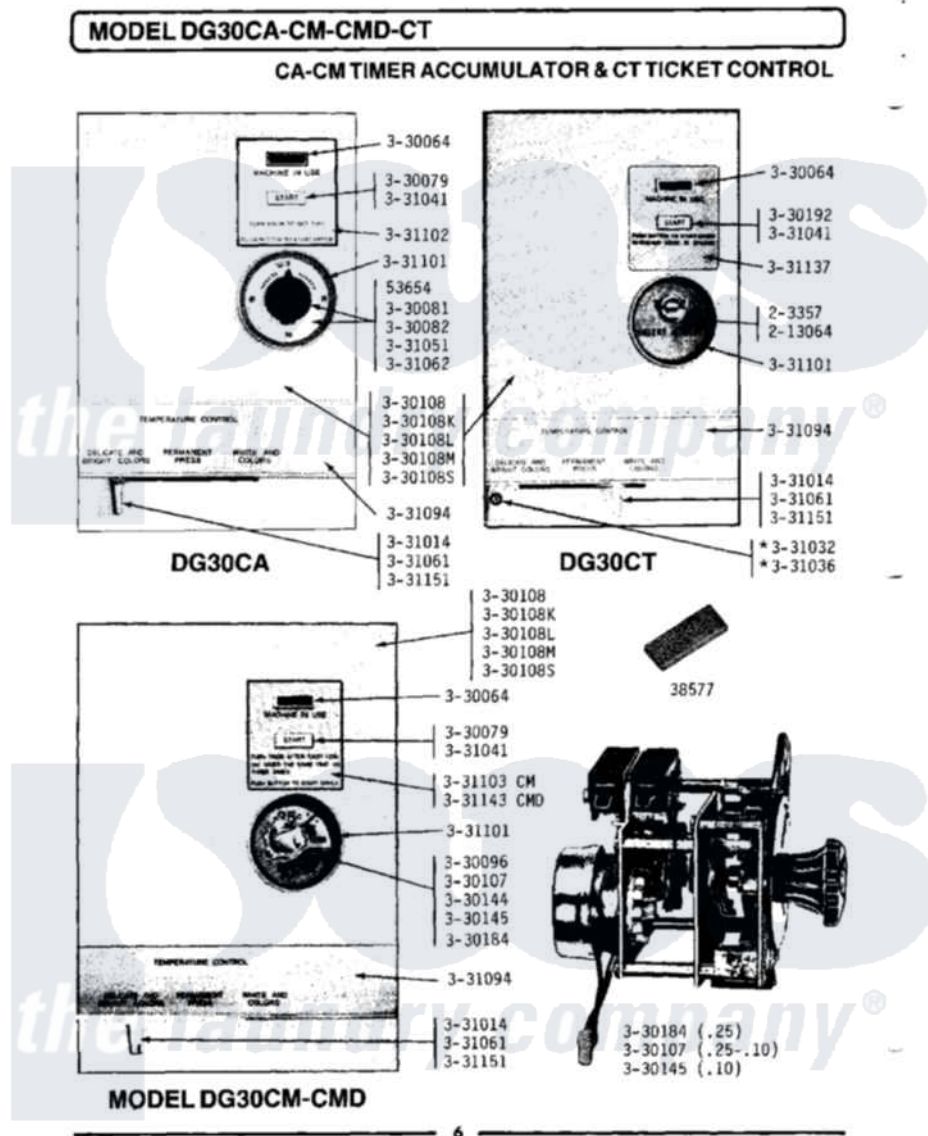

Maytag Commercial Maytag DG30CA Dryer Parts Parts Diagram 03 - CA TIMER ACCUMULATOR
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	NLA		Not Available	TOOL TO ADJUST TIMING SWITC
002	NLA		Not Available	SCREW, No.5-40 X 3/8
003	NLA		Not Available	TICKET RECEIVER ASSEMBLY
004	NLA		Not Available	FRONT PLATE F/TICKET CONTRO
005	Y330064			Pilot Light
006	Y330079		Not Available	SWITCH, PUSH-TO-START
007	330081			Timer - CA 60 Minutes
008	Y330082	330081		Timer - CA 60 Minutes
009	Y330096	Y330233		Mounting Plt, Cm Timer Accum.
010	NLA		Not Available	FRONT PANEL-WHITE
011	330108L		Not Available	FRONT PANEL-ALMOND
012	330108M		Not Available	FRONT PANEL-HARVEST WHEAT
013	NLA		Not Available	MOUNTING PLATE (ACCUMULATOR)

014	Y330145		Not Available	CONTA ACCUMULATOR ASSEMBLY
015	330184			Timer Accumulator-25
016	331014	8281196		Screw
017	331032	61002031		Screw, Handle
018	331036			Washer-Front Panel Screws
019	331041			Button-Push-To-Start Switch
020	NLA		Not Available	TIMER DIAL - CA 60 MINUTES
021	331061			Knob For Temperature Contro
022	NLA		Not Available	KNOB FOR TIMER
023	NLA		Not Available	MOUNTING PLATE FOR TIMER
024	NLA		Not Available	TRIM BAR FOR UPPER PANEL
025	331101		Not Available	BEZEL FOR TIMER-ACCUMULATOR
026	NLA		Not Available	INSTRUCTION PLATE (CA)
027	331151			Lever-Temperature Control

