

015	NLA		Not Available	FRONT PANEL-WHITE
016	NLA		Not Available	SUPPORT FOR BURNERS
017	Y330100		Not Available	COIN BOX ASSEMBLY
018	Y330103			Lock
019	NLA		Not Available	LOCK
020	NLA		Not Available	PILOT BURNER - LPG
021	NLA		Not Available	PILOT ORIFICE - LPG
022	NLA		Not Available	PILOT ORIFICE - NAT
023	NLA		Not Available	GAS CONTROL, WR-NATURAL
024	NLA		Not Available	GAS CONTROL, WR-LPG
025	NLA		Not Available	MAIN OPERATOR & REGULATOR
026	NLA		Not Available	POWER UNIT
027	331003	489483		Screw 10-32 X 1/2
028	NLA		Not Available	SCREW - BRACKET TO VAULT
029	NLA		Not Available	SCREW-CONT. BRACKET TO HOOD
030	331009	400022-1		Screw
031	331013	Y0300830		Screw No.10-32 X .375
032	331014	8281196		Screw
033	331026	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
034	331032	61002031		Screw, Handle
035	331036			Washer-Front Panel Screws
036	NLA		Not Available	ANGLE BRACKET
037	NLA		Not Available	BRACKET FOR GAS CONTROL
038	NLA		Not Available	RETAINER BRACKET-MAIN BURNE
039	331049		Not Available	VENTILATED COVER - HI-LIMIT
040	331058			Grommet-Temp. Control Tubin
041	331061			Knob For Temperature Contro
042	NLA		Not Available	ORIFICE, MAIN BURNER-NAT.
043	NLA		Not Available	ORIFICE, MAIN BURNER-BUTANE
044	NLA		Not Available	ORIFICE, MAIN BURNER-PROPAN
045	NLA		Not Available	MOUNTING PLATE-TEMP.CONTROL
046	NLA		Not Available	SPACER - HI-LIMIT TO HOOD
047	NLA		Not Available	SPACER - TEMP CONTROL COVER
048	331086		Not Available	SHIELD FOR PILOT BURNER
049	NLA		Not Available	PILOT SHIELD
050	NLA		Not Available	PILOT TUBING-WR
051	NLA		Not Available	MOUNTING PLATE-TICKET CONT
052	NLA		Not Available	SCREW-TEMP CONTROL LEVER
053	331151			Lever-Temperature Control
054	NLA		Not Available	BRACKET FOR MANIFOLD
055	NLA		Not Available	TWIN FASTENER WITH SCREWS