



Maytag [Commercial Maytag DG30CT Dryer Parts](#) Parts Diagram 07 - CT CONTROL CENTER & COMPONENTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	NLA		Not Available	TICKET RECEIVER ASSEMBLY
002	210866			Nut, Twin Speed
003	212220	213501		Screw, No.6-20 X 1-1/8 Inch
004	212951			Screw, No.6-32 X 1/4 Inch
005	NLA		Not Available	FRONT PLATE F/TICKET CONTRO
006	Y330064			Pilot Light
007	NLA		Not Available	CLIP - ACTUATOR TO CABINET
008	Y330083		Not Available	CONTROL, TEMPERATURE
009	NLA		Not Available	FRONT PANEL-WHITE
010	Y330100		Not Available	COIN BOX ASSEMBLY
011	NLA		Not Available	LOCK
012	NLA		Not Available	FRONT PANEL-WHITE
013	Y330147			Part Not Used
014	Y330192		Not Available	SWITCH, PUSH TO START

015	NLA		Not Available	SCREW - BRACKET TO VAULT
016	331012	400022-1		Screw
017	331014	8281196		Screw
018	331032	61002031		Screw, Handle
019	331036			Washer-Front Panel Screws
020	331041			Button-Push-To-Start Switch
021	331061			Knob For Temperature Contro
022	NLA		Not Available	MOUNTING PLATE-TEMP.CONTROL
023	NLA		Not Available	SPACER - TEMP CONTROL COVER
024	NLA		Not Available	HINGE RIVET
025	NLA		Not Available	MOUNTING PLATE-TICKET CONT
026	NLA		Not Available	RETAINER-TICKET CONTROL
027	NLA		Not Available	SCREW-TEMP CONTROL LEVER
028	NLA		Not Available	BRACKET-TEMPERATURE CONTROL
029	331151			Lever-Temperature Control
030	NLA		Not Available	TWIN FASTENER WITH SCREWS

