


# Maytag DG31CA 01 - FRONT VIEW-DOOR OPEN

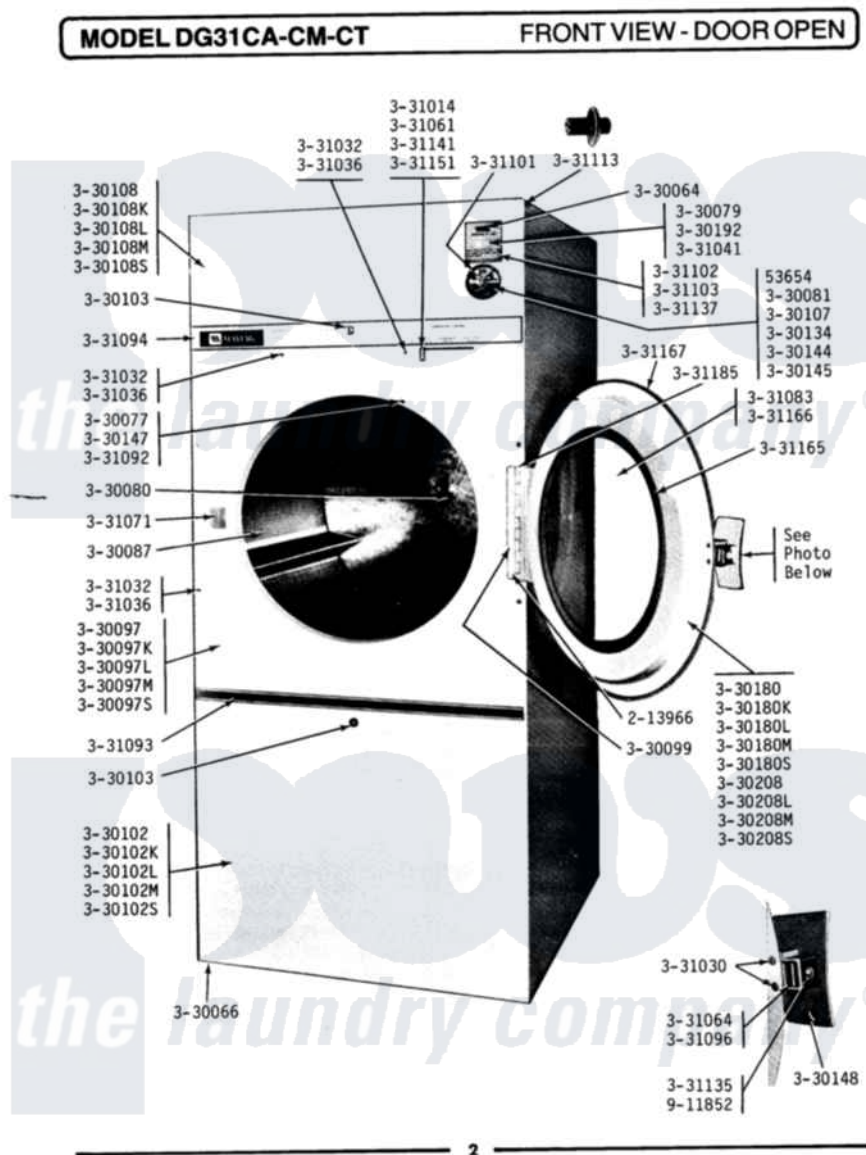

Maytag Commercial Maytag DG31CA Dryer Parts Parts Diagram 01 - FRONT VIEW-DOOR OPEN

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
001	NLA		Not Available	GULMITE WRENCH No.8
002	NLA		Not Available	SCREW, No.5-40 X 3/8
003	213966	<a href="#">3400014</a>		Screw
004	<a href="#">Y330064</a>			Pilot Light
005	NLA		Not Available	LEVELING LEG
006	<a href="#">Y330077</a>			Door Switch
007	Y330079		Not Available	SWITCH, PUSH-TO-START
008	Y330080		Not Available	SPIDER & SHAFT ASSEMBLY
009	<a href="#">330081</a>			Timer - CA 60 Minutes
010	<a href="#">Y330087</a>			Drum Assembly Complete
011	NLA		Not Available	FRONT PANEL (WHT)
013	NLA		Not Available	(ALM)
014	NLA		Not Available	(H. WHEAT)
015	NLA		Not Available	HINGE, DOOR
016	<a href="#">Y330102</a>			FRONT PANEL-WHITE
017	NLA		Not Available	(ALM)

018	NLA		Not Available	(H. WHEAT)
019	<a href="#">Y330103</a>			Lock
020	NLA		Not Available	PART NOT USED
021	NLA		Not Available	FRONT PANEL (WHT)
022	330108L		Not Available	FRONT PANEL-ALMOND
023	330108M		Not Available	FRONT PANEL-HARVEST WHEAT
024	NLA		Not Available	PART NOT USED
025	NLA		Not Available	PART NOT USED
026	Y330145		Not Available	CONTA ACCUMULATOR ASSEMBLY
027	<a href="#">Y330147</a>			Part Not Used
028	NLA		Not Available	HANDLE & PIN KIT
029	NLA		Not Available	DOOR (WHT)
030	NLA		Not Available	(ALM)
031	NLA		Not Available	(H. WHEAT)
032	Y330192		Not Available	SWITCH, PUSH TO START
033	NLA		Not Available	DOOR (WHT)
034	NLA		Not Available	(ALM)
035	NLA		Not Available	(H. WHEAT)
036	331014	<a href="#">8281196</a>		Screw
037	NLA		Not Available	SCREW, HANDLE
038	331032	<a href="#">61002031</a>		Screw, Handle
039	<a href="#">331036</a>			Washer-Front Panel Screws
040	<a href="#">331041</a>			Button-Push-To-Start Switch
041	<a href="#">331061</a>			Knob For Temperature Contro
042	331064		Not Available	MAGNET FOR DOOR HANDLE
043	331071		Not Available	STRIKE PLATE FOR DOOR
044	331083		Not Available	SUPPORT FOR DOOR GLASS
045	NLA		Not Available	ACTUATOR, DOOR SWITCH
046	NLA		Not Available	TRIM STRIP, LOWER FRONT PANEL
047	NLA		Not Available	TRIM BAR, UPPER PANEL
048	NLA		Not Available	POLE BLOCK, DOOR MAGNET
049	331101		Not Available	BEZEL FOR TIMER-ACCUMULATOR
050	NLA		Not Available	INSTRUCTION PLATE
051	NLA		Not Available	PART NOT USED
052	NLA		Not Available	HINGE RIVET
053	NLA		Not Available	DOWEL PIN, HANDLE
054	NLA		Not Available	PART NOT USED
055	NLA		Not Available	SCREW-TEMP CONTROL LEVER
056	<a href="#">331151</a>			Lever-Temperature Control
057	<a href="#">331165</a>			Gasket For Door Glass
058	<a href="#">331166</a>			Glass For Door
059	<a href="#">331167</a>			Gasket For Door-Outer
060	<a href="#">331185</a>			Hinge Pin For Door
061	911852	<a href="#">486009</a>		Lockwasher