


# Maytag DG32CM 01 - FRONT VIEW-DOOR OPEN

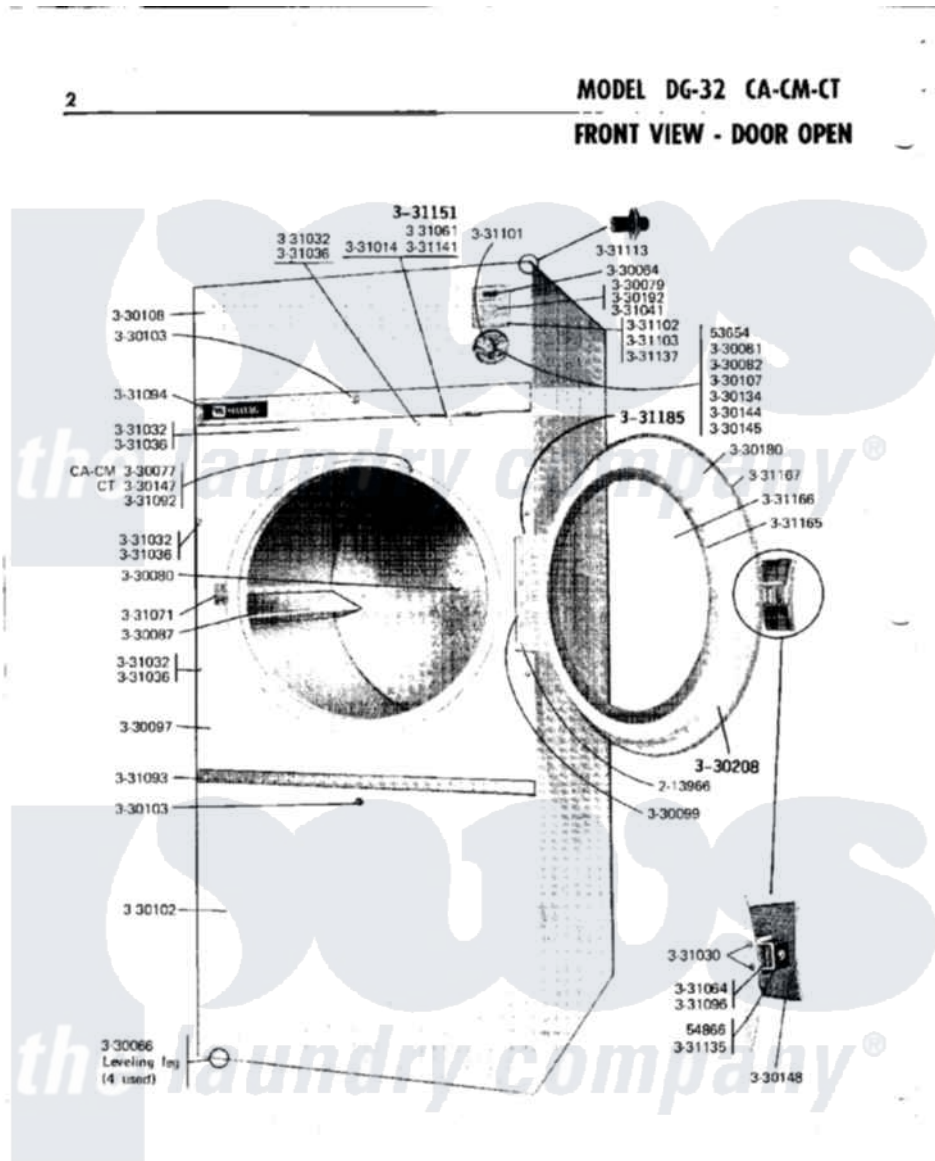

Copyright 1978 THE MAYTAG COMPANY • Newton, Iowa • Printed In U.S.A.

Maytag Commercial Maytag DG32CM Dryer Parts Parts Diagram 01 - FRONT VIEW-DOOR OPEN  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	NLA		Not Available	GULMITE WRENCH No.8
002	NLA		Not Available	SCREW, No.5-40 X 3/8
003	Y054866	<a href="#">486009</a>		Lockwasher
004	213966	<a href="#">3400014</a>		Screw
005	<a href="#">Y330064</a>			Pilot Light
006	NLA		Not Available	LEVELING LEG
007	<a href="#">Y330077</a>			Door Switch
008	Y330079		Not Available	SWITCH, PUSH-TO-START
009	Y330080		Not Available	SPIDER & SHAFT ASSEMBLY
010	<a href="#">330081</a>			Timer - CA 60 Minutes
011	Y330082	<a href="#">330081</a>		Timer - CA 60 Minutes
012	<a href="#">Y330087</a>			Drum Assembly Complete
013	NLA		Not Available	FRONT PANEL (WHT)
014	NLA		Not Available	HINGE, DOOR
015	<a href="#">Y330102</a>			FRONT PANEL-WHITE
016	<a href="#">Y330103</a>			Lock

017	NLA		Not Available	TIMER ACCUMULATOR - CM
018	NLA		Not Available	FRONT PANEL (WHT)
019	NLA		Not Available	TIMER W/KNOB & PIN
020	NLA		Not Available	MOUNTING PLATE (ACCUMULATOR)
021	Y330145		Not Available	CONTA ACCUMULATOR ASSEMBLY
022	<a href="#">Y330147</a>			Part Not Used
023	NLA		Not Available	HANDLE & PIN KIT
024	<a href="#">331151</a>			Lever-Temperature Control
025	NLA		Not Available	DOOR (WHT)
026	Y330192		Not Available	SWITCH, PUSH TO START
027	331014	<a href="#">8281196</a>		Screw
028	NLA		Not Available	SCREW, HANDLE (DOOR)
029	331032	<a href="#">61002031</a>		Screw, Handle
030	<a href="#">331036</a>			Washer-Front Panel Screws
031	<a href="#">331041</a>			Button-Push-To-Start Switch
032	NLA		Not Available	TIMER DIAL - CA 60 MINUTES
033	NLA		Not Available	SPACER GASKET
034	<a href="#">331061</a>			Knob For Temperature Contro
035	NLA		Not Available	KNOB, TIMER
036	331064		Not Available	MAGNET FOR DOOR HANDLE
037	331071		Not Available	STRIKE PLATE FOR DOOR
038	331083		Not Available	SUPPORT FOR DOOR GLASS
039	NLA		Not Available	ACTUATOR, DOOR SWITCH
040	NLA		Not Available	TRIM STRIP, LOWER FRONT PANEL
041	NLA		Not Available	TRIM BAR, UPPER PANEL
042	NLA		Not Available	POLE BLOCK, DOOR MAGNET
043	331101		Not Available	BEZEL FOR TIMER- ACCUMULATOR
044	NLA		Not Available	INSTRUCTION PLATE (CA)
045	NLA		Not Available	INSTRUCTION PLATE - CM
046	NLA		Not Available	HINGE RIVET
047	NLA		Not Available	DOWEL PIN, HANDLE
048	NLA		Not Available	INSTRUCTION PLATE-CT
049	NLA		Not Available	SCREW-TEMP CONTROL LEVER
050	<a href="#">331151</a>			Lever-Temperature Control
051	<a href="#">331165</a>			Gasket For Door Glass
052	<a href="#">331166</a>			Glass For Door
053	<a href="#">331167</a>			Gasket For Door-Outer