


Maytag DG34CD 03 - ELECTRONIC CONTROL ASSEMBLY

MODEL DG34CD-CQ

CD-CQ ELECTRONIC CONTROL ASSEMBLY

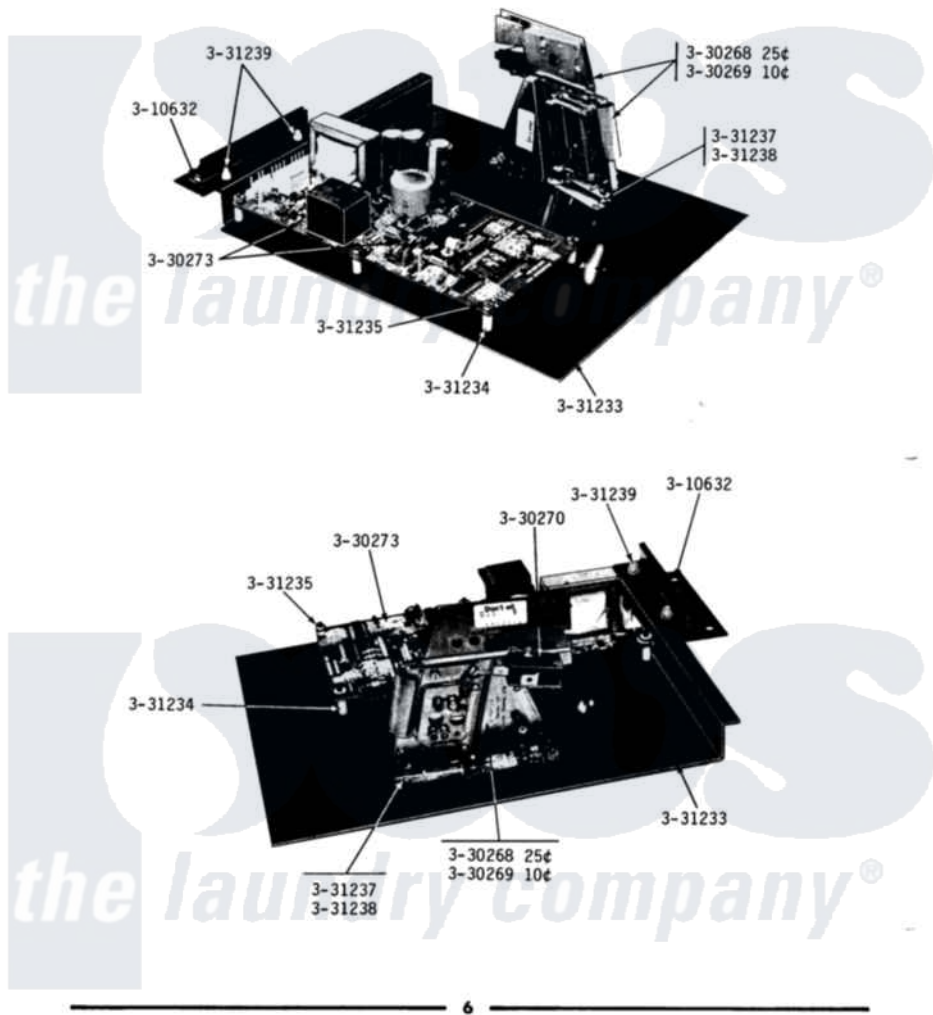

Maytag [Commercial Maytag DG34CD Dryer Parts](#) Parts Diagram 03 - ELECTRONIC CONTROL ASSEMBLY
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	Y310632	1163839		Screw
002	Y330264		Not Available	WIRE HARNESS
003	Y330265		Not Available	WIRE HARNESS-DUAL CONTROL
004	Y330266		Not Available	MEMBRANE SWITCH
005	Y330268		Not Available	COIN ACCEPTOR ASSEMBLY \$.25
006	NLA		Not Available	COIN ACCEPTOR ASSEMBLY \$.10
007	Y330270		Not Available	COIN SWITCH
008	36001001			Printed Circuit Board
"	36001002			Sensor
"	Y330273	Y330316		Electronic
"	Y330315			Switch Assembly
"	Y330319		Not Available	WIRE ASSEMBLY
"	Y330320			Harness, Heat Sensor
009	331233			Plate For Electronic Contro

010	331234		Spacer For Circuit Board
011	331235	701719	Nut, Hex
012	NLA		Not Available BAIL FOR COIN RETURN
013	331237		Screw
014	NLA		Not Available LOCK WASHER
015	NLA		Not Available BUMPER
016	NLA		Not Available LABEL - \$.25
017	NLA		Not Available LABEL - \$.10-\$.25

