


# Maytag DG34CD 04 - DOOR, DOOR SWITCH, & COIN BOX

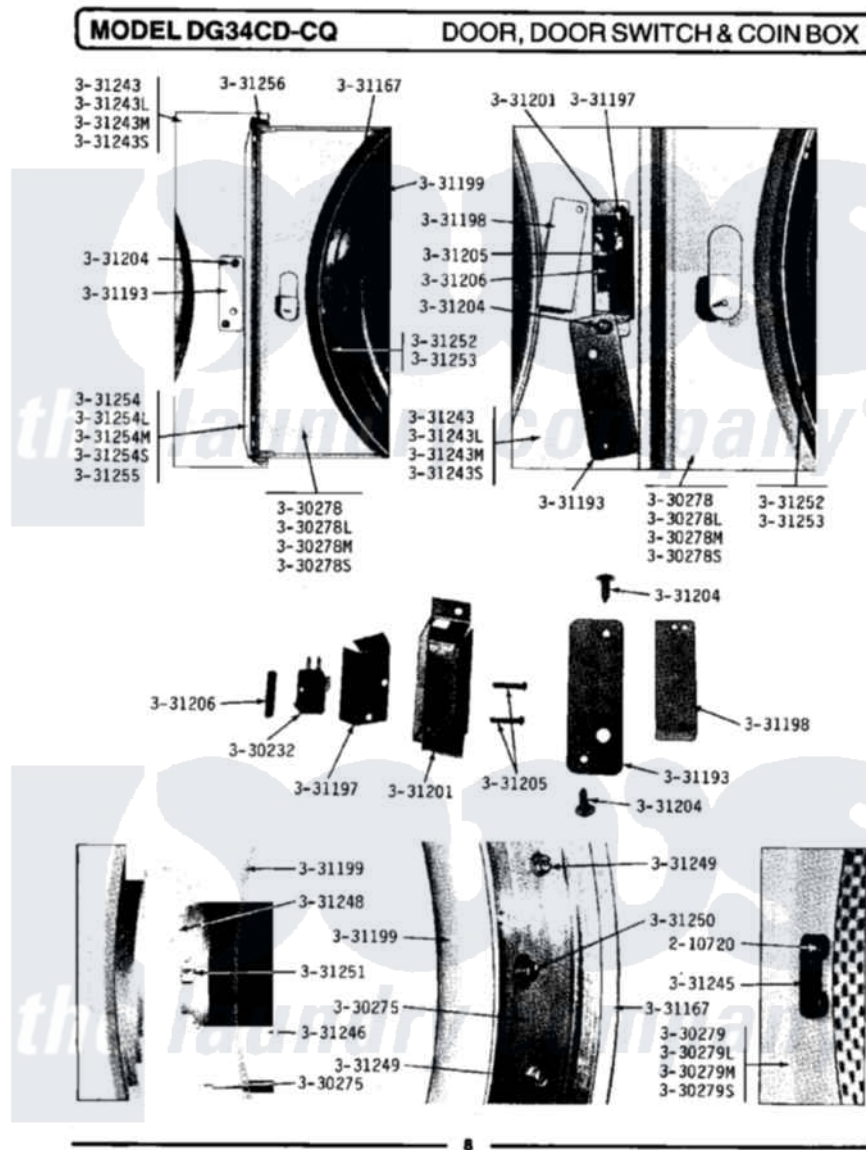

Maytag Commercial Maytag DG34CD Dryer Parts Parts Diagram 04 - DOOR, DOOR SWITCH, & COIN BOX  
 Click on the part number to view part

| Item | Original Part Number    | Replaced By | Status        | Part Description               |
|------|-------------------------|-------------|---------------|--------------------------------|
| 001  | <a href="#">210720</a>  |             |               | Rivet, Bearing To Tumbler Frmt |
| 002  | Y330232                 |             | Not Available | DOOR SWITCH                    |
| 003  | <a href="#">Y330275</a> |             |               | Door Assembly                  |
| 004  | NLA                     |             | Not Available | COIN BOX, WHITE                |
| 005  | 330276L                 |             | Not Available | COIN BOX-ALMOND                |
| 006  | NLA                     |             | Not Available | COIN BOX - HARVEST WHEAT       |
| 007  | NLA                     |             | Not Available | COIN BOX-SUNSET CORAL          |
| 008  | NLA                     |             | Not Available | HINGE ASSEMBLY-WHITE           |
| 009  | NLA                     |             | Not Available | HINGE ASSEMBLY-ALMOND          |
| 010  | NLA                     |             | Not Available | HINGE ASSEMBLY-HARVEST WHEA    |
| 011  | NLA                     |             | Not Available | HINGE ASSEMBLY-SUNSET CORAL    |
| 012  | NLA                     |             | Not Available | FRONT PANEL-WHITE              |
| 013  | NLA                     |             | Not Available | FRONT PANEL-ALMOND             |
| 014  | NLA                     |             | Not Available | FRONT PANEL-HARVEST WHEAT      |

|     |                         |                          |               |                           |
|-----|-------------------------|--------------------------|---------------|---------------------------|
| 015 | 330279S                 |                          | Not Available | FRONT PANEL-SUNSET CORAL  |
| 016 | <a href="#">331167</a>  |                          |               | Gasket For Door-Outer     |
| 017 | 331193                  |                          | Not Available | COVER FOR DOOR SWITCH BOX |
| 018 | 331197                  |                          | Not Available | SHIELD FOR DOOR SWITCH    |
| 019 | <a href="#">331198</a>  |                          |               | Actuator For Door Switch  |
| 020 | 331199                  |                          | Not Available | GASKET FOR DOOR GLASS     |
| 021 | <a href="#">331201</a>  |                          |               | Door Switch Box           |
| 022 | 331204                  | <a href="#">61003351</a> |               | Screw, Handle To Frame    |
| 023 | NLA                     |                          | Not Available | SCREW                     |
| 024 | NLA                     |                          | Not Available | TWIN FASTENER             |
| 025 | NLA                     |                          | Not Available | FRONT PANEL-WHITE         |
| 026 | 331243L                 |                          | Not Available | FRONT PANEL-ALMOND        |
| 027 | NLA                     |                          | Not Available | FRONT PANEL-HARVEST WHEAT |
| 028 | NLA                     |                          | Not Available | FRONT PANEL-SUNSET CORAL  |
| 029 | <a href="#">331245</a>  |                          |               | Catch For Door            |
| 030 | 331246                  |                          | Not Available | GLASS FOR DOOR            |
| 031 | NLA                     |                          | Not Available | HANDLE FOR DOOR           |
| 032 | NLA                     |                          | Not Available | SCREW FOR DOOR HANDLE     |
| 033 | <a href="#">331250</a>  |                          |               | Stud For Door Catch       |
| 034 | 331251                  | <a href="#">Y707702</a>  |               | Locknut                   |
| 035 | 331252                  | <a href="#">3400094</a>  |               | Screw, 10-32 X 3/8        |
| 036 | 331253                  | <a href="#">3400029</a>  |               | Nut, Adapter Plate        |
| 037 | NLA                     |                          | Not Available | HINGE STRAP-WHITE         |
| 038 | <a href="#">331254L</a> |                          |               | Hinge Strap-Almond        |
| 039 | NLA                     |                          | Not Available | HINGE STRAP-HARVEST WHEAT |
| 040 | NLA                     |                          | Not Available | HINGE STRAP-SUNSET CORAL  |
| 041 | NLA                     |                          | Not Available | SCREW                     |
| 042 | <a href="#">331256</a>  |                          |               | Screw                     |
| 043 | NLA                     |                          | Not Available | WASHER FOR COIN BOX LOCK  |
| 044 | 331258                  |                          | Not Available | LATCH FOR COIN BOX        |
| 045 | NLA                     |                          | Not Available | WASHER FOR LOCK           |
| 046 | NLA                     |                          | Not Available | WASHER - UNDER LOCK HEAD  |

