


# Maytag DGS30PC1 18 - SAIL SWITCH ASSEMBLY

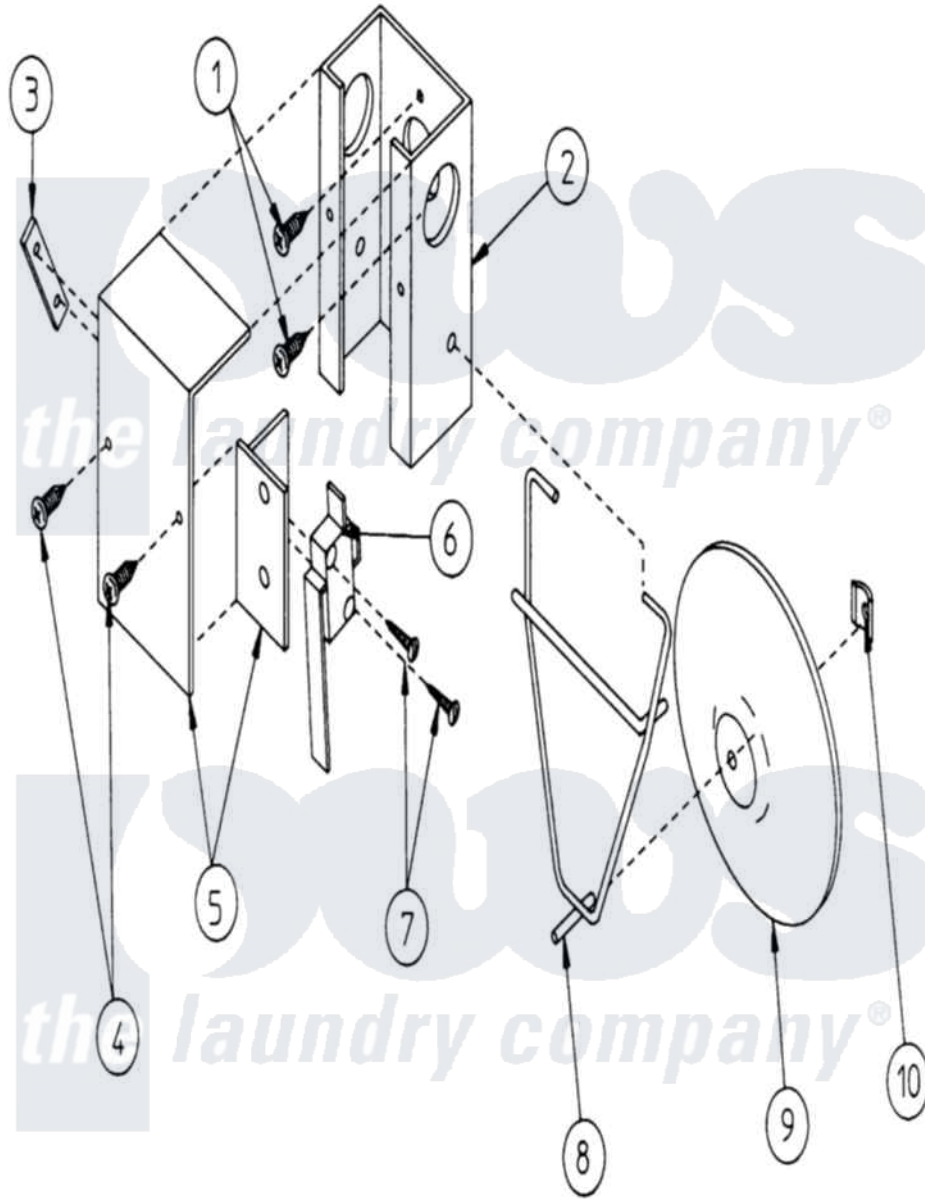

Maytag [Commercial Maytag DGS30PC1 Dryer Parts](#) Parts Diagram 18 - SAIL SWITCH ASSEMBLY  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
000	W10124350		Not Available	ORDER PARTS FROM AMERICAN DRYER CORP AT 508-678-9000
001	A150300	<a href="#">5307527001</a>		Switch
002	A319209		Not Available	SAIL SWITCH BOX
003	A154004	<a href="#">154004</a>		Tinnerman
004	A150415		Not Available	SCREW, CRIMPTITE (PH. RD.HD.) (No.10-16 X 1/2" PH. RD. HD.)
005	A802799	<a href="#">802799</a>		Sail Sw.bo
006	A122200	<a href="#">122200</a>		Sail Switch
007	A150303	<a href="#">150303</a>		4 X 3 4 P
008	A105500	<a href="#">W10146641</a>		Std Sail S
009	A319206		Not Available	DAMPER, SAIL SWITCH
010	A154002	<a href="#">154002</a>		1 8 Push O