


# Maytag GDE24CS 01 - CS CONTROL PANEL

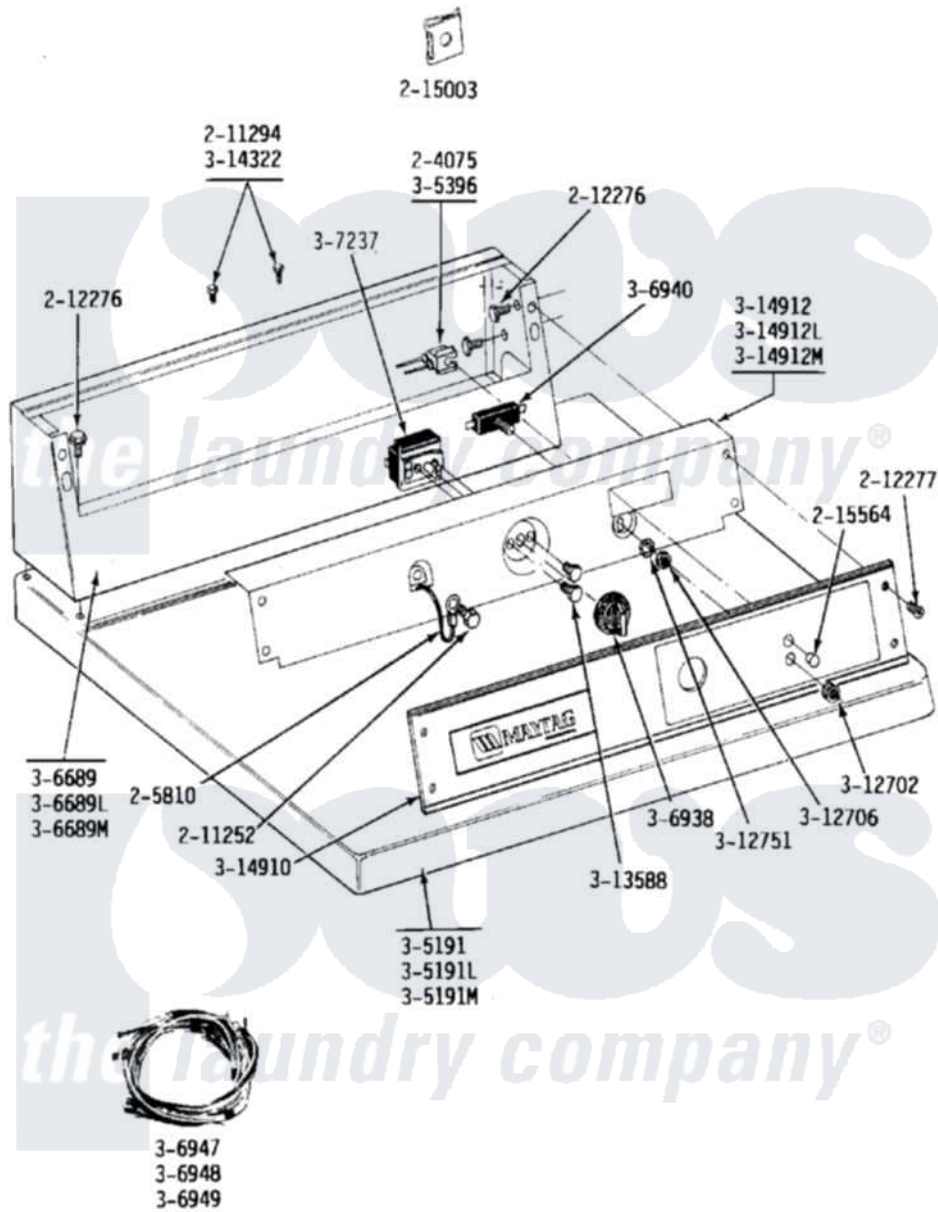

Maytag [Commercial Maytag GDE24CS Dryer Parts](#) Parts Diagram 01 - CS CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	204075		Not Available	PILOT LAMP (DG MODELS ONLY)
002	<a href="#">205810</a>			Wire, Ground
003	<a href="#">211252</a>			Screw, Ground Wire
004	<a href="#">211294</a>	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
005	212276	<a href="#">W10116760</a>		Screw
006	<a href="#">212277</a>			Screw, No.8 X 1/2 Inch
007	<a href="#">215003</a>			Fastener, Panel And Bracket
008	<a href="#">215564</a>			Lens, Indicator Light
009	Y305191		Not Available	TOP COVER-WHITE
NI	NLA		Not Available	TOP COVER-ALMOND
"	NLA		Not Available	TOP COVER-HARVEST WHEAT
012	Y305396		Not Available	LAMP, INDICATOR
NI	NLA		Not Available	CONTROL COVER (WHT)
"	NLA		Not Available	CONTROL COVER ASSY----NA

"	NLA		Not Available	CONTROL COVER ASSY
016	<a href="#">306938</a>			Knob, Selector Switch
017	307237	<a href="#">W10327105</a>		Switch, Cycle Selection
018	306940	<a href="#">W10149462</a>		Switch, Push-To-Start
NI	NLA		Not Available	MAIN WIRE HARNESS - DE
"	NLA		Not Available	MAIN WIRE HARNESS - DE
022	<a href="#">Y312702</a>			Knurled Nut, Start Switch
023	Y312706	<a href="#">422617</a>		Nut
024	<a href="#">312751</a>			Lockwasher, Start Switch
025	<a href="#">Y313588</a>	<a href="#">488234</a>		Screw 8-32 X 1/4
026	Y314322	<a href="#">211251</a>		Screw, Transformer
NI	NLA		Not Available	CONTROL PANEL COMMERCIAL DRYER
028	314912		Not Available	BRACKET, CONTROL PANEL (WHT)
NI	NLA		Not Available	BACK UP PLATE-ALMOND
"	NLA		Not Available	BACK UP PLATE-HARVEST WHEAT

