


Maytag GDE26CD 01 - FRONT VIEW - CD MODELS

SECTION: FRONT VIEW
MODEL: DE-D626CD

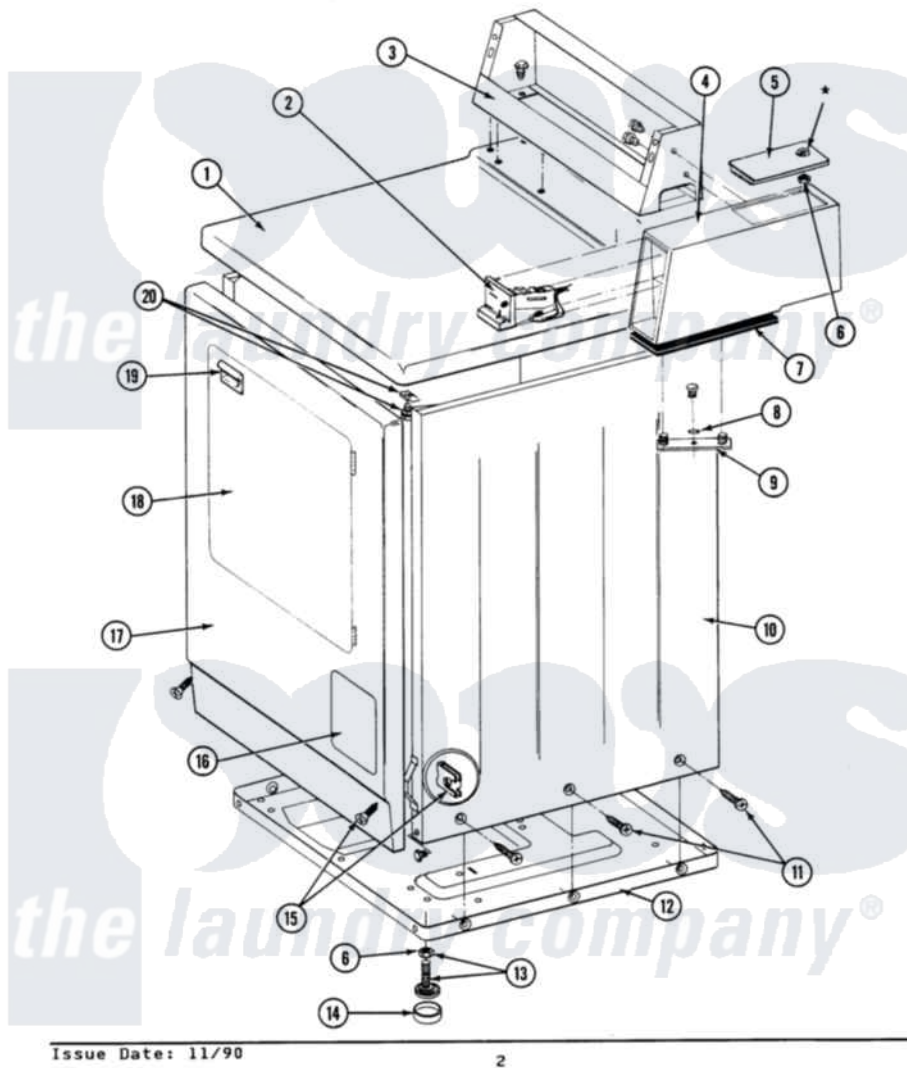

Issue Date: 11/90

2

Maytag [Commercial Maytag GDE26CD Dryer Parts](#) Parts Diagram 01 - FRONT VIEW - CD MODELS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	307105		Not Available	COVER, TOP ASSY. (WHT)
"	NLA		Not Available	(ALM)
002	NLA		Not Available	COIN DROP ASSY.
003	212276	W10116760		Screw
"	NLA		Not Available	CONTROL COVER (WHT)
004	207673	22001407		Case, Coin Slide
"	207673L	22001408		(ALM)
"	NLA		Not Available	(H. WHEAT)
005	203188		Not Available	TIMER ACCESS DOOR (WHT)
"	203188L		Not Available	ACCESS DOOR-ALMOND
"	203188M		Not Available	ACCESS DOOR-HARVEST WHEAT
006	Y052740	62739		Nut, Lock
007	214660			Gasket, Control Center
008	NLA		Not Available	WATER VALVE (WC MODELS 240-50)

009	211294	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	NLA	Not Available	MTG. STRAP----NA
010	NLA	Not Available	CABINET (WHT)
"	Y310632	1163839	Screw
011	213007		Xfor Cabinet See Cabinet, Back
012	Y303361	Not Available	BASE ASSY. (UPPER & LOWER)
013	Y305086		Adjustable Leg And Nut
014	Y314137		Foot, Rubber
015	204439		Screw And Fstner Assembly
016	NLA	Not Available	PART NOT USED
017	NLA	Not Available	PANEL, FRONT (WHT)
018	308061	Not Available	DOOR ASSY. COMPLETE (WHT)
"	NLA	Not Available	(ALM)
019	314946		Handle White
"	314972		Handle Door ALM
"	NLA	Not Available	(H. WHEAT)
020	204445		Screw And Fastener Assembly

